



disklavier™

PRO / Mark IV Series



IMPORTANT NOTICE FOR THE UNITED KINGDOM

Connecting the Plug and Cord

IMPORTANT: The wires in mains lead are coloured in accordance with the following code:

GREEN-AND-YELLOW : EARTH
BLUE : NEUTRAL
BROWN : LIVE


As the colours of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured GREEN and YELLOW must be connected to the terminal in the plug which is marked by the letter E or by the safety earth symbol or coloured GREEN and YELLOW.

The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N or coloured BLACK.

The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L or coloured RED.

Alleen voor klanten in Nederland
Bij dit produkt zijn batterijen
geleverd.
Wanneer deze leeg zijn, moet u
ze niet weggooien maar
inleveren als KCA.

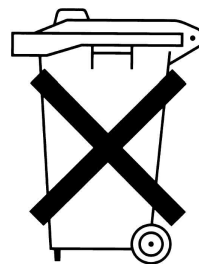

The Control Unit is classified as a Class 1 laser product. One of the labels below or similar is located on the inside of the CD drive unit.

CLASS 1 LASER PRODUCT
LASER KLASSE 1
LUOKAN 1 LASERLAITE
KLASS 1 LASER APPARAT
APAREIL A LASER DE CLASSE 1
EN60825

CLASS 1 LASER PRODUCT
LASER KLASSE 1

Laser Diode Properties

- * Material: GaAlAs
- * Wavelength: 790/795 nm
- * Laser Output Power at the lens of the Laser Pick Up Unit: max. 5mW


CAUTION—Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

ATTENTION—L'utilisation de commandes ou de réglages, ou l'exécution de procédures, autres que celles qui sont spécifiées ici peuvent conduire une exposition des rayonnements dangereux.

VORSICHT—Die Verwendung von Bedienungselementen oder Einstellungen, oder die Anwendung von Verfahren, die nicht in dieser Anleitung angegeben sind, kann zu gefährlicher Freisetzung von Strahlung führen.

SPECIAL MESSAGE SECTION

PRODUCT SAFETY MARKINGS: Yamaha electronic products may have either labels similar to the graphics shown below or molded/stamped facsimiles of these graphics on the enclosure. The explanation of these graphics appears on this page. Please observe all cautions indicated on this page and those indicated on the safety instruction section.

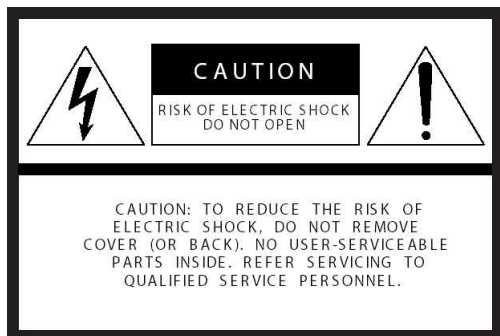

SEE BOTTOM OF ENCLOSURE OR LOWER FRONT PANEL FOR GRAPHIC SYMBOL MARKINGS



The exclamation point within the equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.



The lightning flash with arrowhead symbol within the equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electrical shock.

IMPORTANT NOTICE : All Yamaha electronic products are tested and approved by an independent safety testing laboratory in order that you may be sure that when it is properly installed and used in its normal and customary manner, all foreseeable risks have been eliminated. DO NOT modify this unit or commission others to do so unless specifically authorized by Yamaha. Product performance and/or safety standards may be diminished. Claims filed under the expressed warranty may be denied if the unit is/has been modified. Implied warranties may also be affected.

SPECIFICATIONS SUBJECT TO CHANGE : The information contained in this manual is believed to be correct at the time of printing. However, Yamaha reserves the right to change or modify any of the specifications without notice or obligation to update existing units.

ENVIRONMENTAL ISSUES: Yamaha strives to produce products that are both user safe and environmentally friendly. We sincerely believe that our products and the production methods used to produce them, meet these goals. In keeping with both the letter and the spirit of the law, we want you to be aware of the following:


Battery Notice: This product MAY contain a small nonrechargeable battery which (if applicable) is soldered in place. The average life span of this type of battery is approximately five years. When replacement becomes necessary, contact a qualified service representative to perform the replacement.

Warning: Do not attempt to recharge, disassemble, or incinerate this type of battery. Keep all batteries away from children. Dispose of used batteries promptly and as regulated by applicable laws. Note: In some areas, the servicer is required by law to return the defective parts. However, you do have the option of having the servicer dispose of these parts for you.

Disposal Notice: Should this product become damaged beyond repair, or for some reason its useful life is considered to be at an end, please observe all local, state, and federal regulations that relate to the disposal of products that contain lead, batteries, plastics, etc.

NOTICE : Service charges incurred due to lack of knowledge relating to how a function or effect works (when the unit is operating as designed) are not covered by the manufacturer's warranty, and are therefore the owners responsibility. Please study this manual carefully and consult your dealer before requesting service.

NAME PLATE LOCATION: The graphic below indicates the location of the name plate. The model number, serial number, power requirements, etc., are located on this plate. You should record the model number, serial number, and the date of purchase in the spaces provided below and retain this manual as a permanent record of your purchase.

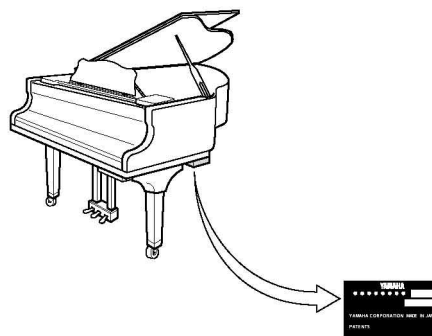

Model _____

Serial No. _____

Purchase Date _____

IMPORTANT SAFETY INSTRUCTIONS

WARNING — When using any electrical or electronic product, basic precautions should always be followed. These precautions include, but are not limited to, the following:

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 15) This product shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
- 16) Do not place this product or any other objects on the power cord or place it in a position where anyone could walk on, trip over, or roll anything over power or connecting cords of any kind. The use of an extension cord is not recommended! If you must use an extension cord, the minimum wire size for a 25' cord (or less) is 18 AWG. NOTE : The smaller the AWG number, the larger the current handling capacity. For longer extension cords, consult a local electrician.
- 17) **WARNING** - To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
- 18) Care should be taken that objects do not fall and liquids are not spilled into the enclosure through any openings that may exist.
- 19) This product, either alone or in combination with an amplifier and headphones or speaker/s, may be capable of producing sound levels that could cause permanent hearing loss. DO NOT operate for a long period of time at a high volume level or at a level that is uncomfortable. If you experience any hearing loss or ringing in the ears, you should consult an audiologist. **IMPORTANT** : The louder the sound, the shorter the time period before damage occurs.
- 20) Some Yamaha products may have benches and/or accessory mounting fixtures that are either supplied as a part of the product or as optional accessories. Some of these items are designed to be dealer assembled or installed. Please make sure that benches are stable and any optional fixtures (where applicable) are well secured BEFORE using. Benches supplied by Yamaha are designed for seating only. No other uses are recommended.
- 21) Do not modify internal AC connection for the I/O Center "DIO-100".
- 22) This product shall be connected to a MAINS socket outlet with a protective earthing connection.
- 23) This product has a power switch for shutting off all system. The switch is located on the Power Supply Unit nearby the entrance of the AC cord. Note that the switch on the I/O Center does not shutdown all system but I/O Center and Media Center only. Pressing the [I] side of the switch turns the I/O Center on and the [O] side off.
- 24) Make sure that the plug of the I/O Center's power cable can easily be disconnected from the AC outlet as a measure of precaution.

Battery

- Use your Pocket Controller "PRC-100" only with "EA-BL08" batteries, the "EA-70" AC adapter.
- Danger of explosion if battery incorrectly replaced. Replace only with the same type.

Outlets for Speakers

- Connect speakers of 2A or less of totals. Do not connect other products except speakers.
- Consult Yamaha service technician when using the outlets outside the purchased area.

PLEASE KEEP THIS MANUAL

STATEMENTS REGARDING THE WIRELESS LAN CARD

RADIATION EXPOSURE STATEMENT

The available scientific evidence does not show that any health problems are associated with using low power wireless devices. There is no proof, however, that these low power wireless devices are absolutely safe. Low power Wireless devices emit low levels of radio frequency energy (RF) in the microwave range while being used. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects might occur, but such findings have not been confirmed by additional research. The WD05740 has been tested and found to comply with the Federal Communications Commission (FCC) guidelines on radio frequency energy (RF) exposures. The maximum SAR levels tested for the WD05740 has been shown to be 0.563W/kg at body.

This device should not be co-located or operated with any other antenna or transmitter.

In addition, use of the equipment other than PDA may not ensure compliance with FCC RF exposure guidelines.

FCC AND INDUSTRY CANADA INFORMATION (U.S.A , CANADA)

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions :

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC WARNING: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Properly shielded and grounded cables and connectors must be used for connection to host computer and/or peripherals in order to meet FCC emission limits.

L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes : (1) il ne doit pas produire de brouillage et (2) l'utilisateur du dispositif doit être prêt à accepter tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre le fonctionnement du dispositif.

The installer of this radio equipment must ensure that the antenna is located or pointed such that it does not emit RF field in excess of Health Canada limits for the general population; consult Safety Code 6, obtainable from Health Canada's website www.hc-sc.gc.ca/rpb

« L'installateur du présent matériel radio doit s'assurer que l'antenne est située ou pointée de manière à ce que cette dernière n'émette pas de champs radioélectriques supérieurs aux limites spécifiées par Santé Canada pour le grand public; consulter le Code de sécurité 6, disponible sur le site Web de Santé Canada, à l'adresse suivante : www.hc-sc.gc.ca/rpb. »



Hereby, Yamaha, declares that this Wireless LAN Card, model WD05740 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

In some regions, there are restrictions in the outdoor use of the Wireless LAN Card.

Yamaha vakuuttaa täten että langaton LAN-kortti, malli WD05740 tyypinen laite on direktiivin 1999/5/EY oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen.

Bij deze verklaart Yamaha dat deze Wireless LAN-kaart, model WD05740 voldoet aan de essentiële eisen en aan de overige relevante bepalingen van Richtlijn 1999/5/EC.

Par la présente, Yamaha déclare que cette carte réseau sans fil, modèle WD05740 est conforme aux exigences essentielles et aux autres dispositions de la directive 1999/5/CE qui lui sont applicables.

Härmed intygar Yamaha att denna trådlösa LAN-kort, modell WD05740 står i överensstämmelse med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 1999/5/EG.

Undertegnede: Yamaha erklærer herved, at følgende udstyr: Trådløst netværkskort, model WD05740 overholder de væsentlige krav og øvrige relevante krav i direktiv 1999/5/EF.

Hiermit erklärt Yamaha, dass sich diese drahtlose LAN-Karte, Modell-WD05740 in Übereinstimmung mit den grundlegenden Anforderungen und den anderen relevanten Vorschriften der Richtlinie 1999/5/EG befindet.

Με την παρούσα, η Yamaha, δηλώνει ότι η ασύρματη κάρτα LAN, μοντέλο WD05740 συμμορφώνεται με τις απαραίτητες απαιτήσεις και τις λοιπές σχετικές διατάξεις της οδηγίας 1999/5/EK.

Con la presente Yamaha dichiara che questa scheda da LAN senza filo, modello WD05740 è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 1999/5/CE.

Por medio de la presente Yamaha declara que la tarjeta de red inalámbrica, el modelo WD05740, cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 1999/5/CE.

Yamaha declara que este cartão Wireless LAN, modelo WD05740 está conforme com os requisitos essenciais e outras disposições da Directiva 1999/5/CE.

In some cases Wireless LAN card type WL1100C-CF may be used in place of Wireless LAN card type WD05740. All statements on this page also apply to the WL1100C-CF.

FOR U.S.A.

COMPLIANCE INFORMATION STATEMENT (DECLARATION OF CONFORMITY PROCEDURE)

Responsible Party : Yamaha Corp of America
Address : 6600 Orangethorpe Avenue, Buena Park, CA 90620 USA
Telephone : 1-714-522-9011
Fax : 1-714-522-9301
Type of Equipment : Pocket Controller/Tablet Controller
Model Name : PRC-100/TRC-100 (TRC-100 is optional)

These devices complies with Part 15 of the FCC Rules.

Operation is subjected to the following conditions;

- 1) this device may not cause harmful interference, and
 - 2) this device must accept any interference received including interference that may cause undesigned operation.
- See user manual instructions if interference to radio reception is suspected.

FCC INFORMATION (U.S.A.)

1. IMPORTANT NOTICE: DO NOT MODIFY THIS UNIT!

This product, when installed as indicated in the instructions contained in this manual, meets FCC requirements. Modifications not expressly approved by Yamaha may void your authority, granted by the FCC, to use the product.

2. IMPORTANT: When connecting this product to accessories and/or another product use only high quality shielded cables. Cable/s supplied with this product MUST be used. Follow all installation instructions. Failure to follow instructions could void your FCC authorization to use to use this product in the USA.

3. NOTE: This product has been tested and found to comply with the requirements listed in FCC Regulations, Part 15 for Class "B" digital devices. Compliance with these requirements provides a reasonable level of assurance that your use of this product in a residential environment will not result in harmful interference with other electronic devices. This requirement generates/ uses radio frequencies and, if not installed and used according to the instructions found in the users manual, may cause interference harmful to the operation of other electronic devices. Compliance with FCC regulations does not guarantee that interference will not occur in all installations. If this product is found to be the source of interference, which can be determined by turning the unit "OFF" and "ON", please try to eliminate the problem by using one of the following measures: Relocate either this product or the device that is being affected by the interference.

Utilize power outlets that are on different branch (circuit breaker or fuse) circuits or install AC line filter/s.

In the case of radio or TV interference, relocate/reorient the antenna. If the antenna lead-in is 300 ohm ribbon lead, change the lead-in to co-axial type cable.

If these corrective measures do not produce satisfactory results, please contact the local retailer authorized to distribute this type of product. If you can not locate the appropriate retailer, please contact Yamaha Corporation of America, Electronic Service Division, 6600 Orangethorpe Ave, Buena Park, CA 90620

FOR U.S.A.

The Pocket Controller and the Tablet Controller contain a small amount of mercury. Disposal of this material may be regulated due to environmental considerations.

For disposal information in the United States, refer to the Electronic Industries Alliance web site: www.eiae.org

This applies only to products distributed by
YAMAHA CORPORATION OF AMERICA.

disklavier™

PRO / Mark IV Series

English

Advanced Operating Manual

Introduction

Congratulations and thank you for purchasing the Disklavier PRO/Mark IV Series Piano.

The Disklavier PRO/Mark IV Series Piano is an exciting new type of grand piano that brings together the excellence of Yamaha's finest acoustic piano and state-of-the-art innovations into an expansive home entertainment station. The new pocket controller offers greater ease of use to allow players of any level to enjoy the exciting functions of the piano from basic keyboard playing to PianoSoft playback entertainment. Let your imagination go, and enjoy the Disklavier to your heart's content.

Here are some examples of how you can enjoy your Disklavier

- Play the acoustic piano or the digital piano
- Play back songs accompanied by live piano performance
- Create a library of favorite songs in the Disklavier
- Practice playing songs using Disklavier's innovative functions
- Play along with professional recordings
- Connect the Disklavier with a computer to compose ensemble songs
- Synchronize piano performance with a video recording

Before using your Disklavier, please read this manual thoroughly and keep it on hand for future reference.

Note on source code distribution

For three years after the factory shipment, you may request from Yamaha the source code for any portions of the product which are licensed under the GNU General Public License by writing to the following address:

1480 Ryoke, Kakegawa, Shizuoka, 436-0038, JAPAN
Piano International Sales Division, YAMAHA Corporation

The source code will be provided at no charge; however, we may require you to reimburse Yamaha for the cost of delivering the source code to you.

The source code download is also available on the following website;

http://www.global.yamaha.com/download/disklavier_markiv/

- Note that we shall bear no responsibility whatsoever for any damage arising from changes (additions/deletions) made to the software for this product by a third party other than Yamaha (or party authorized by Yamaha).
- Note that re-use of source code released to the public domain by Yamaha is unguaranteed, and Yamaha shall not bear any responsibility whatsoever for the source code.

Note on the online document

Additional license information is included in the HDD in the Disklavier system. Connect the LAN port on the I/O Center to your network router, and then open the respective documents in the [Document] folder in the Disklavier's HDD.

Trademarks & Copyrights

- This product is manufactured under license of U.S. Patents No. 5231671, No. 5301259, No. 5428708, and No. 5567901 from IVL Technologies Ltd.
- Yamaha, Disklavier, Silent, PianoSoft, PianoSoft-Plus, PianoSoft-PlusAudio, PianoSmart, and Smart PianoSoft are trademarks of Yamaha Corporation.
- SmartKey, CueTIME, and You Are The Artist are trademarks of Yamaha Corporation or Yamaha Corporation of America.
- Disklavier MarkIV software, Copyright © 2004 YAMAHA CORPORATION.
- This contains programs licensed under the GNU General Public License, GNU Lesser General Public License, the BSD Copyright, the Artistic License, and the others.

Important Precautions

Read the following before operating the Disklavier.

Warning

- Do not locate the Disklavier in a place subject to excessive heat, low temperatures, or direct sunlight. This could be a fire hazard and may damage the finish and internal parts.
- Excessive humidity or dust can lead to fire or electric shock.
- Connect the plug on the Disklavier power cable to a compatible AC outlet. Failure to do so will present a fire and electric shock hazard. If the power cable plug is not compatible with your AC outlet, consult your dealer.
- Do not plug several devices into the same AC outlet. This can overload the AC outlet, and lead to fire and electric shock hazard. It may also affect the performance of some devices.
- Do not place heavy objects on the power cable. A damaged power cable is a potential fire and electric shock hazard. If the power cable runs under a carpet, make sure heavy objects, including the Disklavier, are not placed on top of the cable.
- If the power cable is damaged (i.e. cut or a bare wire is exposed), ask your dealer for a replacement. Using the Disklavier in this condition is a fire and shock hazard.
- When disconnecting the power cable from an AC outlet, always pull by the plug. Never pull the cable. Damaging the cable in this way is a potential fire and electric shock hazard.

- The cover of the unit should be removed only by qualified service technicians.
- Do not place liquid containers such as vases, potted plants, glasses, cosmetic bottles, medicines, etc., on top of the Disklavier.
- Do not try to modify the Disklavier, as this could lead to fire or electric shock hazard.
- When moving the Disklavier to another location, turn off the power, remove the power plug from the AC outlet, and remove all cables connected to external devices.

Cautions

- Turn off all audio devices when connecting to the Disklavier. Refer to the user's guide for each device. Use the correct cables and connect as specified.
- Set the volume level on all the devices to minimum before applying power.
- Do not play the Disklavier at a high volume for extended periods; you may damage your hearing. This is especially important when using headphones. If you think your hearing ability is impaired, consult your doctor.
- If the Disklavier is worked extremely hard — that is, prolonged playback of very “busy” songs — the Disklavier's thermal relay may trip. The thermal relay will automatically reset when the Disklavier has cooled down.
- If you notice any abnormality — such as smoke, odor, or noise — turn off the Disklavier immediately, and remove the power plug from the AC outlet. Consult your dealer for repair.

- If a foreign object or water gets inside the Disklavier turn it off immediately, and remove the power plug from the AC outlet. Consult your dealer.
- If you plan not to use the Disklavier for a long period of time (such as when you are on vacation), disconnect the electrical mains.
- Always remove the power plug from the AC outlet before cleaning the Disklavier. Leaving the power plug connected presents a risk of electric shock.
- Do not use benzene, thinner, cleaning detergent, or a chemical cloth to clean the Disklavier.
- Do not place metal objects with rubber feet on top of the Disklavier. The color and finish of the Disklavier can be damaged.
- Do not place heavy objects on the Disklavier. Doing so can damage the Disklavier.
- Use a soft, dry cloth to clean the Disklavier. However, if you discover a stain, carefully use a soft damp cloth to remove it.

Interference

- The Disklavier uses high-frequency digital circuits that may cause interference to radios and TVs placed close to it. If interference does occur, relocate the affected equipment.

Handling Rechargeable Battery

- Only use the “EA-BL08” rechargeable battery.
- When charging, be sure to use the Pocket Controller only with the “EA-70” AC adaptor.
- Do not dispose of the battery in a fire.
- Also keep the battery away from open flames.
- Never attempt to disassemble the battery pack.
- Do not short-circuit the terminals as they will become very hot and will damage the battery.
- Do not drop or subject the battery to shock.
- After storing the battery for a long period of time, be sure to charge the battery completely prior to use.
- Charge the battery properly, according to the details described in this manual.
- Fluid from a leaking battery accidentally entering an eye could result in serious injury. Should this occur, wash with clean water and immediately consult a doctor.
- Should fluid from a leaking battery come into contact with your skin or clothes, immediately wash with clean water.

Please keep this manual for future reference.

Table of Contents

CHAPTER 1

Getting Started 1

Items Supplied with the Disklavier	1
Names of Parts and Their Functions	1
Setting Up the Disklavier	11
Preparing the Pocket Controller	15
Initial Settings of the Pocket Controller	16
Basic Precautions for Using Floppy Disks and CDs	19
Available File Format and Structure of Data in the Removable Media	20

CHAPTER 2

Song Playback Features 22

Changing the Playback Tempo	22
Playing Back Songs in a Different Key (Transposition)	22
Repeating Song Playback	23
Repeating a Specific Section of a Song (A-B Repeat)	23
Playing Back Only the Desired Piano Part	24
Adjusting the Volume Balance among the Keyboard Playing, Ensemble Sound, Software Playback, and Microphone's Input	25
Utilizing the Play Lists	25
Temporarily Changing the Voice of a Track	26
Editing Tracks	28
Checking and Modifying the Song Information	31
Presetting Playback Control Options for Each Song	34
SmartKey™ Playback	35
Adding Disklavier Accompaniment to Commercial CD Songs (PianoSmart)	36
Video Synchronized Playback	36

CHAPTER 3

Piano Playing Features 37

Playing the Disklavier along with the Internal Metronome	37
Playing the Disklavier Accompanied by the Additional Voice(s) (Performance Mode)	37
Adding Expressive Effect to Your Play	38
Adding Chords to a Melody Line (Harmony Mode)	39
Applying Reverb Effects to the Digital Piano	40

CHAPTER 4

Recording 41

Recording a New Song	41
Quick Recording	42
Titling a Song at the Start of Recording	42
Recording the Left- and Right-Hand Parts Separately (Overwrite Recording)	42
Video Synchronized Recording	43
CD Synchronized Recording	45
Recording Ensemble Parts	45
Overdubbing an Existing Part	47
Recording Songs Based on Measures and Beats (Metronome Mode Recording)	48
Quantize Function	49
Changing the Default Tempo	50

CHAPTER 5

Creating a Song Library 51

Creating an Album in the Library	51
Renaming an Album	52
Making Copies of Songs or Albums	52
Making Copies of the Entire Contents in a Medium or Song Library	53
Deleting Songs or Albums	54
Rearranging the Order of Songs/Albums	54

CHAPTER 6

Other Settings 55

Skipping the Blank Part at the Beginning of a Song	55
Inactivating the Key Movement During Playback	55
Using Timer Play	55
Tuning the Tone Generator (MasterTune)	57
Applying an Effect to Your Voice (Vocal Harmony)	57
Preparing for Use of Foot Controls/Switches	59
Hooking Up AV Equipment	61
Setting Up the Disklavier for Audio Data Reception/Transmission	61
Lyric Screen	62
Converting MIDI Data to a Standard Form (Strip XP)	63
Making Backups and Restoring the Song Library	64
Restoring the Contents in the Demo Album	65
Making an Install Floppy Disk	65
Formatting a Floppy Disk	65
Resetting the Disklavier	66
Assigning a Specific Function to the ONE TOUCH Button	66
Diagnosing the Disklavier	66
Piano Voice List	67
Ensemble Part Playback Voice List	68
Drum Voice List	76
Vocal Harmony Type List	76

CHAPTER 7

**Enhancing the Disklavier
Features by Hooking Up a MIDI
Device 78**

Hooking Up a MIDI Device	78
Setting Up the Disklavier for MIDI Data Reception (MIDI IN)	79
Setting Up the Disklavier for MIDI Data Transmission (MIDI OUT)	80
Setting Up the Disklavier for Keyboard Playing Data Transmission (KBD OUT)	81

CHAPTER 8

Troubleshooting 82

CHAPTER 9

Error Messages 84

CHAPTER 10

Screen Transition Diagrams 85

CHAPTER 11

Glossary 91

CHAPTER 12

Specifications 93**Appendix A-1**

Getting Started

Items Supplied with the Disklavier

Make sure the following items are supplied with your Disklavier:


- Media Center (1)
- Installation kit for the Media Center (1 set)
- Monitor speaker (2)*
- Installation kit for the monitor speaker (1 set)*
- Speaker cord (2)*
- Pocket Controller PRC-100 (1)
- CF wireless LAN card (2)**
- Rechargeable battery EA-BL08 (1)
- Cradle (1)
- AC adaptor EA-70 (1)
- AC power cord (1)
- Advanced Operating manual (this book) (1)
- Quick Guide (1)
- Stereo headphones (1 set)

* Supplied only with the Mark IV Series.

**One of two cards is attached to the I/O Center at the factory.

Names of Parts and Their Functions

Media Center

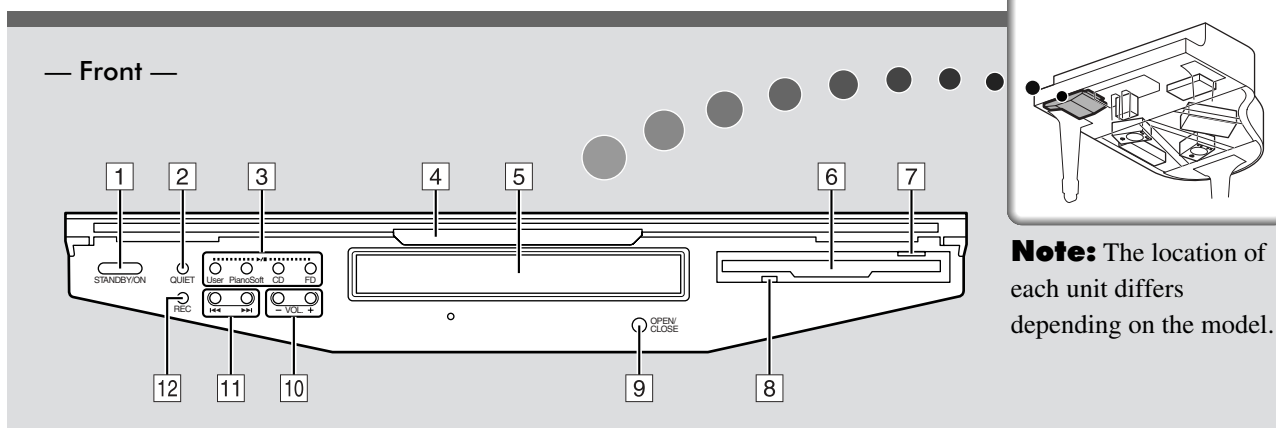

Note: The location of each unit differs depending on the model.

1 STANDBY/ON button

Pressing the button turns the Disklavier on or puts it in Standby mode.

Holding down the button shuts down the Disklavier.

2 QUIET button

Activates the Quiet Mode.

3 Source Select buttons

Starts or stops playback of the songs stored in the corresponding library/medium.

User: Selects the User Library.

PianoSoft: Selects the PianoSoft Library.

CD: Selects the loaded CD.

FD: Selects the loaded floppy disk.

4 Front lid

Draw and swing down to cover the front panel.


5 CD tray

→ pg. 20 "Loading a CD"


6 Floppy disk drive

→ pg. 20 "Loading and Ejecting a Floppy Disk"

- 7 **Eject button**
Ejects the loaded floppy disk.
- 8 **Access lamp**
Lights while the system is reading/writing data on the floppy disk.
- 9 **OPEN/CLOSE button**
Opens and closes the CD tray.
- 10 **VOL -/+ (volume) buttons**
Adjusts the overall volume.
- 11 **◀◀/▶▶ (Song Select, Fast Reverse/Fast Forward) buttons**
Pressing the button selects a song.
Holding down the button fast reverses/forwards.
- 12 **REC button**
Set the Disklavier in Record Standby mode.

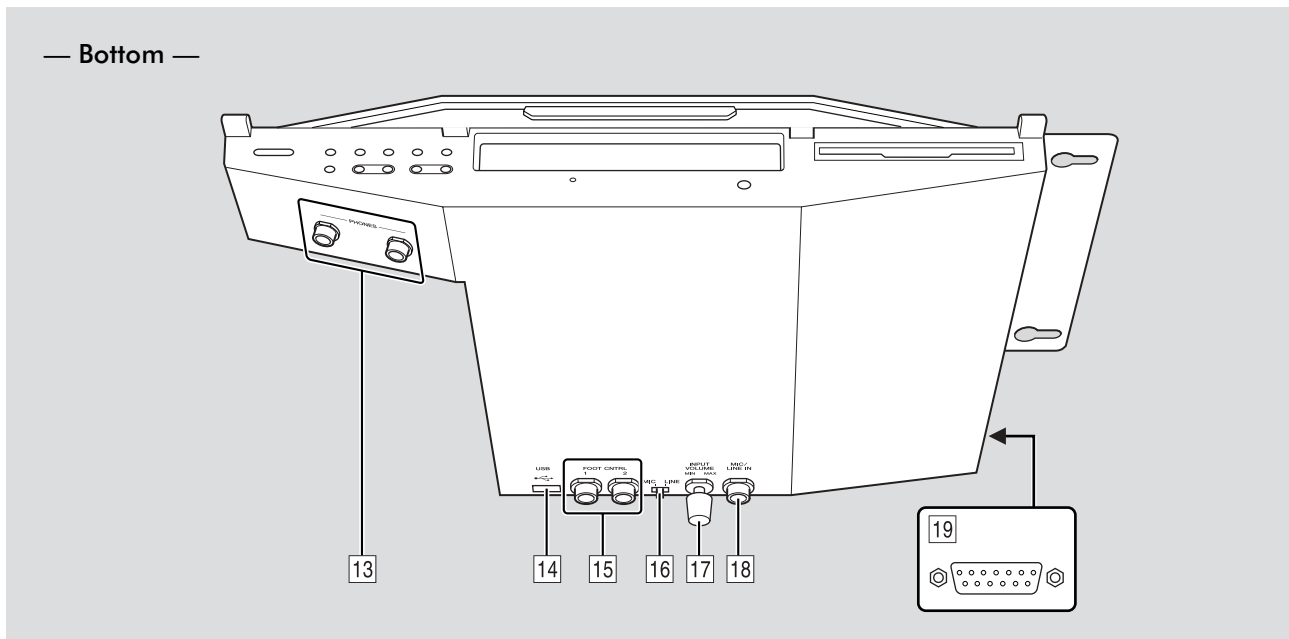


- 13 **PHONES jacks**
Accept headphones.
- 14 **USB (type A) port**
Accepts a USB flash memory, etc.
- 15 **FOOT CNTRL1/2 jacks**
Accepts foot controls/switches. (→ pg. 59)
- 16 **MIC/LINE switch**
Switches the input sensitivity of the MIC/LINE IN jack.
MIC: Select this when you connect a microphone to the MIC/LINE IN jack.
LINE: Select this when you connect an external audio equipment to the MIC/LINE IN jack.
- 17 **INPUT VOLUME knob**
Adjusts the input volume.
- 18 **MIC/LINE IN jack**
Accepts a microphone.
- 19 **To I/O Center port**
Accepts the cable from the I/O Center.

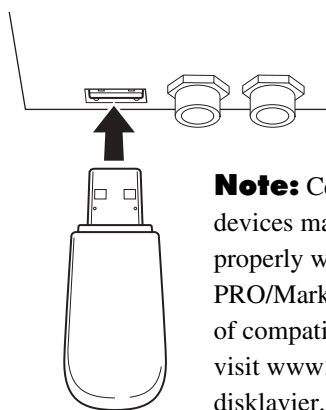

Note: Certain USB storage devices may not function properly with the Disklavier PRO/Mark IV Series. For a list of compatible products, please visit www.yamaha.com/disklavier.

Note: Although the chassis of the Media Center may become hot when you use the Disklavier for a long period of time, this is not a malfunction.

I/O Center

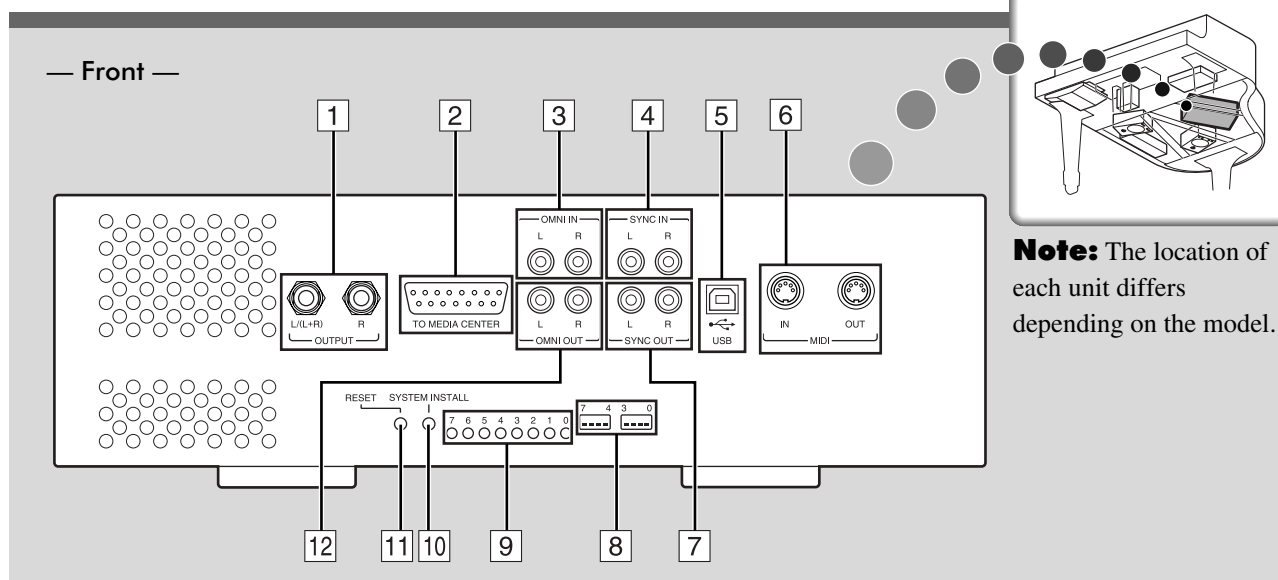


Note: The location of each unit differs depending on the model.

- | | |
|---|--|
| <p>1 OUTPUT jacks
 L/(L+R): Accepts speaker cord from the left Monitor speaker*.
 R: Accepts speaker cord from the right Monitor speaker*.</p> <p>2 TO MEDIA CENTER port
 Accepts the cable from the Media Center.</p> <p>3 OMNI IN (L/R) Multi-purpose input jacks
 Accept the RCA cords from the audio output of an external CD player, etc.</p> <p>4 SYNC IN (L/R) input jacks
 Accept the RCA cords from the audio output of a camcorder.</p> <p>5 USB (type B) port
 Accept the USB cable from a computer.</p> <p>6 MIDI (IN/OUT) terminals
 Accept the MIDI cable from the input/output of a MIDI device.</p> | <p>7 SYNC OUT (L/R) jacks
 Accept the RCA cords from the microphone/line input of a camcorder.</p> <p>8 Dip switches
 For service use.</p> <p>9 LED indicators
 For service use.</p> <p>10 SYSTEM INSTALL button
 For service use.</p> <p>11 RESET button
 For service use.</p> <p>12 OMNI OUT (L/R) Multi-purpose output jacks
 Accept the RCA cords from the audio input of an AV amplifier.</p> |
|---|--|

* Supplied only with the Mark IV Series.

— Left side —

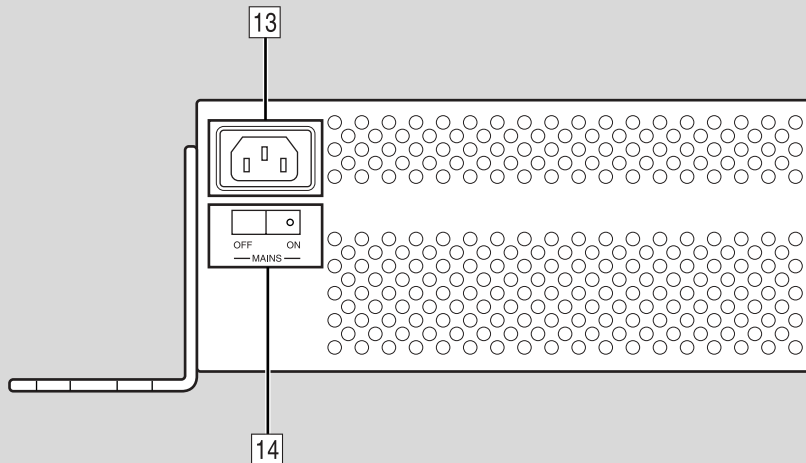
**13 AC inlet**

Accepts the power cable from the Power Supply unit.

14 MAINS switch

Turns the I/O Center on/off.

— Right side —

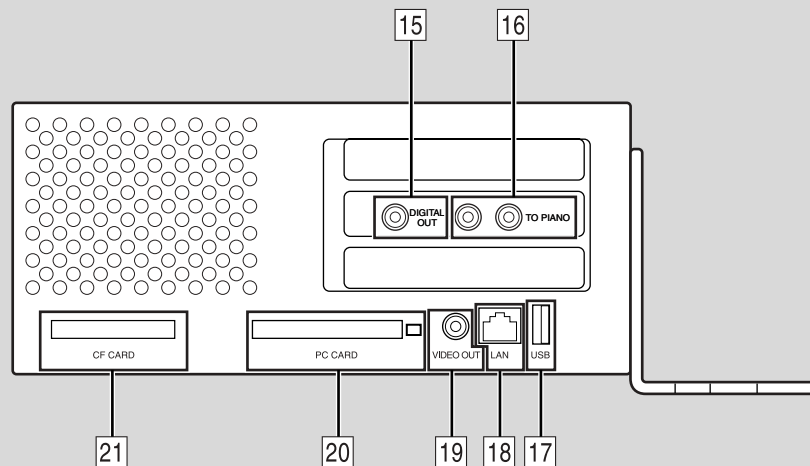**15 DIGITAL OUT jack**

Accepts the coaxial cable from the digital audio input of an AV amplifier or mixer, etc.

16 TO PIANO jacks

Accept the cords from the Central Signal Processor.

17 USB (Type A) port

For future use.

18 LAN (RJ 45) port

Accepts the LAN cable from a personal computer.

19 VIDEO OUT jack

Accepts the video cable from composite video input of a TV.


20 PC CARD (PCMCIA type II) slot

For future use.

21 CF CARD (PCI) slot

The supplied CF wireless LAN card is attached to this slot at the factory.

Central Signal Processor

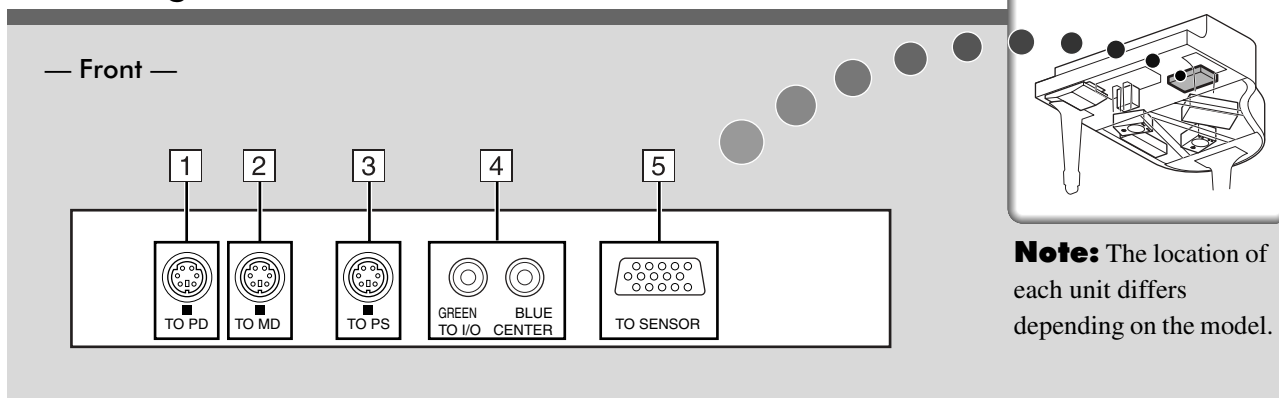

1 TO PD terminal

Accepts the power cord from the Pedal Drive (PD) unit.

2 TO MD terminal

Accepts the power cord from the Motor Drive (MD) unit.

3 TO PS terminal

Accepts the power cord from the Power Supply (PS) unit.


4 TO I/O CENTER (GREEN/BLUE) jacks

Accept the cords from the I/O Center.

5 TO SENSOR port

Accepts the cable from the Disklavier.

Power Supply Unit

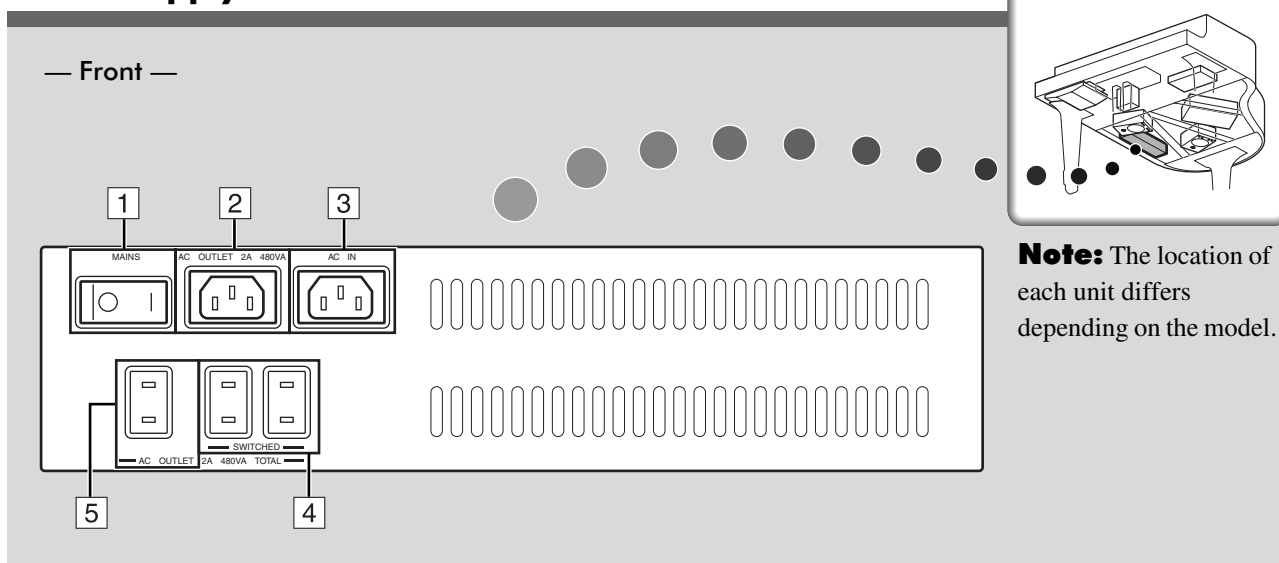

1 MAINS switch

Turns the Power Supply unit on/off.

2 AC OUTLET

Accepts the power cable from the I/O Center.

3 AC IN

Accepts the power cable from an AC outlet.


4 AC OUTLET SWITCHED

Accepts the Monitor speakers' AC power cables.

5 AC OUTLET (unswitched)

Accepts the AC power cord of the cradle's AC power adaptor.

— Right side —

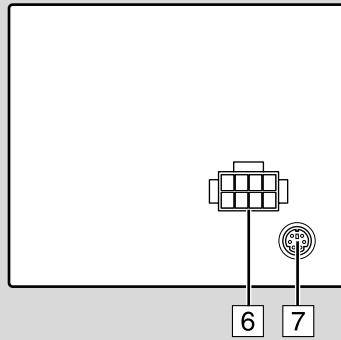

6 TO DRIVE terminal


Accepts the power cord from the Key Drive (KD) unit.

7 TO CSP terminal

Accepts the power cable from the Central Signal Processor (CSP).

Pocket Controller

— Front —

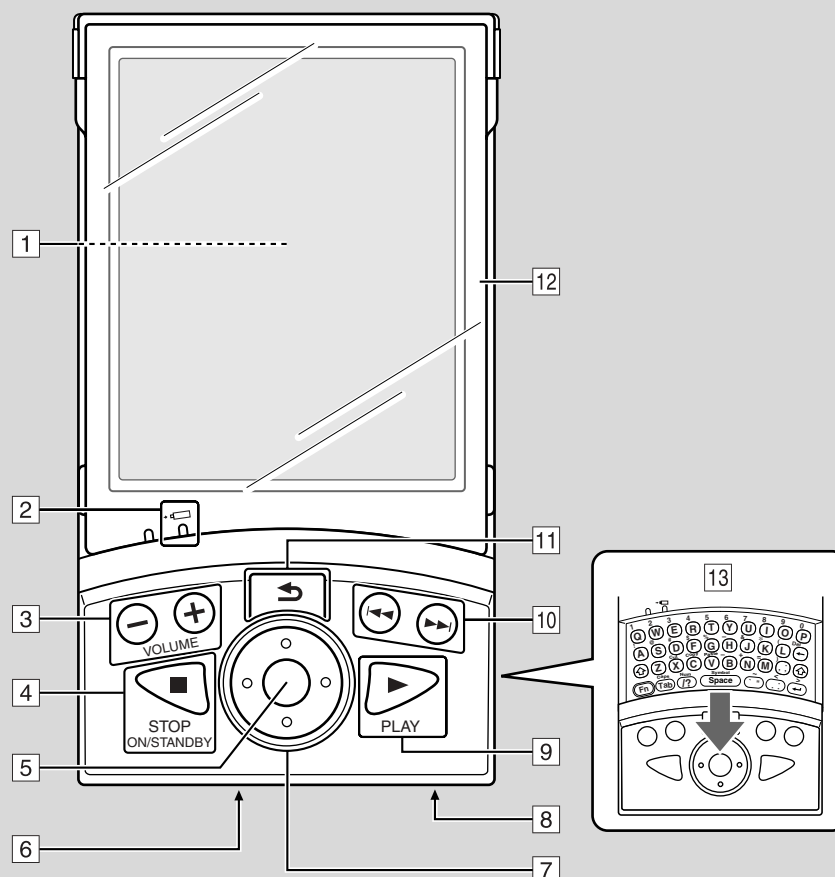

1 Touch screen

→ pg. 3 “Tapping with the stylus pen” in “Quick Guide”.

2 Charge indicator (amber)

Lights up when the Pocket Controller is being charged. The indicator goes out when charging is completed.

3 VOLUME –/+ buttons

Adjust the overall volume.

4 ■ STOP, ON/STANDBY button

Stops playback, and turns the Pocket Controller on/off.

5 Select button

Executes the selected operation.

6 I/O port

Accepts the terminal on the cradle.

7 Cursor buttons

Selects the item on the touch screen or move the slider on a control bar.

8 AC adapter jack

Accepts the AC adaptor.

9 ► PLAY button

Starts playback.

10 ◀◀/▶▶ (Song Select, Fast Reverse/Fast Forward) buttons

Pressing the button selects a song.

Holding down the button fast reverses/forwards.

11 ↶ (Back) button

Returns to the previous screen.


12 Screen protector

Open or remove the protector when you tap on the touch screen. To remove the screen protector, lift it up and fold it back until it comes off.

13 Keyboard


Enters characters. (→ pg. 33 “Entering Characters”)

— Rear —

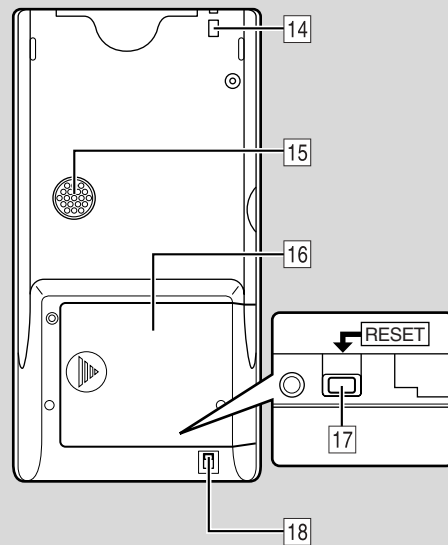


- | | |
|--|--|
| <p>14 Security eyelet
Accepts an anti-theft cord.</p> <p>15 Speaker</p> <p>16 Battery compartment lid</p> | <p>17 RESET button (located inside of the battery compartment lid)
Resets the Pocket Controller.</p> <p>18 Battery replacement switch
(→ pg. 15 “Preparing the Pocket Controller”)</p> |
|--|--|

— Top/Left side —

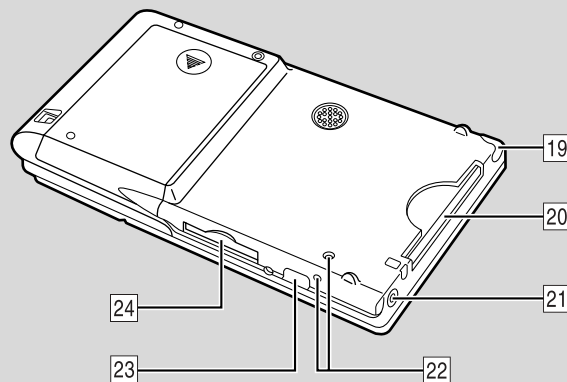

- | | |
|--|---|
| <p>19 Stylus pen
For operating the touch screen.</p> <p>20 CF card slot
Holds the CF wireless LAN card.</p> <p>21 Stereo headphone jack
For future use.</p> | <p>22 Microphone</p> <p>23 IR port
For future use.</p> <p>24 SD card slot
Holds the SD card.</p> |
|--|---|

Cradle


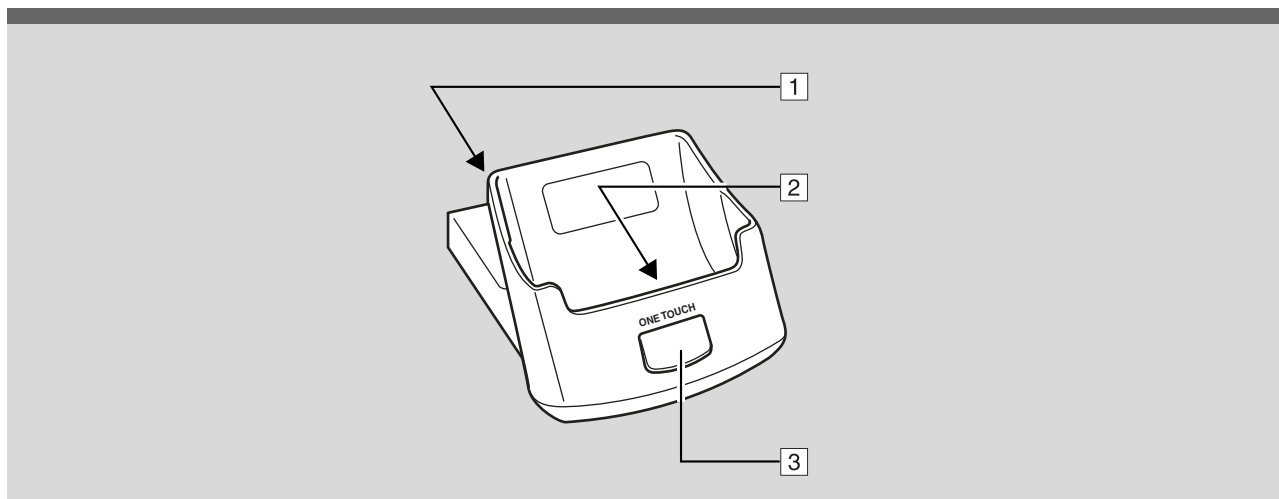


- 1 **AC adaptor jack**
Accepts the AC adaptor.
- 2 **I/O port**
Accepts the I/O port on the Pocket Controller.
- 3 **ONE TOUCH button**
(→ pg. 66 “Assigning a Specific Function to the ONE TOUCH Button”)

Monitor Speakers*

* Supplied only with the Mark IV Series.

— Front —

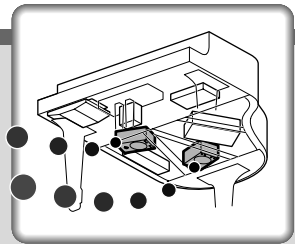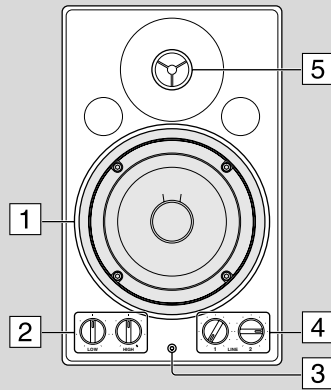

Note: The location of each unit differs depending on the model.

1 **Woofer unit**

2 **LOW/HIGH volume controls**

Adjust the base/treble sound volume.

3 **Power indicator**

Lights up while the speaker is turned on.


4 **LINE1/2 volume controls**

Adjust the sound volume for each line input.

Note: For normal use, turn down the LINE1 volume completely, and turn up the LINE2 volume at the three o'clock position.

5 **Tweeter unit**

— Rear —

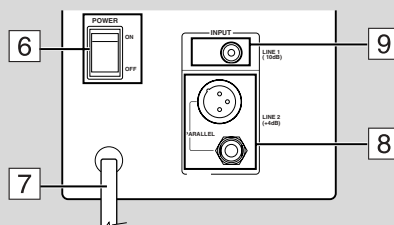

6 **POWER switch**

Turns the monitor speaker on/off.

7 **AC power cable**

8 **INPUT LINE2 (XLR connector/phone jack)**

Accepts the line output from the I/O Center or external AV equipment.


9 **INPUT LINE1 (RCA jack)**

Accepts the line output from external AV equipment.


Setting Up the Disklavier

Installing the Media Center

- 1 Screw the supplied screws into the nuts.

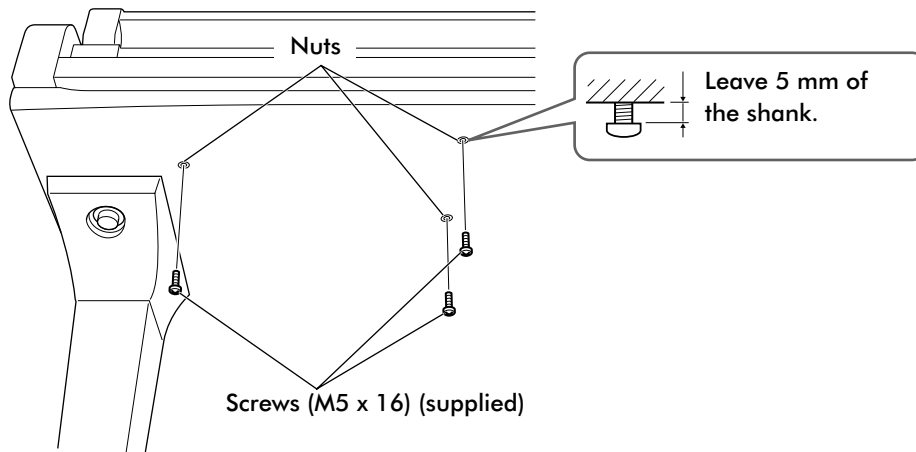

- 2 Hang the Media Center.

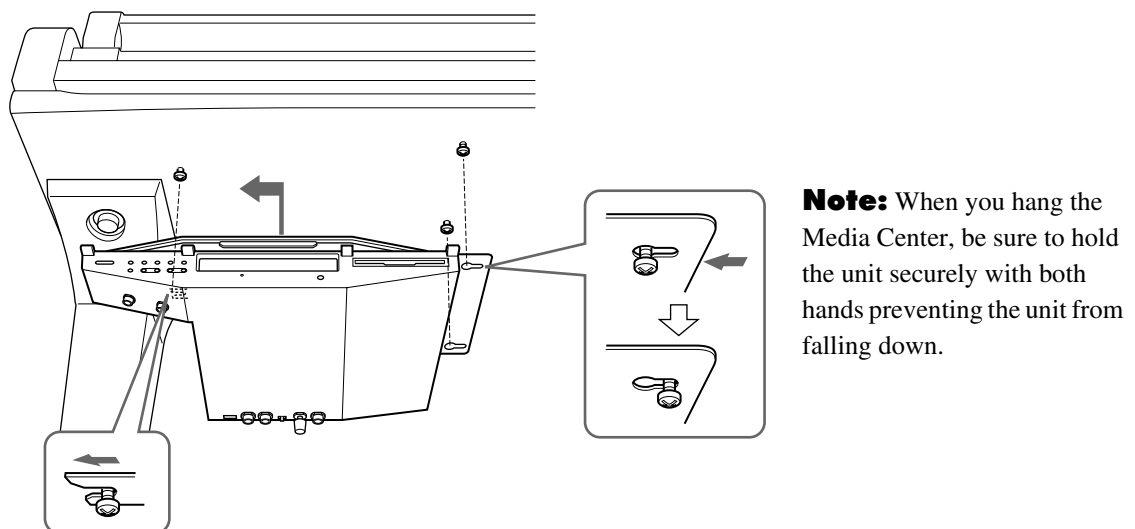


- 3 Tighten the screws to secure the Media Center.


Installing the Monitor Speaker (for the Mark IV Series only)

1 Attach the hanger to the bottom.

Slant installation

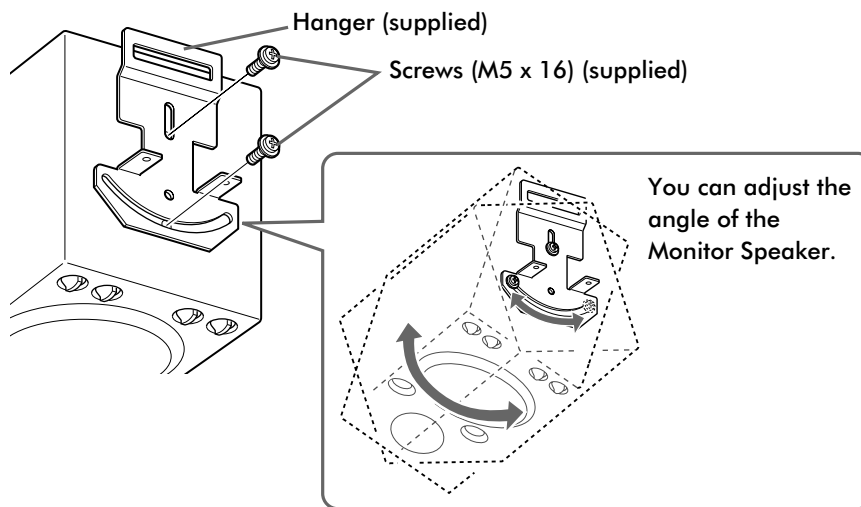


Horizontal installation

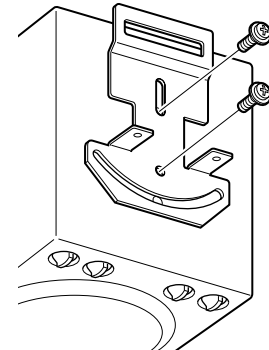


2 Connect the speaker cord to the INPUT LINE2 phone jack. (→ pg. 13 "Wiring the Disklavier")

3 Hang the Monitor Speaker to the bracket.

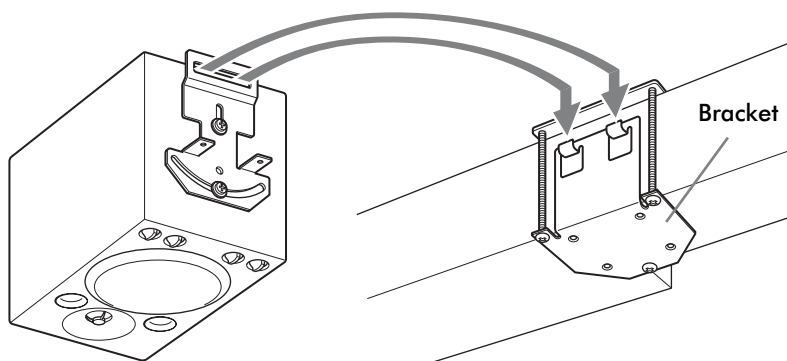


Note: When you hang the Monitor Speaker, be sure to hold the unit securely with both hands preventing the unit from falling down.

4 Screw the thumbscrews to secure the Monitor Speaker.

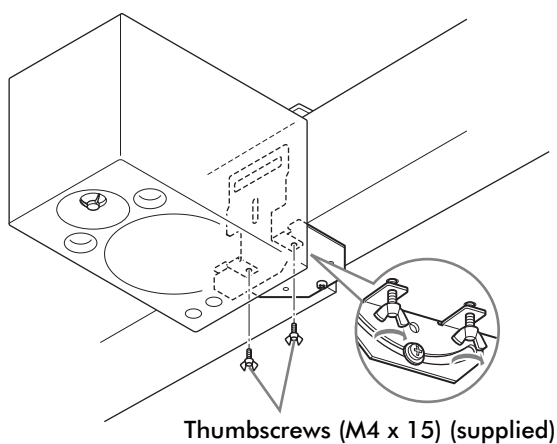


Wiring the Disklavier

Note: The location of each unit differs depending on the model.


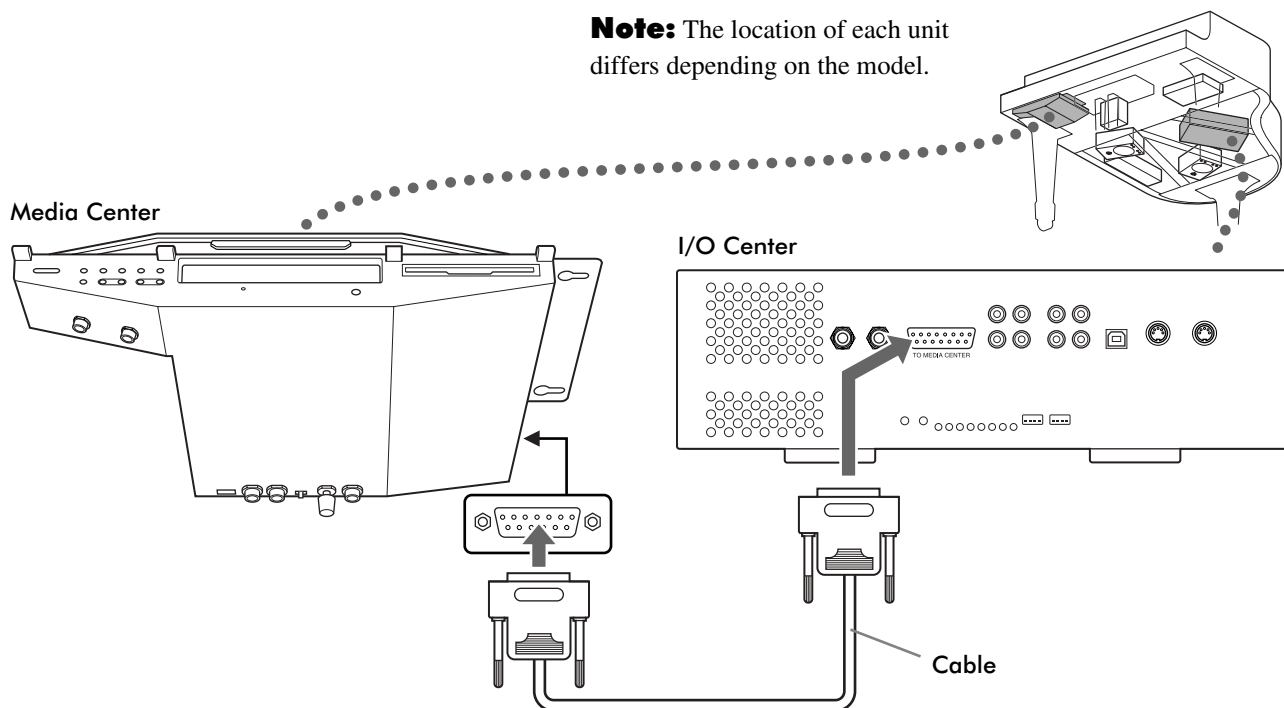


Power Supply unit

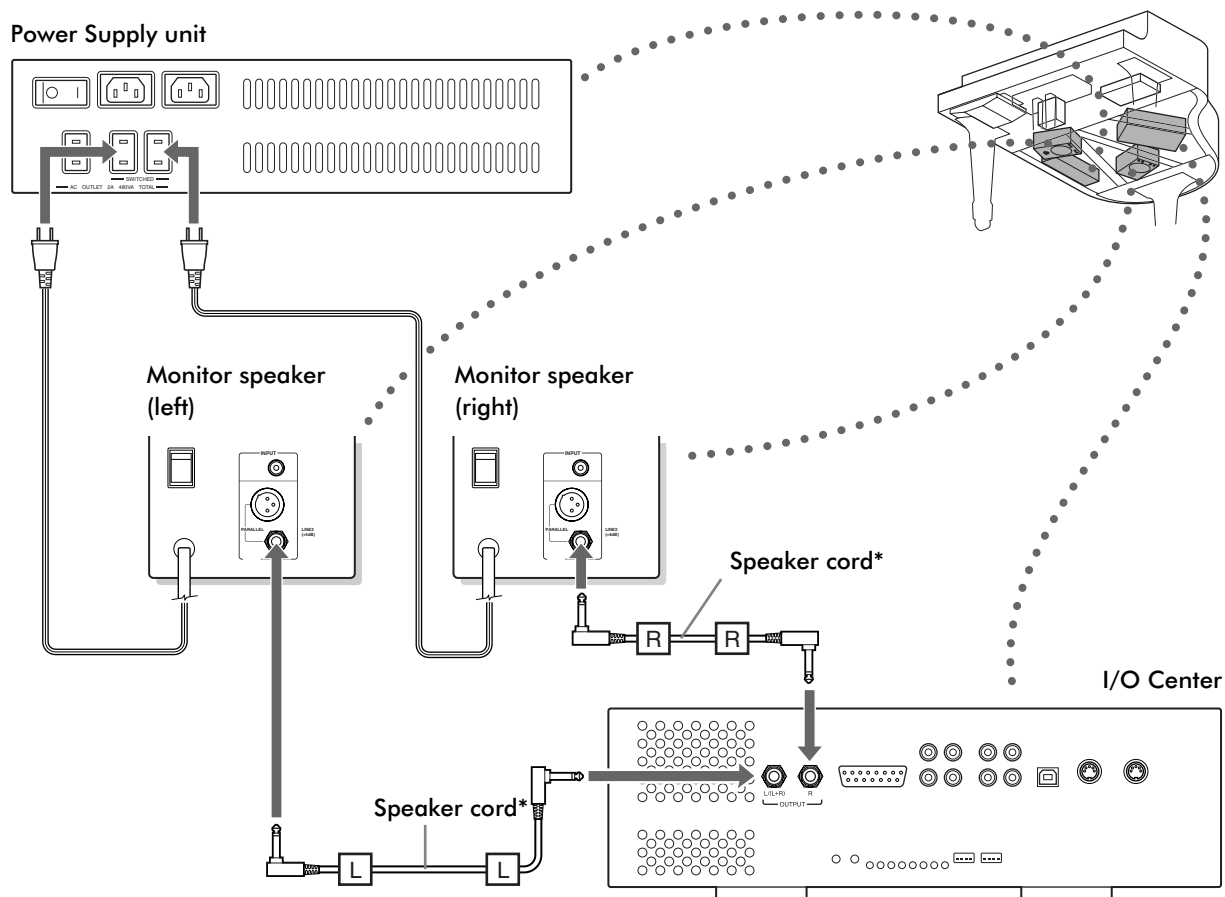

Note: Monitor speakers are supplied only with the Mark IV Series.

* When you replace the speaker cord, prepare the cord equivalent to the supplied one that has L-shaped phone jacks at both ends.

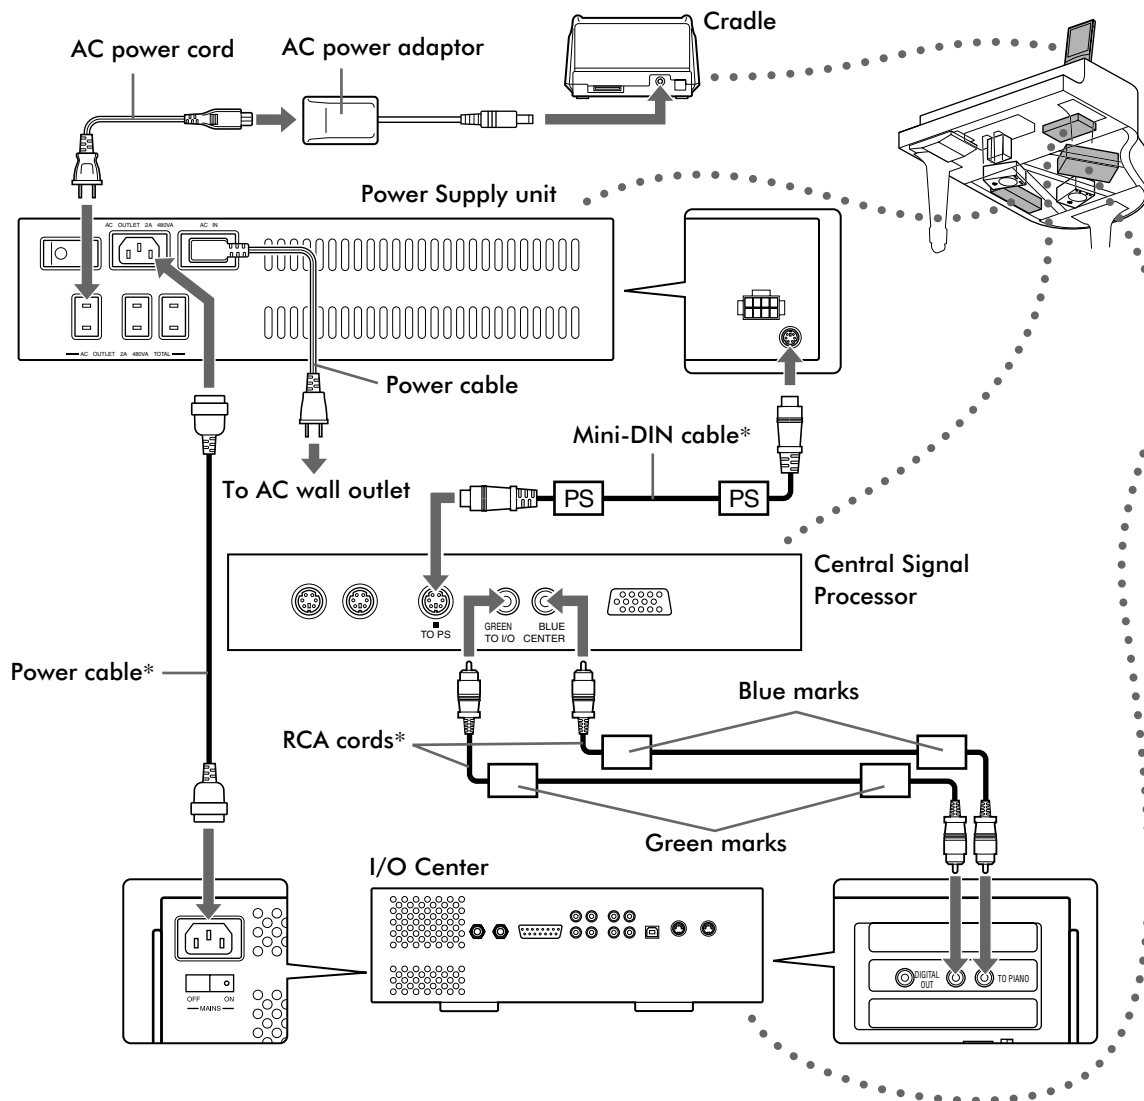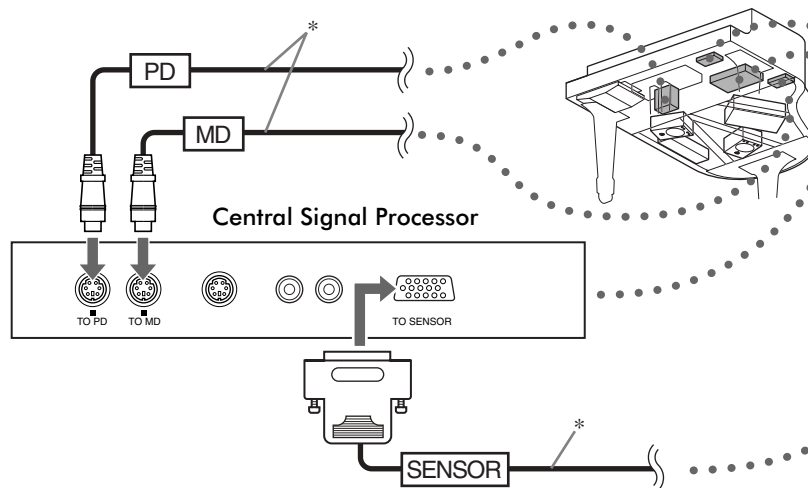


Note: Be sure to connect the Power Supply unit's power cable to an AC wall outlet after all other connections are done.


* These cords/cables are hooked up at the factory.

Preparing the Pocket Controller

- 1 Remove the card slot protector, and then insert the supplied CF wireless LAN card into the CF card slot.

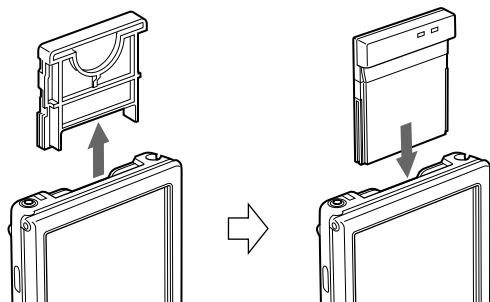


- 2 Set the battery replacement switch to the [REPLACE BATTERY] position.

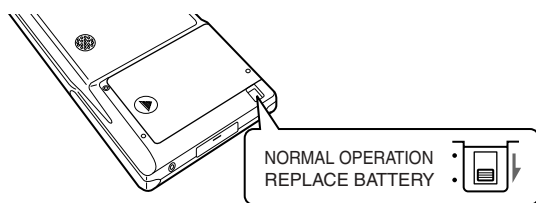


- 3 Put the rechargeable battery into the battery compartment.

Make sure that the ◀, ⊖ and ⊕ marks on the battery are aligned correctly with those printed inside the battery compartment.

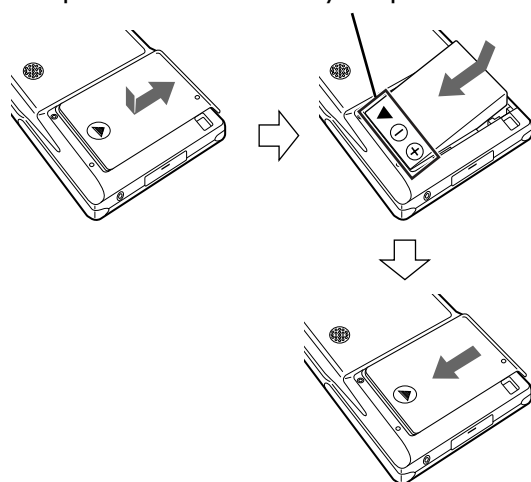

- 4 Set the battery replacement switch back to the [NORMAL OPERATION] position.


- 5 Remove the I/O port cover, and then set the Pocket Controller on the cradle.

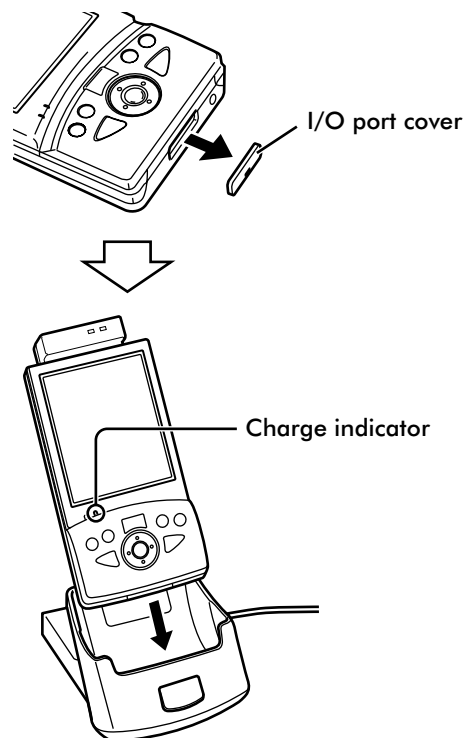

Charging starts and the charge indicator lights amber. When the battery is fully charged, the indicator goes out.

Initial Settings of the Pocket Controller

The following functions are available to control the Disklavier remotely. Set up a variety of useful functions to your preference.

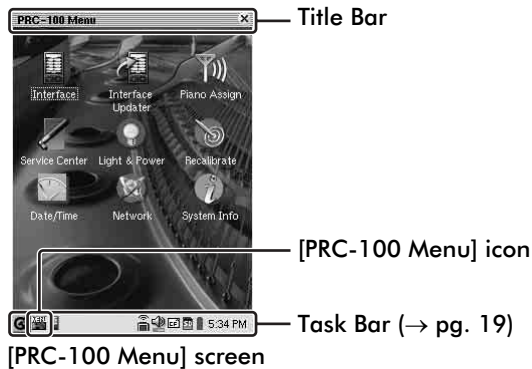

Tip: Tap on ([PRC-100 Menu] icon) to return to the [PRC-100 Menu] screen.

[Interface]: Usually utilize this function to control the Disklavier remotely. The [Main] screen is the top menu of this function. (→ pg. 12 in “Quick Guide”)

[Interface Updater]*: Updates the [Interface].

[Piano Assign]*: (→ pg. 18 “Pairing the Pocket Controller and the Disklavier”)

[Service Center]*: (→ pg. 66 “Diagnosing the Disklavier”)

[Light & Power]*: Makes energy conserving settings.

[Recalibrate]: (See “Calibrating the Touch Screen” below.)

[Date/Time]: (See “Setting up the Current Date and Time” below.)

[Network]*: Lists available network services.


[System Info]*: Shows system information (memory, storage, version).

* For normal use, modification of these setups are not required.

Calibrating the Touch Screen

The following procedure calibrates the touch screen to improve the accuracy of the tapping operation.


Tap on [Recalibrate] in the [PRC-100 Menu] screen, and then firmly tap on the cross hairs that appear in sequence one by one.

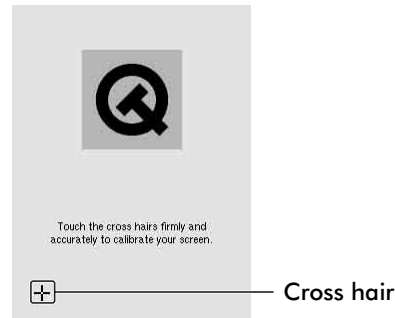

When the recalibration is completed, the [PRC-100 Menu] screen resumes.

Setting up the Current Date and Time


1 Tap on [Date/Time] in the [PRC-100 Menu] screen.

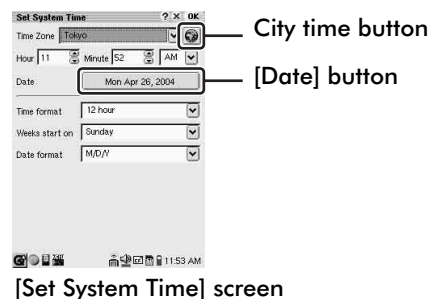



2 Tap on [Time Zone] , and then on your time zone in the drop down list.

Note: If your time zone does not appear in the drop down list, add the zone to the list by following the procedure in “Adding Your City to the [Time Zone] Drop Down List” on page 17, and then repeat step **2**.


Continue to next page...


3 Tap on [Hour]/[Minutes]  to set the time.

4 Tap on [Time format] , and then select the desired format.

5 Tap on , and then on [AM] or [PM], if necessary.

6 Tap on the [Date] button, and then tap on current date on the mini-calendar that appears.


7 Tap on [Weeks start on] , and then tap on [Sunday] or [Monday] that is to be shown as the first day of the week in the mini-calendar.

8 Tap on [Date format] , and then on the desired format.

9 Tap on **OK** on the title bar.
The [PRC-100 Menu] screen resumes.


10 Reboot the Pocket Controller.
(→ “Rebooting the Pocket Controller” below)

Adding Your City to the [Time Zone] Drop Down List

1 Tap on .




2 Tap on the time zone to be replaced with your desired city.

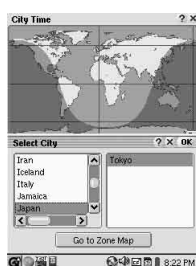


3 Tap on your country, and then on your city in the list.

4 Tap on **OK** on the “Select City” title bar.

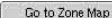To correct the city selection, tap on , and then perform step **2** thru **4** again.

Rebooting the Pocket Controller

When a problem occurs, first see the “Troubleshooting” on page 82. If the problem persist, follow the procedure below.

1 Tap on  on the task bar.



2 Tap on [Reboot] on the menu that appears.



3 Tap on .


The [Main] screen appears after approximately three minutes.

4 Reset the Pocket Controller.
(→ pg. 18 “Resetting the Pocket Controller”)


Resetting the Pocket Controller


When rebooting cannot be performed or the Pocket Controller does not work correctly even after rebooting, follow the procedure below.

- 1 Turn the Disklavier off.
(→ pg. 6 “Turning the Disklavier Off (Standby Mode)” in “Quick Guide”)
- 2 Connect the AC adapter to the AC adaptor jack, and then set the battery replacement switch to the [REPLACE BATTERY] position.

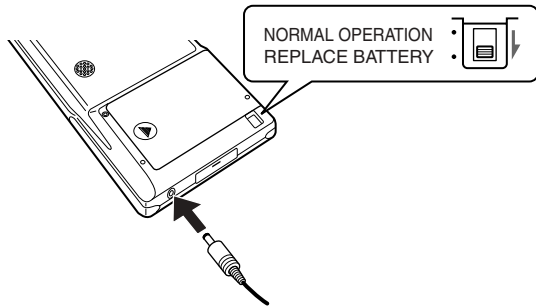


- 3 Wait for five seconds, remove the battery compartment lid, and then press the [RESET] button with the stylus pen.

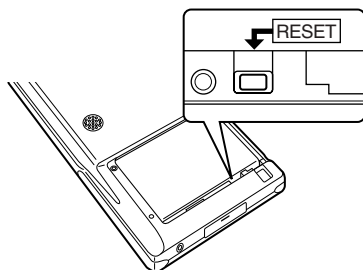


- 4 Replace the battery compartment lid, and then set the battery replacement switch back to the [NORMAL OPERATION] position.
- 5 Press  to turn the Pocket Controller on. The [Main] screen appears after approximately two minutes.


Pairing the Pocket Controller and the Disklavier

For normal use, this setup is not required.



- 1 Make sure that other wireless equipment is turned off.
- 2 Tap on  [Piano Assign] in the [PRC-100 Menu] screen.

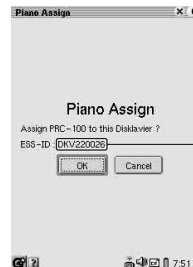

- 3 Move the Pocket Controller close to the Disklavier, and then tap on .



ESS-ID number








- 4 Tap on .
- 5 Tap on  on the [Assigned successfully] screen. The [PRC-100 Menu] screen resumes.

Note: Do NOT abort the procedure before step 4. Otherwise you cannot control the Disklavier.

Continue to next page...

Description of the Task Bar

The task bar is always displayed at the bottom of the screen to show various information and status of the Pocket Controller. Tapping on the icon shows the respective setup screen, etc.

-  : Shows the function menus such as [Reboot], etc.
-  : Shows the wireless connection status.
Blue: Excellent
Green: Good
Yellow: Average
Red: Poor
-  : No connection (Tap to show the detailed Network screen.)
-  : Shows the volume of the Pocket Controller itself. (Tap on it, and then move the slider up or down to adjust the volume.)
-  : Tap on it, and then on [Eject card] before you remove the CF card.
-  : Tap on it, and then on [Eject SD-card] before you remove the SD card.
-  : Shows the battery status.
Blue: Good
Yellow: Low
Red: Very low
Green: Charging
- 1:46 PM** : Shows the current time. (Tap on it to open the [Set System Time] screen.)

Basic Precautions for Using Floppy Disks and CDs


Handling Floppy Disks

In order to protect data stored on floppy disks from damage or loss, be sure to handle them with care, and observe the following precautions.

- Do not touch the surface of the internal disk.
- Do not store or place disks near a television, radio, loudspeaker, or any other device that generates a magnetic field.
- Do not expose disks to extreme temperature or humidity. The working temperature range for disks is between 4°C and 52°C (40°F and 125°F).
- Do not use disks in a dusty, dirty, or smoky environment.
- Remove the disk from the floppy disk drive before turning the Disklavier off.

Write Protection

Floppy disks have a write protection tab to keep from accidentally formatting the disk or erasing files.

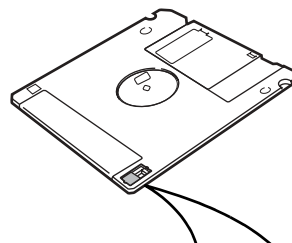


Protected



The tab window is open.

 Unprotected

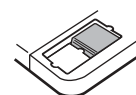


The tab window is closed.

Loading and Ejecting a Floppy Disk

Loading


Push the disk until it clicks into place.

Floppy disk drive on the Media Center

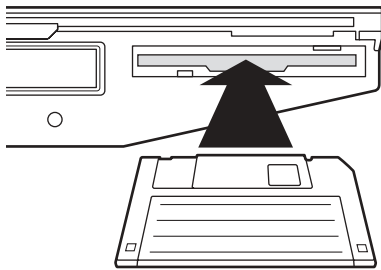

Ejecting

Press the eject button on the Media Center.

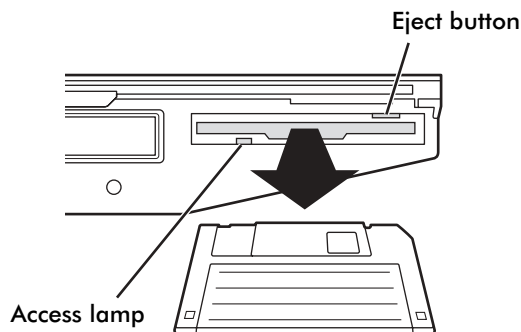

Note: Do not eject the floppy disk while the access lamp is flashing or lit. Doing so can seriously damage the disk and the floppy disk drive as well.



Handling CDs


In order to protect data stored on compact discs from damage or loss, handle them with care, and observe the following precautions.

- Do not touch the surface of a CD.
- Do not expose CDs to extreme temperatures or humidity. The working temperature range is between 4°C and 52°C (40°F and 125°F).
- Wipe CDs with a clean cloth before playback.
- Remove the CD from the CD drive before turning the Disklavier off.

Loading a CD

Loading

- 1 Press  on the Media Center to open the CD tray.
- 2 Place the CD on the tray, and then press  to close the tray.

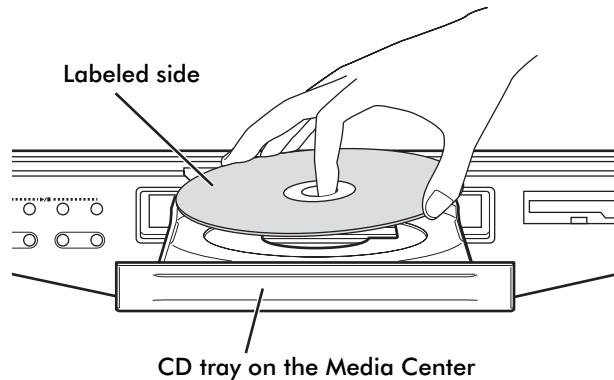

Available File Format and Structure of Data in the Removable Media

CDs

The files should be formatted in ISO 9660 LEVEL1.

Floppy Disks (2DD,2HD)

- The files should be formatted in MS-DOS.
- The Disklavier reads only the files nested in the root directory.

USB Flash Memories

The files should be formatted in FAT16 or FAT32 file system.

USB Hard Disk Drives

The files should be formatted in FAT32 file system.


Continue to next page...

Notes on the limitation of the compatible file format

- **SMF format 0:** For playback and recording.
- **SMF format 1:** For playback only.
- **E-SEQ:** For playback and overwrite recording.
- The name of the SMF file should have an extension as “.MID” or “.mid”.
- The name of the E-SEQ file should have an extension as “.FIL” or “.fil”.

Notes on the files created on the Disklavier PRO Series

The song file created on the Disklavier PRO Series contains various data that enable high-accuracy in song playback. However, those data can not produce any expected results and, moreover, may control the keys unnaturally when the song file is modified on the external MIDI device such as sequencer, etc. The above mentioned problem does not occur in the following cases:

- When the song file stored/loaded in the Disklavier PRO Series is played back on the Disklavier PRO Series through an external MIDI device without any modification on that device.
- When the song file is output from the [MIDI OUT] terminal or the [USB ] port on the front of the I/O Center and played back on another MIDI device. Any modifications are available.
- When the following event is deleted from the song file.
 - A0 kk dd : Polyphonic Key Pressure
 - A1 kk dd : Polyphonic Key Pressure
 - B0 10 dd : Control Change (General Purpose)
 - B1 10 dd : Control Change (General Purpose)
 - B0 51 dd : Control Change (General Purpose)
 - B1 51 dd : Control Change (General Purpose)

Song Playback Features

Changing the Playback Tempo

This could be useful, for example, when listening carefully to a piano part at slow tempo, and also when practicing a difficult piano part at slow tempo.

- 1 Select the desired song. (→ pg. 12 “Selecting a Song” in “Quick Guide”)
- 2 Tap on **[Tempo]** in the [Song] screen.



- 3 Tap on **[-]/[+]** to adjust the tempo value, and then on **[Tempo]**.

The adjusted value appears instead of the character, [Tempo] on **[Tempo]**.

To resume the original tempo, tap on **[Reset]** in step 3.

Tip: The value can be adjusted from -50% to +20% in 1% increments.

Playing Back Songs in a Different Key (Transposition)

This could be useful, for example, when you want to sing along in a more comfortable key.

- 1 Select the desired song. (→ pg. 12 “Selecting a Song” in “Quick Guide”)
- 2 Tap on **[Trans.]** in the [Song] screen.



- 3 Tap on **[-]/[+]** to adjust the transposition value, and then on **[Trans.]**.

The adjusted value appears instead of the character, [Trans.] on **[Trans.]**.

To cancel the transposition, set the value to [0] in step 3.


Tip: The song can be temporarily transposed in half-step keys up or down two octaves (-24 to +24).


Note: Care must be taken when transposing songs on CDs, as increasing or decreasing the transposition value too much may have an adverse effect on sound quality.

Repeating Song Playback

This could be useful, for example, when providing non-stop background music at a party.

- 1 Select the desired song. (→ pg. 12 "Selecting a Song" in "Quick Guide")

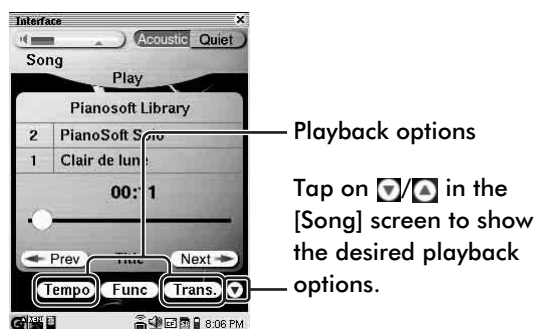

- 2 Tap on  in the [Song] screen.

- 3 Tap on **Repeat**.



- 4 Tap on the desired repeat mode, and then on **Repeat**.

ALL: Repeats all songs in the current album.

RPT: Repeats the current song only.

RND: Repeats all songs in the current album in random order.

The selected mode appears instead of the character, [Repeat] on **Repeat**.

To cancel repeat mode, tap on **OFF** in step 4.


Repeating a Specific Section of a Song (A-B Repeat)

In addition to the A-B Repeat feature, you can locate the registered points (point A and B) during playback and fast-reversing/forwarding.

- 1 Select the desired song. (→ pg. 12 "Selecting a Song" in "Quick Guide")



- 2 Tap on **Next** repeatedly in the [Song] screen until the following screen appears.

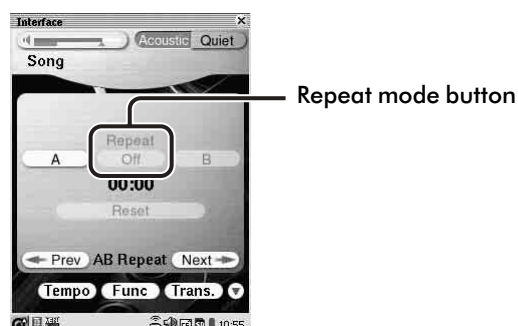




- 3 Press  to start playback.

- 4 Tap on **A** at the beginning of the section you want to repeat (point A).

5 Tap on **B** at the end of the section you want to repeat (point B).

The beginning of the section is located and playback stops.


6 Tap on the Repeat mode button repeatedly to select the desired mode.

-  : When point B is reached, the beginning of the section is located and playback stops.
-  : When point B is reached, the beginning of the section is located and playback starts.
-  : Repeat mode is canceled but points A and B are retained.

To locate the registered points (point A and B) during playback or while stopped, tap on **A** or **B**.

Tip: You can also locate a point by fast-reversing/forwarding between points A and B.

To clear the registered point, tap on

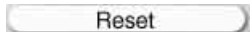.


Playing Back Only the Desired Piano Part

This could be useful, for example, when listening carefully to one part, and also when you practice only the left- or right-hand part while the Disklavier plays the other.

1 Select the desired song. (→ pg. 12 "Selecting a Song" in "Quick Guide")



Playback options

Tap on  in the [Song] screen to show the desired playback options.

2 Tap on in the [Song] screen.

3 Tap on **Part**.



Left-hand part

Right-hand part

Pedal part

 
Accompaniment part


Tip: Tapping on  in step 1 also shows this screen.

Continue to next page...

4 Tap on the desired part to change its setting (play or mute).

Each time you tap on the part, its setting changes as follows showing the status with the color of the part icon:

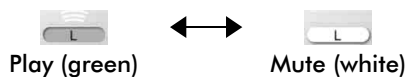

Note: Blank part  (shown in yellow) contains no sound and you cannot change the setting.

Adjusting the Volume Balance among the Keyboard Playing, Ensemble Sound, Software Playback, and Microphone's Input

Besides adjusting the overall volume, the volume balance among the different sound sources as described below can be adjustable.

[Voice]: Adjusts the volume of the digital piano sound* that you play on the Disklavier's keyboard in Quiet/Headphone mode. (→ pg. 16 "Basic Piano Playing" in "Quick Guide")


* Note that this setting has no effect on the volume of the pre-recorded piano part in the software.

[TG]: Adjusts the volume of the ensemble sound reproduced by the tone generator (TG) of the Disklavier.

[Audio]: Adjusts the volume of the accompaniment or standard audio sound pre-recorded in the software (CDs).

[MIC]: Adjusts the volume of the sound input from the microphone.

1 Tap on .

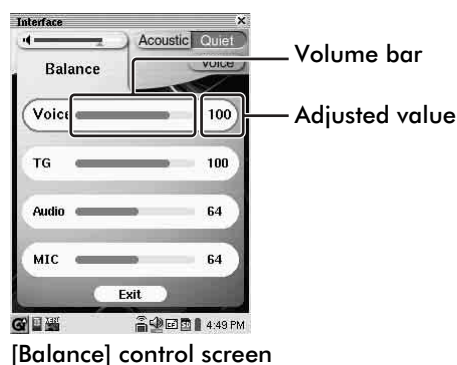

[Balance] control screen

2 Tap on the desired point on the volume bar of the desired sound to adjust its value.

Tip: Pressing   also adjust the value.

3 Tap on to clear the [Balance] control screen.

Utilizing the Play Lists

By creating play lists of your favorite songs, you can program your Disklavier to automatically play back a series of songs, not to mention eliminate the trouble of changing CDs, floppy disks, or USB flash memories each time you want to listen to songs on a different medium. First create your own play list, and then play back that list by following the procedures below.

Adding the Desired Song to the Play Lists

1 Select the desired song or album (→ pg. 12 "Selecting a Song" in "Quick Guide"), and then tap on or .

Function Menu appears.

- 2 Tap on **Add to PlayLists**.
To cancel this operation, tap on **Func**.
- 3 Tap on **PlayList**, and then on the destination list (album) if necessary.




Tap to cancel the selection.

- 4 Tap on **OK**.
- 5 Tap on **OK** after the completion message appears.

Note: If necessary, change the order of the songs in the lists (albums). (→ pg. 54 “Rearranging the Order of Songs/Albums”)

Playing Back the Desired Songs in the Desired Order

Select the Play Lists that you created in the above procedure (→ pg. 12 “Selecting a Song” in “Quick Guide”), and then press .

Temporarily Changing the Voice of a Track

You can change the voice of the ensemble tracks to your preference. For details on the track structure, see “Ensemble Part Recording and Track Structure” on page 45.

- 1 Select the desired song. (→ pg. 12 “Selecting a Song” in “Quick Guide”)



- 2 Tap on **Next** once in the [Song] screen.




- 3 Tap on **Ensemble**.
The track information screen appears.



Track list


Continue to next page...

4 Tap on the desired track number to be edited in the track list.

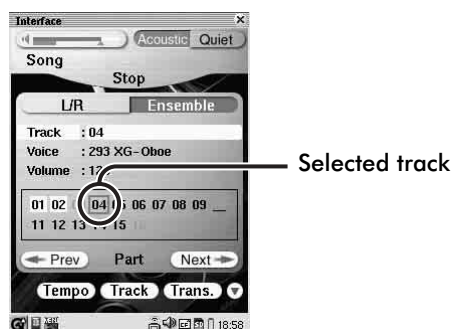


5 Tap on [Voice].

The voice list screen appears.

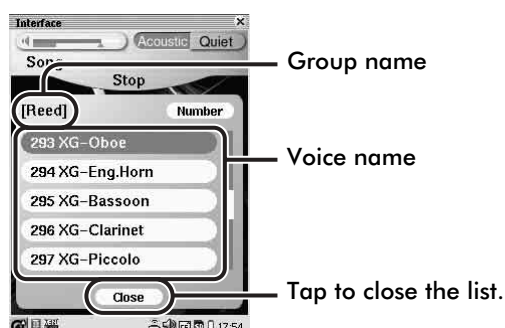


6 Tap on the desired voice name.

Tip: You can also select the desired voice by specifying the voice number. Tap **Number**, and the voice number selection screen appears.

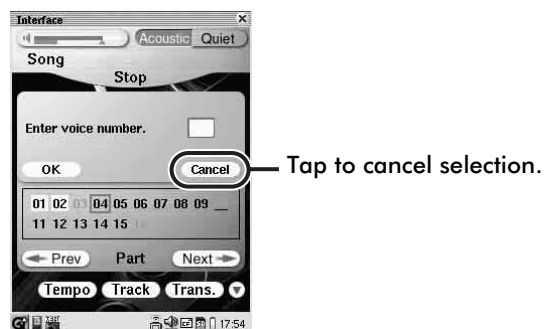

Confirm the desired voice number referring to “Ensemble Part Playback Voice List” (→ pg. 68), enter the number with the keyboard on the pocket controller, and then tap on **OK**.

7 Tap on **Close**.

To adjust the volume of the track, tap [Volume], and then press .

Editing Tracks

You can edit the existing ensemble tracks to your preference by using the following options.

[Mix Track]:

This could be useful for saving tracks by mixing two tracks.

[Move Track]:

This could be useful for changing the voice by moving a track.

[Copy Track]:

This could be useful for creating unison parts by copying and pasting a track.

[Delete Track]:

Deletes an unwanted track.

[Transpose Track]:

This could be useful for arranging existing ensemble parts. For example, when you have transposed a specific track to suit its instrument voice in advance, you can transpose other tracks in the same key.

Mix/Move/Copy Track

- 1 Select the desired song. (→ pg. 12 "Selecting a Song" in "Quick Guide")




- 2 Tap on **Next** once on the [Song] screen.



- 3 Tap on **Ensemble**.

The track information screen appears.

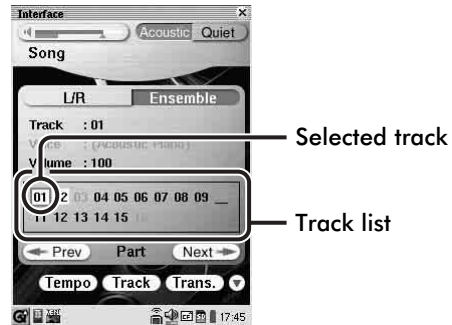

Each track number in the track list is colored depending on its status.

Black:

Recorded track

Gray:

Blank track

With white background:

Track assigned to a piano part

Underlined:

Track assigned to a rhythm part

- 4 Tap on the desired track number to be edited in the track list.


- 5 Tap on **Track**.



Continue to next page...

6 Tap on the desired edit track option button (**Mix Track**),

Move Track , or **Copy Track**).

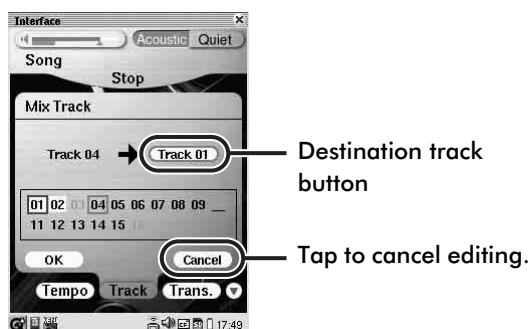

[Mix Track] screen



[Move Track] screen



[Copy Track] screen

7 Tap on the destination track button.

The destination track selection screen appears.



8 Tap on the destination track number.

[Mix Track]:

The track selected in step 4 will be mixed with the destination track.

[Move Track]:

The destination track will be overwritten by the track selected in step 4 (the selected track will be blank).

[Copy Track]:

The destination track will be overwritten by the track selected in step 4 (the selected track will be retained).

9 Confirm that the destination track number is marked with a blue square, and then tap on **OK** .

10 Tap on **OK** after the completion message appears.

Delete Track

- 1 Perform steps 1 thru 5 in "Editing Tracks (Mix/Move/Copy Track)".



- 2 Tap on **Delete Track**.



- 3 Tap on **OK**.


- 4 Tap on **OK** after the completion message appears.

Transpose Track

- 1 Perform steps 1 thru 5 in "Editing Tracks (Mix/Move/Copy Track)".
(→ pg. 28)



- 2 Tap on **Transpose Track**.

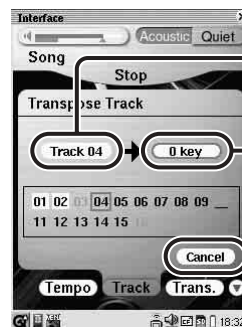

Selected track button

Key change button

Tap to cancel editing.

- 3 Tap on the key change button.
The key change screen appears.



Continue to next page...

- 4** Tap on **-**/**+** to adjust the transposition value, and then tap on **Close**.

Tip: The track can be transposed in half-step keys up or down (-60 to +60).

- 5** Tap on **OK**.

Tip: To transpose all the tracks, tap on the selected track button. The selected track number indication changes to [All Tracks]. Note that the rhythm track cannot be transposed.



- 6** Tap on **OK**.

- 7** Tap on **OK** after the completion message appears.

Checking and Modifying the Song Information

Checking the Song Information (Song-Info Screen)

You can check the following information of the selected song:

- [Song Type]:** Shows the type of the software.
- [Length]:** Shows the total playback time.
- [Date]:** Shows the recording/modification date.
- [File Name]:** Shows the file name.
- [Last Played]:** Shows the latest playback date.
- [Play Count]:** Shows the number of times the song has played in its entirety.
- [Copyright]:** Shows the copyright.

- 1** Select the desired song. (→ pg. 12 “Selecting a Song” in “Quick Guide”)



- 2** Tap on **Next** repeatedly in the [Song] screen so that the following screen appears.



Song-Info screen

Checking and Modifying the Song Information (Song-Tag screen)

You can modify the following information of the selected song:

[Song Title]: Modifies the title of the song.

[Rate]: Modifies the arbitrary rating by changing the number of the star icons.

[Comment]: Modifies your comment.

- 1 Select the desired song. (→ pg. 12 “Selecting a Song” in “Quick Guide”)



- 2 Tap on **Next** repeatedly in the [Song] screen so that the following screen appears.



Song-Tag screen

- 3 Tap on the title of the desired information.

For [Song Title] and [Comment]

The text box for the selected information title appears.



Tap to cancel the modification.

For [Rate]

The selected title ([Rate]) is highlighted.

- 4 Modify the information.

For [Song Title] and [Comment]

Modify the information, and then tap on **OK**.

For details on modifying the information, see “Entering Characters” on page 33.


For [Rate]









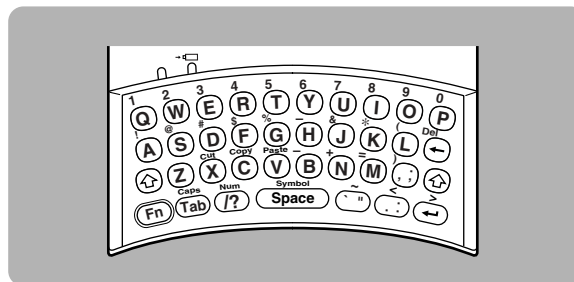












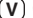
Press to select the rating (shown by the number of the stars).

Continue to next page...

Entering Characters

- 1 Slide the front panel of the Pocket Controller to show the keyboard.
- 2 Press a key to enter the corresponding letter.



Keys	Will enter lowercase letters on respective keys.
 (Shift)	Will shift the mode to enter “UPPERCASE” letters or lowercase letters when the Caps lock key is active.
	Will enable the entry of numbers and symbols printed on the keyboard in yellow.
  (Caps)	Will change the entering mode to enter uppercase (capital) letters (Caps lock). To cancel the function, press   again.
	Will insert a space.
	Will act as a tab key. On the Edit screen, the cursor will move to the next field.
 (Back space)	Will delete the character to the left of the cursor.
  (Delete)	Will delete the character to the right of the cursor.
  (Num)	Will change the entering mode to enter numbers (Num lock) and symbols. To cancel the function, press   again.
 (Carriage return)	Will start a new line.
  (Cut)	Will cut the selected text.
  (Copy)	Will copy the selected text.
  (Paste)	Will paste the selected text.

Presetting Playback Control Options for Each Song

You can customize the manner of playback for each song in advance.

[Piano Part Ch L]:

Selects the desired channel ([01] thru [16]) to which you assign the left-hand part or not ([##]).

[Piano Part Ch R]:

Selects the desired channel ([01] thru [16]) to which you assign the right-hand part or not ([##]).

[Piano Velocity Curve]:

In acoustic mode, the loud notes may get distorted when you play a MIDI song designed not for acoustic piano playback, but for a certain instrument voice. In such a case, you can automatically adjust only the volume of the acoustic piano part moderately without changing the volume of other parts.

Select the desired acoustic piano volume ([Soft 85] thru [Soft 20]), or select [Thru] to inactivate this function.

Note: The smaller the [Soft] value, the softer the volume becomes.

[Main Volume Adjust]:

Adjusts the overall volume.

[Audio Volume Adjust]:

Adjusts the volume of the accompaniment or standard audio sound pre-recorded on the software (CDs).

[Audio Pitch Adjust]:

Adjusts the pitch of the accompaniment or standard audio sound pre-recorded on the software (CDs).

[Skip]: Sets the song to be played ([OFF]) or not ([ON]) during playback a series of songs in an album.

[Guide]:

Turns the SmartKey function on ([ON]) or off ([OFF]). When [ON] is selected, you can set the on/off setting of the SmartKey function respectively for each part ([L] and [R]). For details, see “Selecting the Part to Be Guided” on page 35.

Note: The [Guide] option is automatically set to [ON] when SmartKey song is played.

- 1 Select the desired song. (→ pg. 12 “Selecting a Song” in “Quick Guide”)



- 2 Tap on **Next** repeatedly in the [Song] screen so that the following screen appears.



Song-Option screen

- 3 Tap on the title of the desired option.
The selected title is highlighted.
- 4 Press **Left Arrow** to select/adjust the desired option/level, and then press **Right Arrow** (select button).


SmartKey™ Playback

The SmartKey feature of your Disklavier is a unique application of Yamaha's patented "Guide" system technology and compatible with SmartKey software. With the SmartKey software, non-players can play simple melodies by following the guidance of the prompt key without a written music book.

Note: SmartKey software may not be available in some countries.

Note: SmartKey is a trademark of Yamaha Corporation or Yamaha Corporation of America.


smartkey™

- 1 Select the desired song with  icon. (→ pg. 12 "Selecting a Song" in "Quick Guide")

- 2 Press .




Key prompt

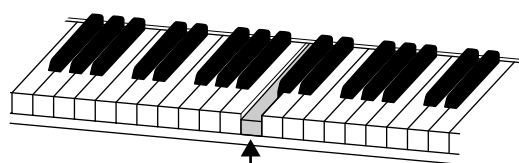

Key prompt (The key slightly moves downward)

Key notation

As a reference, "C3" is middle "C", which means "C4" is an octave above middle "C" and so on.

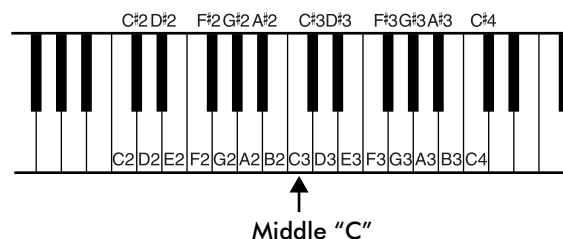

- 3 Follow and play the prompt key.
The Disklavier plays a simple melody.

- 4 Continue to play the prompt keys one by one until the end of the song.

Notice that the Disklavier patiently waits for you to play the right key before proceeding to the next key. Also, notice that if you happen to miss the prompt key, it will gently remind you the right key every few seconds until you play the right key.

Selecting the Part to Be Guided

You can activate the SmartKey function only for your desired part ([L] or [R]). The [Guide] option should be turned on in advance. (→ pg. 34)

- 1 Show the [Part] screen. (→ pg. 24 "Playing Back Only the Desired Piano Part")




Left-hand part

Right-hand part

[Part] screen

2 Tap on the desired part to change its setting (guide, normal play, or mute).

Each time you tap on the part, its setting changes as follows showing the status with the color of the part icon:

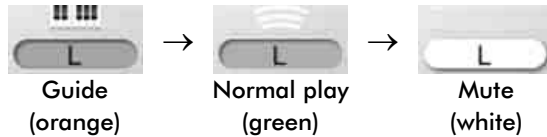

Adding Disklavier Accompaniment to Commercial CD Songs (PianoSmart)

You can add a Disklavier piano performance provided on SmartPiano software floppy disks to the playback of songs on commercial CDs. Furthermore, once you playback a SmartPiano song to the end, the paired song on the CD is automatically copied to the [CD Library]. This feature eliminates the trouble of changing CDs and enables quick playback later.

1 Select the desired SmartPiano song (a song with). (→ pg. 14 in “Quick Guide”)


When you select a SmartPiano song for the first time, [Please insert the CD.] screen appears.

Tip: It is convenient that you copy the SmartPiano software to the [User Library] in advance. (→ pg. 53 “Making Copies of the Entire Contents in a Medium or Song Library”)

2 Load a CD paired with the SmartPiano software, if necessary. (→ pg. 20 “Loading a CD”).

Note: When you perform PianoSoft playback for the first time, it takes 15 seconds to synchronize the SmartPiano song and the CD with the [Registering] appearing on the screen.

3 Wait until the [Registering] disappear, and then press to start PianoSmart playback.

Note: If [Different CD!] screen appears in step 2, confirm that the CD paired with the selected SmartPiano song is loaded, and then tap on .

Video Synchronized Playback

1 Perform the video synchronized recording in advance. (→ pg. 43)

Note: Be sure to rewind the video cassette to locate the beginning of the recording.

2 Make sure that the video synchronization is on. (→ pg. 43 “Setting Up the Camcorder and the Disklavier”)

3 Turn down the volume completely on the camcorder.

Note: Although noises (synchronizing signal) are heard from the camcorder’s speaker when the volume is not turned down completely, this is not a malfunction.

4 Start playback on the camcorder.

The Disklavier automatically selects the song paired with the video, and then starts playback as well.

Note: You cannot change the playback tempo during video synchronized playback.

Note: When the song paired with the video is stored in [User Library] (songs recorded with Video Synchronized Recording will automatically be stored here) or [PianoSoft Library], the song is automatically selected and starts playback. However, it is required to select the desired song after step 2 when the song is stored in the removable medium.


Piano Playing Features


Playing the Disklavier along with the Internal Metronome

The beats of the metronome help you play the Disklavier with a steady tempo. The tempo, the meter (beat), and the volume of the click can be adjusted.

Note: The [Tempo] value indicates the number of beats in a minute, and one beat represents a quarter note. When you play a song written in different measure unit, convert the unit to quarter note (e.g. When playing a song in 3/2, set [Beat] to 6/4).

- 1 Tap on  in the [Main] screen.

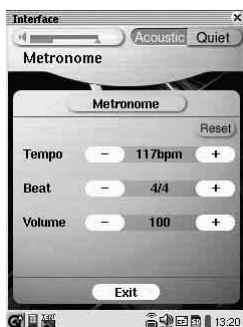


- 2 Tap on  to start the metronome.


The color of  changes to blue.

To stop the metronome, tap on



- 3 Tap on  /  to adjust the value of the desired option.

Tip: Tap on  to resume the default tempo. In such a case, note that the operation changes only the [Tempo] value.

- 4 Tap on  to complete the operation.

Playing the Disklavier Accompanied by the Additional Voice(s) (Performance Mode)

This function lets you play the piano sound of the Disklavier accompanied by other voices produced by the internal tone generator. A maximum of two voices sound in unison with the right-hand part that you play and one voice does with the left-hand part. You can also mute the piano sound to your preference.

- 1 Tap on  in the [Main] screen.







Tap to change the split point (see step 3.)

Voice name


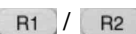
Turns on/off the left-hand/right-hand1/right-hand2 part accompanying voice

- 2 Tap on  /  /  to turn on/off the accompanying voice for the respective part.

Each time you tap on  /  / , the respective voice turns on (blue) and off (yellow) alternately.

- 3** Tap on [SplitPoint], and then press  to select a note as the split point (within the range from [A-1] to [C7]) if necessary.



The selected note and notes lower than that note are assigned to the left-hand part, and the notes higher than that are assigned to the right-hand part.

Note: The split point can be set only when both  and  are turned on (blue).




- 4** Tap on the voice name of the desired part.



- 5** Tap on the desired voice.

- 6** Tap on [Volume]  /  to adjust the volume of the selected voice.

- 7** Tap on  to complete the operation.

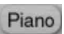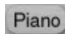To mute the piano sound, tap on .  turns to red. Each time you tap on , the piano sound turns on and off alternately.

Adding Expressive Effect to Your Play

In Quiet or Headphone mode, when a voice contained in [AEM Brass], [AEM Sax], or [AEM Section] Instrument Group is selected, depressing the pedal adds articulations specific to the wood/brass wind. Three types of articulation are assigned to the respective pedals.

Soft pedal:


Assigned for adding Head (blow-up) articulation to the manner of beginning a note.

Sostenuto pedal:

Assigned for adding Joint articulation to the interval of two notes.

Damper pedal:

Assigned for adding Tail (fall-down) articulation to the manner of ending a note.

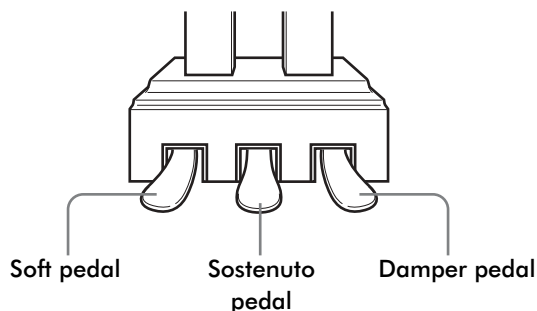

- 1** Select the desired voice contained in [AEM Brass], [AEM Sax], or [AEM Section] Instrument Group. (→ pg. 67 "Piano Voice List" and pg. 19 "Selecting the Voice in Quiet/Headphone Mode" in "Quick Guide")

- 2** Operate the key and the desired pedal.

The key and pedal operation varies depending on the type of the articulation.

For Head (blow-up) articulation

- 1** Press and hold the soft pedal, and then press the desired key.

The blow-up speed is controlled in accordance with the angle of the pedal that is pressed.

Continue to next page...

For Joint articulation

- 1 Press the desired key to be jointed with the next key.
- 2 Depress and hold the sostenuto pedal, and then press another key in a certain interval.
The first note leads to the second one by added glissando between them.

Tip: This articulation is the most effective when the interval of the two notes is an octave.

Note: When the interval of the jointed notes is narrower or wider than an octave, Joint articulation may not effect those notes.

For Tail (fall-down) articulation

- 1 Press the desired key.
- 2 While the key is pressed, depress the damper pedal, and then release the key.
- 3 Release the damper pedal to mute the note.
The note sustains for a while with its pitch falling down to the lower octave's note before muting the note completely.

Tip: When you immediately release the damper pedal, short Tail articulation effects on that note. When you slowly release the damper pedal, long Tail articulation effects on that note.

Note: The Disklavier stops sustaining the note, and then adds Tail articulation at the release of the damper pedal (not at the release of the key).

Adding Chords to a Melody Line (Harmony Mode)

In Quiet or Headphone mode, the Disklavier can add a chord suitable for the melody line played on the keys higher than the split point in accordance with the notes played (but without sound) on the keys* lower than the split point.


* The Disklavier creates a chord based on the notes of up to three keys.




Note: In this mode, the keys lower than the split point are muted.

Setting up Harmony Mode

You can select the desired split point and the balance between the chord's volume and the melody line's volume.

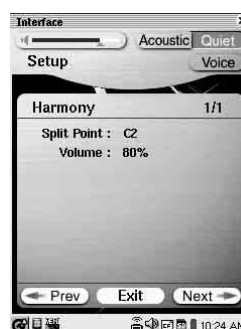- 1 Tap on  in the [Main] screen, and then on .

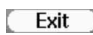

- 2 Tap on [Split Point]/[Volume], and then press   to select/adjust the selected option.
- 3 Tap on  to complete the operation.

Playing the Disklavier in Harmony Mode

- 1 Activate Quiet or Headphone Mode.
(→ pg. 16 "Basic Piano Playing" in "Quick Guide")
- 2 Tap on **Voice** in the Information Area.




- 3 Tap on **Harmony** to activate Harmony Mode.
Each time you tap on **Harmony**, Harmony Mode is activated or inactivated alternately.

- 4 Tap on **Exit** to clear the [Voice] screen.
- 5 Play the desired chord on the keys lower than the split point and play the melody line on the keys higher than the split point.

Applying Reverb Effects to the Digital Piano

A piano sounds differently depending on the size of the room in which it is played. The reverberation is the major reason for this difference. Controlling the reverberation simulates the acoustics of the digital piano played in a concert hall. This effect can be also applied to the microphone input.

- 1 Tap on **Setup** in the [Main] screen, and then on **Reverb**.

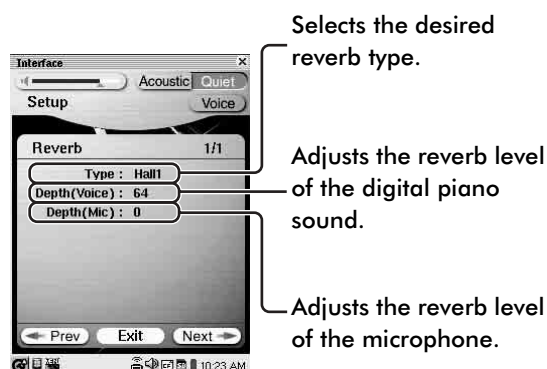

- 2 Tap on [Type], on the desired reverb type, and then on **Close**.
- 3 Tap on [Depth (Voice)]/[Depth (Mic)], and then press **◀ ▶** to adjust the reverb level.
- 4 Tap on **Exit** to complete the operation.


Recording

Recording a New Song


A song that you play on the Disklavier can be recorded in the [User Library] and the recorded song can be easily played back. Furthermore, you can select and exclusively record the desired part.

1 Tap on in the [Main] screen.

A new song will be created automatically.

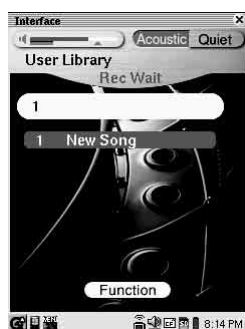

2 Tap on .

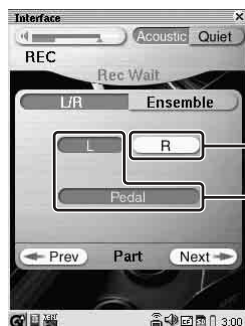

The white part won't be recorded.

The red part will be recorded.

3 Tap on the desired part (, , or) to change its setting (record or not).

Each time you tap on the part, its setting changes alternately.

When you record both left- and right-hand part, go to step 4.



When you record either left- or right-hand part, go to step 5.

4 Tap on [Split Point], and then press to select the desired note as the split point.

The selected note and notes lower than that note are assigned to the left-hand part, and the notes higher than that are assigned to the right-hand part.

5 Press to start, and then immediately pause recording.

Note: When the video synchronization is on (→ pg. 43 “Video Synchronized Recording”), recording does not pause in this step.

6 Confirm that [Recording] appears in the Information area, and then start playing the Disklavier.

The Disklavier starts recording.

7 Press to stop recording. To play back the recorded song, press .

Quick Recording


With the simple operation of the buttons on the Media Center, you can quickly start recording. The new song will be recorded as the last song of the last album in the [User Library] by following the procedure below.

- 1** Press **REC** on the Media Center.
REC lights up red and **User** flashes green.
To cancel recording, press **REC** again.
- 2** Press **User** to start recording.
User stops flashing green, and then remains lit.
- 3** Play the Disklavier.
- 4** Press **REC** or **User** to stop recording.
REC and **User** turn off.

Titling a Song at the Start of Recording

During the recording procedure, you can title a new song before you start recording. You can also title the recorded song later on. (→ pg. 31 “Checking and Modifying the Song Information”)

- 1** Perform the procedures from step 1 thru step 2 of “Recording a New Song”. (→ pg. 41)

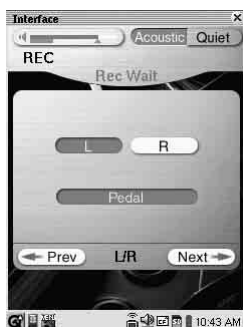

- 2** Tap on **Next**.



Song title area

- 3** Tap on the song title area, name the song (→ pg. 33 “Entering Characters”), and then tap on **OK**.
To cancel this operation, tap on **Cancel**.

Recording the Left- and Right-Hand Parts Separately (Overwrite Recording)

You can overwrite the desired part to a previous recording. For example, if you record the left-hand part of a song, and then record a right-hand part over the previously recorded song, both recording will be combined.

- 1** Record the desired part of a song in advance. (→ pg. 41 “Recording a New Song”)
- 2** Select the song to be overwritten, if necessary. (→ pg. 12 “Selecting a Song” in “Quick Guide”)

Tip: When you start overwriting in succession to the previous recording, skip this step and go to step 3.

Continue to next page...

3 Tap on **Func**, and then on **Re-REC**.

4 Tap on the desired part (**L**, **R**, or **Pedal**) to select its setting (to be recorded/overwritten).

Each time you tap on the part, its setting changes as follows showing the status with the color of the part icon:

Not record (white)/Not overwrite (green) ↔

Record/overwrite (red)


Tip: You can also overwrite the previously recorded part along with the blank part.

5 Press  to start, and then immediately pause recording.



6 Confirm that [Recording] appears in the information area, and then start playing the Disklavier.

The Disklavier starts recording.

7 Press  to stop recording, and then tap on **Save** (to overwrite) or **NEW** (to record as a new song) to complete the recording.


To cancel the recording, tap on **Cancel**.

Video Synchronized Recording


By recording a song played on the Disklavier synchronized with the video recording, later on, you can enjoy piano playback with the video. (→ pg. 36 “Video Synchronized Playback”) First set up the camcorder and the Disklavier, and then start recording by following the procedures below.

Setting Up the Camcorder and the Disklavier

1 Hook up a camcorder to the I/O Center.

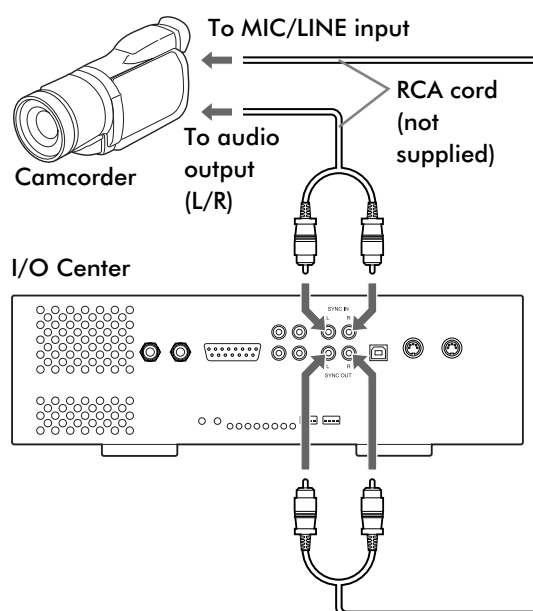


2 Tap on **Setup** in the [Main] screen, and then **SYNC**.

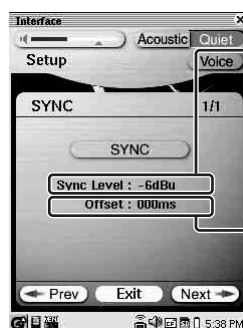

For normal use, the adjustment of this option is not required.

Adjusts the length of the offset time that leads the actual playback of entire recording.



3 Tap on to turn the video synchronization on.

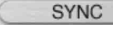Each time you tap on , the video synchronization turns on and off alternately.



4 Tap on the desired option ([Sync Level] or [Offset]), and then press to adjust its value.

To cancel the adjustment, press .

5 Press (select button) to set the value.

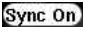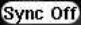
Tip: The shortcut button on the [Song] screen is also available. Tap on  to turn on video synchronization, and  to turn it off.

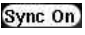

Each time you tap on this button,  and  alternates.

Note: Video synchronization does not function under the following conditions:

- While songs on SmartPianoSoft, PianoSoftPlusAudio, SmartKey, and audio CD are played back.
- While Vocal Harmony mode is activated.

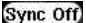In such cases, the icon  is shown in gray.

Starting Video Synchronized Recording

1 Press repeatedly until the [Main] screen appears, and then tap on in the [Main] screen.

2 Start recording on the camcorder.

3 Confirm that [Rec Wait] appears in the information area, and then press to start recording.

4 Wait for approximately ten seconds, and then start playing the Disklavier.


Note: This step is necessary for synchronization of the song and the video playback, and should not be omitted.

5 After playing the Disklavier, press to stop recording.

6 Stop recording on the camcorder.

CD Synchronized Recording

You can record a Disklavier piano performance in the [User Library] along with the playback of songs on commercial CDs. Once you record a song to the end with this feature, the played back song on the CD is automatically copied to the [CD Library]. When you play back the performance recorded with this feature, follow the procedure in “Adding Disklavier Accompaniment to Commercial CD Songs (PianoSmart)” on page 36.

- 1** Load the desired CD, if necessary. (→ pg. 20 “Loading a CD”)
- 2** Select the desired song. (→ pg. 12 “Selecting a Song” in “Quick Guide”)
- 3** Tap on **[Func]** in the [Song] screen, and then on **[SPS REC]**.
Tip: Tap on the desired part to change its setting (record or not) if necessary. (→ pg. 41)
- 4** Start playing the Disklavier.
- 5** Press  to stop recording.


Recording Ensemble Parts

In addition to making piano-only recordings, you can record a part in a voice different from the piano as an ensemble part. (The piano can also be selected as an ensemble voice.) You can also overwrite an existing song with an ensemble part.

Ensemble Part Recording and Track Structure

Piano and ensemble parts played on the Disklavier are recorded as MIDI data. MIDI data consist of 16 tracks, with a single voice assigned to each track (There is a resemblance to a score with 16 staves). Generally the left-hand part of the piano (including half-pedal data) is assigned to Track 1, the right-hand part (including half-pedal data) to Track 2, and the ensemble and rhythm parts to the remaining tracks.

- 1** Put the Disklavier in Quiet Mode or Headphone Mode. (→ pg. 16 “Basic Piano Playing” in “Quick Guide”)
- 2** Tap on **[REC]** in the [Main] screen.
- 3** Tap on **[1 New Song]**.
- 4** Tap on **[Ensemble]**.

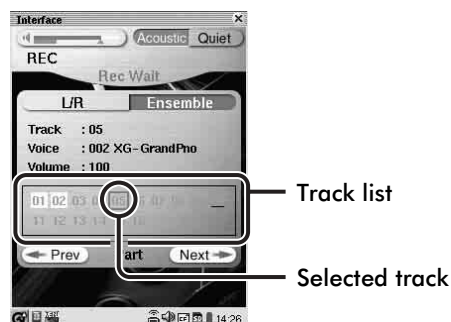

Each track number in the track list is colored depending on its status.

Black:

Recorded track

Gray:

Blank track


With white background:

Track assigned to a piano part

Underlined:

Track assigned to a rhythm part

- 5** Tap on the track number to be overwritten in the track list.

Tip: After tapping on a track number, you can select tracks by pressing  .

- 6** Tap on [Voice], and then the desired voice.



Appears when there are more voices not shown in the window. In such a case, tap on either end of this bar to show the hidden voices.



Tip: Checking in advance the desired voice number in “Ensemble Part Playback Voice List” (→ pg. 68) helps you quickly select the voice.


Tap on **Number**, and the following screen appears.




Enter the voice number with the keyboard on the pocket controller, and then tap on **OK**.

- 7** Tap on **Close**.

- 8** Tap on [Volume], and then press   to adjust the volume of the ensemble part.

- 9** Press , and then play the Disklavier along with the playback of the song.

Recording starts automatically.

- 10** After playing the Disklavier, press  to stop recording.

- 11** Tap on **Save** (to overwrite) or **NEW** (to record as a new song) to complete the recording.

To cancel recording, tap on **Cancel**.

To change a voice and its volume without overwriting with a new performance, perform the above procedures from steps **1** thru **11**, omitting steps **9** and **10**.

Overdubbing an Existing Part

You can overdub* a track (part) in an existing song.

* The existing and new performances will be mixed when you play back an overdubbed song.

- 1 Select a song to be overdubbed.
(→ pg. 12 “Selecting a Song” in “Quick Guide”)

- 2 Tap on **Func**, and then **Re-REC**.



- 3 Select a track (part) to be overdubbed.

Overdubbing a Piano Part

Tap on the desired part to turn the color from green to red. (→ pg. 42 “Recording the Left- and Right-Hand Parts Separately (Overwrite Recording)”)

Overdubbing an Ensemble Part

Tap on **Ensemble**, and then the desired track (black number). (→ pg. 45 “Recording Ensemble Parts”)



- 4 Tap on **Next** twice.



- 5 Tap on **[Overdub]**, and then press **[ON]**.

- 6 Press **[Play]**, and then play the Disklavier along with the playback of the song.

Recording starts automatically.

- 7 After playing the Disklavier, press **[Stop]** to stop recording.

- 8 Tap on **Save** (to overwrite) or **NEW** (to record as a new song) to complete the recording.


To cancel recording, tap on **Cancel**.

Tip: To overwrite (not overdub) a track, select **[OFF]** in step 5.

Recording Songs Based on Measures and Beats (Metronome Mode Recording)


There are two recording modes available for the Disklavier: Time Mode (recording mode based on the elapsed playing time) and Metronome Mode. Once you record songs in Metronome Mode, you can start overwriting recordings synchronized with the beats of the internal metronome over the recorded songs. Furthermore, you can change the tempo of the recorded songs afterward by editing its original data.

Making a New Recording



- 1** Set up the metronome. (→ steps **1** and **3** of “Playing the Disklavier along with the Internal Metronome” on pg. 37)
- 2** Tap on **New REC**.
- 3** Press .



Measure-number counter starts.

- 4** Play the Disklavier along with the metronome.
Recording starts automatically.
- 5** After playing the Disklavier, press  to stop recording.

Overwriting a Part on an Existing Song



- 1** Select the song to be overwritten (→ pg. 12 “Selecting a Song” in “Quick Guide”), and then tap on **Func**.
- 2** Tap on **Re-REC**.
- 3** Set up the overwritten part (track) and its voice. (→ pg. 42 “Recording the Left- and Right-Hand Parts Separately (Overwrite Recording)”, → pg. 45 “Recording Ensemble Parts”)
- 4** Press .
- 5** Play the Disklavier along with the metronome.
Recording starts automatically.
- 6** After playing the Disklavier, press  to stop recording.
- 7** Tap on **Save** (to overwrite) or **NEW** (to record as a new song) to complete the recording.
To cancel recording, tap on **Cancel**.

Quantize Function

This function is used to compensate for slight inaccuracies in the playing data (the length of a note and the timing of the key stroke). A measure is equally divided into a certain number of sections (4, 6, 8, 12, and 16 sections) and the key strokes are fit exactly into the sections. In the Disklavier, each section indicates a quarter note.

- 1** Perform steps **1** and **2** of “Recording Songs Based on Measures and Beats (Metronome Mode Recording)”. (→ pg. 48)
- 2** Tap on the desired song in the list that appears.
- 3** Tap on **Next** repeatedly until the following screen appears.



- 4** Tap on [Quantize], and then press   to select the desired option ([1/4], [1/6], [1/8], [1/12], [1/16]).
The lower number of the fraction indicates the number of sections a measure is evenly divided into.

- 5** Press .


The metronome starts clicking.



Measure-number counter starts.

- 6** Play the Disklavier along with the metronome.

Recording starts automatically.

- 7** After playing the Disklavier, press  to stop recording.

To cancel Quantize function, select [OFF] in step **4**.

Changing the Default Tempo

You can change the default tempo of a recorded song afterward. When you change the tempo, note that the current tempo is overwritten by the new one.

- 1 Select the song to be overwritten (→ pg. 12 “Selecting a Song” in “Quick Guide”), and then tap on **Func**.
- 2 Tap on **Re-REC**.
- 3 Set up the overwritten part (track) and its voice. (→ pg. 42 “Recording the Left- and Right-Hand Parts Separately (Overwrite Recording)”, → pg. 45 “Recording Ensemble Parts”)
- 4 Tap on **Next**.

EX.: A song recorded in Time Mode



EX.: A song recorded in Metronome Mode



- 5 Tap on **-** / **+** of [Tempo] to adjust the tempo.

To resume the original tempo, tap on

Reset.

Note: You cannot change the [Beat] setting of a song recorded in Metronome Mode.

- 6 Press **▶**.

Time Mode:

Playback starts.

Metronome Mode:

Metronome starts.

- 7 Play the Disklavier along with the metronome.

Recording starts automatically.

- 8 After playing the Disklavier, press **■** to stop recording.

- 9 Tap on **Save** (to overwrite) or **NEW** (to record as a new song) to complete the recording.

To cancel recording, tap on **Cancel**.


To change a tempo without overwriting with a new performance, perform the above procedures from step 1 thru 9, omitting steps 3, 6 and 7.

Creating a Song Library

The following functions listed in the Function Menu are useful for organizing the contents in the song libraries ([PianoSoft Library], [CD Library], and [User Library]) as well as [Play Lists]. (→ pg. 25 “Utilizing the Play Lists”)

Note: Be sure to read “album” as “list” during operation for the [Play Lists].

Ex.: Function Menu for the Album List of [User Library]

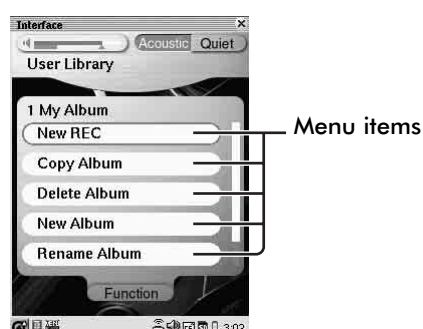

Note: The menu items differ depending on the screen.

To clear the Function Menu screen, tap on **Func** or **Function**, or press .

Creating an Album in the Library

This function is available for [PianoSoft Library], [User Library], and [Play Lists].

1 Select the desired source (→ pg. 12 “Selecting a Song” in “Quick Guide”), and then tap on **Function**.

2 Tap on **New Album**.



To name the new album, see step **3** in “Renaming an Album” on page 52.

3 Tap on **OK**.

4 Tap on **OK** after the completion message appears.

Renaming an Album

This function is available for all song libraries and [Play Lists].

- 1 Select the desired album (→ pg. 12 "Selecting a Song" in "Quick Guide"), and then tap on [Function].

- 2 Tap on [Rename Album].



Tap to cancel renaming in step 3.

- 3 Tap on [Title], rename the album (→ pg. 33 "Entering Characters"), and then tap on [OK].

- 4 Tap on [OK].

- 5 Tap on [OK] after the completion message appears.

Making Copies of Songs or Albums

This function is available except for [CD Library] and [Play Lists].

- 1 Select the desired song or album (→ pg. 12 "Selecting a Song" in "Quick Guide"), and then tap on [Func] or [Function].

- 2 Tap on [Copy Song] or [Copy Album].

Ex.: Copy Song




Tap to cancel the operation in step 3.

- 3 Copy the selected song or album.

Copying a Song:

- 1 Tap on [Source], and then on the destination source in the list that appears if necessary.

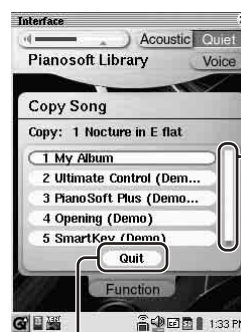

Appears when there are more songs or albums not shown in the window. In such a case, tap on either end of this bar to show the hidden songs.

Tap to cancel the selection.

- 2 Tap on [Album], tap on the destination album in the list that appears if necessary, and then go to step 4.

Continue to next page...

Copying an Album:

— only when [FD] is selected as the source



Tap on **Source**, and then on the destination source in the list that appears, and then go to step 4.

E-SEQ (Piano1) format conversion

When a song is saved in this format, the song can be played back on all Disklaviers.

To convert the format of the album stored in a floppy disk, tap on the check box for [Convert to E-SEQ (Piano1)].

Copying an Album:

— when a source other than [FD] is selected



Tap on **Album**.



Destination album list screen

Tap on the desired album, and then go to step 4.

4 Tap on **OK**.

5 Tap on **OK** after the completion message appears.

Making Copies of the Entire Contents in a Medium or Song Library

This function is available except for [CD Library] and [Play Lists].

1 Select the desired source (→ pg. 12 “Selecting a Song” in “Quick Guide”), and then tap on **Function**.

2 Tap on **Copy All**.



Tap to cancel making a copy.

3 Tap on **Source**, and then on the destination source in the list that appears if necessary.

4 Tap on **OK**.

Deleting Songs or Albums

This function is available for all song libraries and [Play Lists].

- 1 Select the desired song or album (→ pg. 12 "Selecting a Song" in "Quick Guide"), and then tap on **[Func]** or **[Function]**.
- 2 Tap on **Delete Song** or **Delete Album**.
To cancel deletion, tap on **Cancel**.
- 3 Tap on **OK**.
- 4 Tap on **OK** after the completion message appears.

Rearranging the Order of Songs/Albums

This function is available for all song libraries and [Play Lists].

- 1 Select the desired song or album (→ pg. 12 "Selecting a Song" in "Quick Guide"), and then tap on **[Func]** or **[Function]**.
- 2 Tap on **Sort Song** or **Sort Album**.

Ex.: Sort Song List




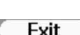


- 3 Tap on **▲/▼** repeatedly so that the selected song or album moves to the desired position.
- 4 Tap on **OK**.
- 5 Tap on **OK** after the completion message appears.

Other Settings

Skipping the Blank Part at the Beginning of a Song

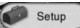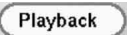



When there is a blank part created at the beginning of the recorded song, turning on this function automatically skips the unwanted part and starts playback from the actual beginning of the song.

- 1 Tap on  in the [Main] screen, and then on .
- 2 Tap on [Skip Space], and then press  to select [ON].
- 3 Tap on  to complete the operation.

To inactivate this function, select [OFF] in step 2.

Inactivating the Key Movement During Playback

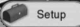During playback of a song, keys normally move in accordance with the playback of the respective note's key. In Quiet or Headphone mode, you can select an option of stopping this key movement. This enables you, for example, to play along with the song being played back, to add your own improvisation, or to create a four-hand duet.

- 1 Tap on  in the [Main] screen, and then on .
- 2 Tap on [Quiet Key], and then press  to select [ON].
- 3 Tap on  to complete the operation.

To inactivate this function, select [OFF] in step 2.

Tip: The shortcut button on the [Song] screen is also available. Tap on **[Key On]** to activate the function above, and on **[Key Off]** to inactivate it.



Each time you tap on this button, [Key On] and [Key Off] alternates.

Using Timer Play

You can start or stop playback of a song automatically at specific times. A maximum of 99 timer programs can be set.


Note: Be sure to set the date, time, and time zone in advance. (→ pg. 16 “Setting up the Current Date and Time”)

- 1 Tap on  in the [Main] screen.



Timer list screen

- 2** Tap on the desired row in the timer list.

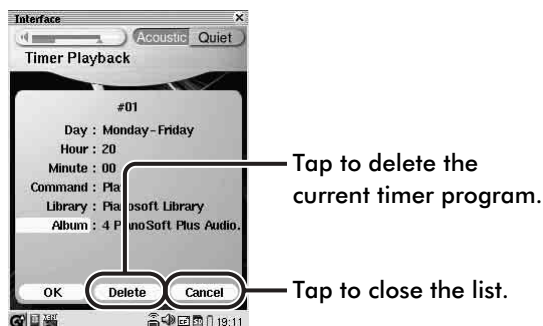

- 3** Tap on [Day], and then press to select the desired day.

The following day settings are available: All Days, Sunday, Monday, Tuesday, Wednesday, Thursday, Friday, Saturday, Sunday, Monday-Friday, Monday-Saturday.

- 4** Tap on [Hour], and then press to select the desired hour.

- 5** Tap on [Minute], and then press to select the desired minute.

- 6** Tap on [Command], and then [Play] or [Stop].

- 7** Tap on [Library], and then the desired library.



Tip: If you want to select the current album, tap on **Cancel**. [- - - -] appears in the [Album] column in the timer list screen.

- 8** Tap on [Album], and then the desired album.

- 9** Tap on **OK**.



Tip: The following indications in the [Album] column show the type of song library.

[PS-]: PianoSoft Library

[UR-]: User Library

[CD-]: CD Library

[PL-]: Play list

If you do not specify a library in step **7**, the current album is selected for the timer program and [- - - -] appears in the [Album] column.

- 10** Tap on **Exit** to complete the setting.

To delete all timer program settings, tap on **Delete All** on the timer list screen, and then **OK** in the confirmation screen.

Tuning the Tone Generator (MasterTune)


The digital piano has already been tuned to match the acoustic piano (A3 = 440 Hz). However, you can re-tune the digital piano in accordance with the pitch of the acoustic piano by following the procedure below.

- 1 Tap on **Setup** in the [Main] screen, and then on **M.Tune**.
- 2 Tap on **-** / **+** to tune the Disklavier.
To cancel tuning, tap on **Reset**.
- 3 Tap on **Exit** to complete the operation.

Applying an Effect to Your Voice (Vocal Harmony)

By connecting a microphone to the Disklavier and singing along with the piano, you can enjoy a variety of effects such as adding harmony to your voice and changing the pitch of your voice. You may feel as if you were singing in a bar lounge. It's great fun to use this function.

- 1 Hook up a microphone (not supplied) to the Media Center, and then turn on the microphone.

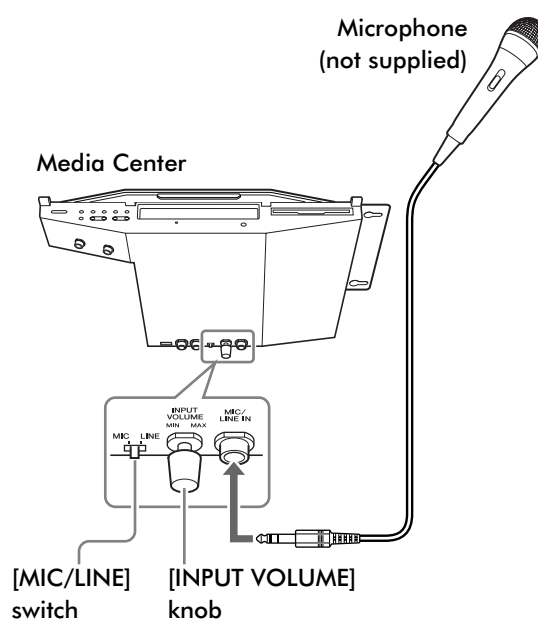

- 2 Set the [MIC/LINE] switch to the [MIC] position.
- 3 Turn the [INPUT VOLUME] knob to adjust the input volume of the microphone.
- 4 Adjust the [MIC] volume on PRC-100. (→ pg. 25)

5 Apply the desired reverb effect.
(→ pg. 40)

6 Tap on  in the [Main] screen.



[Vocal Harmony]
screen


Vocal harmony type


7 Tap on the desired vocal harmony type.

For the entire list, see “Vocal Harmony Type List”.
(→ pg. 76)


8 Tap on .


The [Balance] setting screen appears.

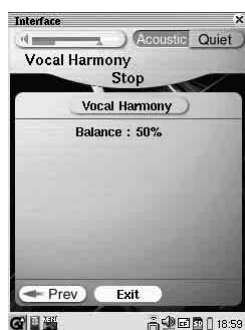



9 Tap on [Balance], and then press  to adjust the balance between your voice and the effect.

Tip: The balance can be adjusted from 0 to 100%.

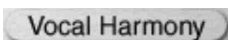

10 Tap on  to activate Vocal Harmony mode.

Each time you tap on , the mode is activated (the color turns to blue) or inactivated.

11 Tap on  to clear the [Vocal Harmony] screen.

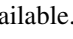Tip: The shortcut button on the [Song] screen is also available. Tap on  to activate the mode above, and on  to inactivate it.

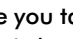

Each time you tap on this button,  and  switches.

Note: The following features are not available while Vocal Harmony Mode is activated.

- Video synchronized playback
- Video synchronized recording

Note: Vocal Harmony Mode does not function while playing back songs in SmartPianoSoft, PianoSoftPlusAudio, and audio CDs or receiving analog MIDI data.

Preparing for Use of Foot Controls/Switches

The optional foot controller (FC7) or the foot control switch (FC4, FC5) can be connected to the Disklavier and the desired function is assigned to them. At the maximum of two controllers/switches can be connected simultaneously.

Assignable functions are as follows:

[Play/Stop]:

Controls starting/stopping of playback. Tempo control is also available (only in the FC7).

[Main Volume]:

Controls the overall volume.

[Voice Volume]:

Controls the volume of the piano voice in Quiet Mode and Headphone Mode.


[Pitch Bend]:

Controls the pitch of the piano voice.

Setting Up the Disklavier for Foot Controls/Switches

- 1 Connect a foot control/switch to the FOOT CNTRL1/2 jack.

Bottom of the Media Center

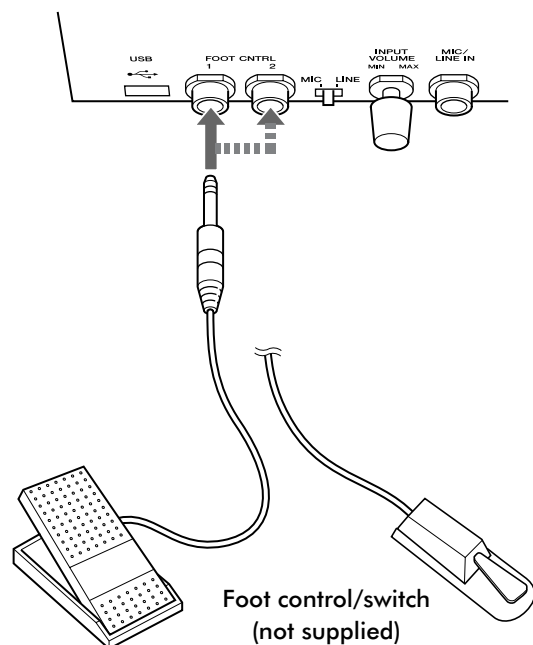

- 2 Tap on **Setup** in the [Main] screen, and then **Foot Cntrl**.



- 3 Tap on [Function] of the desired foot control/switch, and then the desired function.



Assignable functions

- 4 Tap on **Close**.

Go to step 6 when you select the [Play/Stop] function.

- 5 Select the detailed setting.



When [Main Volume]/[Voice Volume] is selected

Tap on [Direction], and then press **Left** / **Right** to select the option.

[Up]: Raises the volume when the foot control/switch is pressed and turns down the volume when released.



[Down]: Lowers the volume when the foot control/switch is pressed and turns up the volume when released.

When [Pitch Bend] is selected

Tap on [Direction], and then press   to select the option.

[Up]: Raises the key when the foot control/switch is pressed and resumes the original pitch when released.

[Down]: Lowers the key when the foot control/switch is pressed and resumes the original pitch when released.

Tap on [Polarity], and then press   to select the option.

[+]: Raises/lowers the key when the foot control/switch is pressed and resumes the original pitch when released.

[-]: Raises/lowers the key when the foot control/switch is released and resumes the original pitch when pressed.

6 Tap on to complete the setting.

Note: You cannot assign the same function to both [Foot Cntrl 1] and [Foot Cntrl 2].

Operating an Optional Foot Control (FC7)

When [Play/Stop] is selected for [Function]

When the control is pressed down all the way, playback will start in the original tempo. When the control is released completely, playback will pause. Playback tempo varies depending on the angle of the controller within the range of 0 to -50%.

When [Main Volume] or [Voice Volume] is selected for [Function] (with [Direction] set to [Down]*¹)

When the control is pressed down all the way, the sound will be muted. When the control is released completely, the volume turns up all the way. The volume varies depending on the angle of the controller.

**1 When [Up] is selected, the direction of control is reversed.*

When [Pitch Bend] is selected for [Function] (with [Polarity] set to [+]*²)

When the control is pressed down all the way, the song will be keyed up to +2 key. When the control is released completely, the original key will resume. The key varies depending on the angle of the controller.

**2 When [-] is selected, the song will be keyed down.*

Operating an Optional Foot Switch (FC4/FC5)

When [Play/Stop] is selected for [Function]

When the switch is pressed, playback will start. When the switch is released, playback will pause.

When [Main Volume] or [Voice Volume] is selected for [Function] (with [Direction] set to [Down]*³)

When the switch is pressed, the sound will be muted. When the switch is released, the original volume will resume.

**3 When [Up] is selected and the switch is pressed, the volume will increase all the way. (There is no effect for [Voice Volume].)*


When [Pitch Bend] is selected for [Function] (with [Polarity] set to [+]*⁴)

When the switch is pressed, the song will be keyed up to +2 key. When the switch is released, the original key will resume.

**4 When [-] is selected and the switch is pressed, the song will be keyed down.*

Hooking Up AV Equipment

If you connect the Disklavier to an audio system, you can hear the sound played/played back on the Disklavier from the connected audio system, and the sound played back on the connected audio system from the Disklavier.

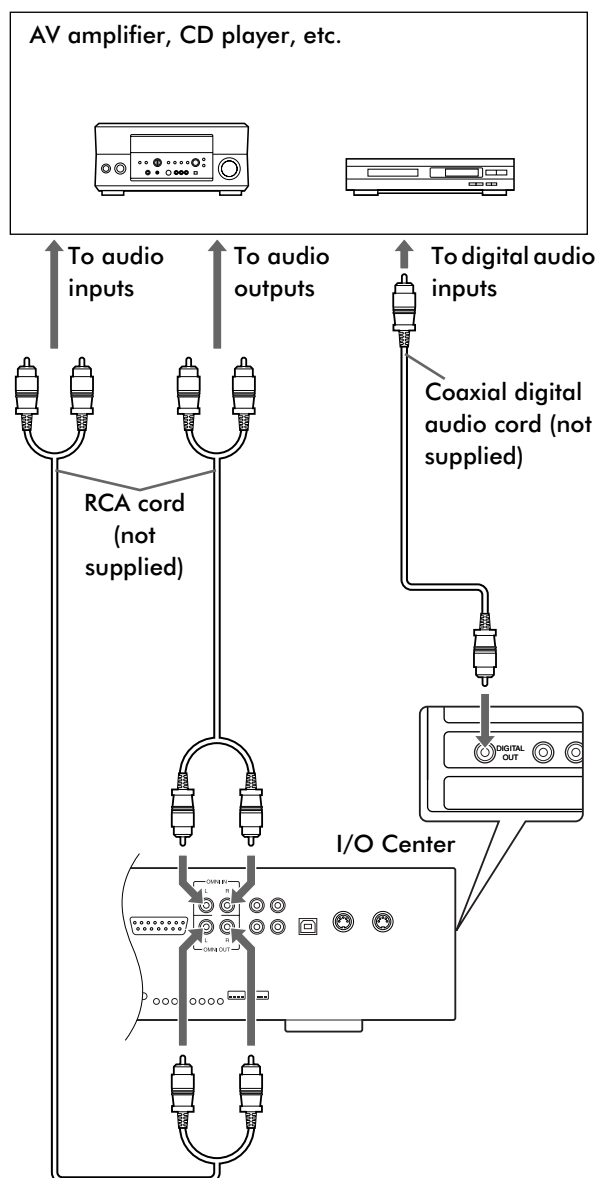

Setting Up the Disklavier for Audio Data Reception/Transmission

You can select the kind of the incoming/going out audio signals. The following options should be set up in advance.

[OMNI IN]

Selects the appropriate option to match the incoming data input to the [OMNI IN] jacks.

[Audio]: Select this when you play back an audio software on the connected CD player, etc. and reproduce the sound from the Monitor speakers*.

[Analog MIDI-YM]:

Select this when you play back PianoSoft-PlusAudio song.

Note: While this option is selected, you cannot adjust the [ONMI IN Vol] value, and Video Synchronized Playback and Vocal Harmony Mode is not available.

[OFF]: Select this when you cancel the data reception from the [OMNI IN] jacks.

[OMNI OUT]

Selects the desired data to be output from the [OMNI OUT] jacks.

[Output]: Select this when you output the same audio signals as the ones for the Monitor speakers*.

[Output+PianoTG]:

Select this when you output the ensemble part and the digital piano sound. (Note that the digital piano sound is also output in Acoustic mode.)

[PianoTG]: Select this when you output only the digital piano sound.

[OFF]: Select this when you cancel the data transmission from the [OMNI OUT] jacks.

[Digital Out]

Selects the desired data to be output from the [DIGITAL OUT] jack.

[OUTPUT]: Select this when you output the same audio signals as the ones for the Monitor speakers*.

[OMNI OUT]:

Select this when you output the same audio signals as the ones to be output from the [OMNI OUT] jacks.

[SYNC OUT]:



Select this when you output the same audio signals as the ones to be output from the [SYNC OUT] jacks.

[OFF]: Select this when you cancel the data transmission from the [DIGITAL OUT] jack.

* Supplied only with the Mark IV Series.

- 1 Tap on  in the [Main] screen, and then on .



- 2 Tap on [OMNI IN]/[OMNI OUT]/[Digital Out], and then press   to select the desired option.

- 3 Tap on  to complete the operation.

Lyric Screen


By hooking up a TV or a monitor display to the I/O Center, lyrics are automatically displayed on the TV or the monitor display during playback a song with lyrics prerecorded.

Note: For purchasing songs with lyrics, consult your Disklavier dealer.

Note: For users in North America, refer to page 27 thru 29 in the “Tablet Controller Operating Manual” as well.

Showing the Lyrics on a TV or a Monitor Display during Playback

- 1 Hook up a TV or a monitor display to the I/O Center.

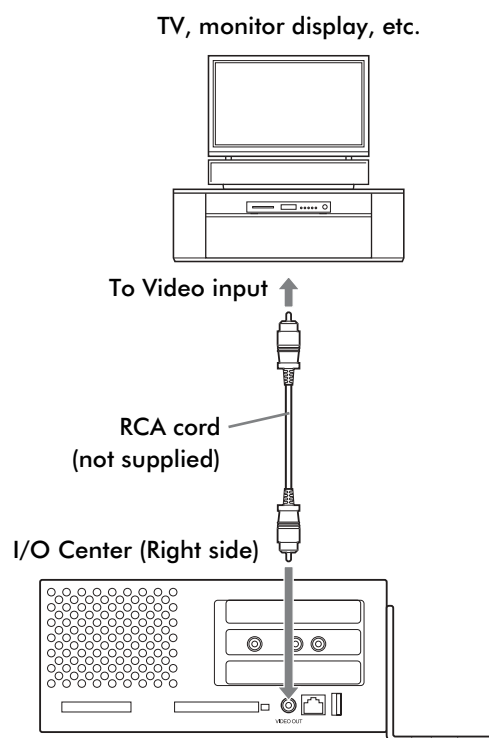

- 2 Turn on the TV or the monitor display, and then select the input mode that corresponds to the connected TV or monitor display.

Continue to next page...

3 Start playback of a song with lyrics on the Disklavier.

The lyrics appear with a colorful background picture. A color bar behind the lyrics stretches gradually as the song goes on to indicate the current playback point.

Note: The lyrics are shown only when the song includes the lyric data.

Changing the Background Picture of the Lyric Screen

A number of colorful background pictures are prepared and categorized in the following subjects: Nature, Flowers, Vacation, World, Textures, Holidays, and Romantic.

1 Show the Lyric Screen on the TV or the monitor display to monitor the picture selection. (See above.)

2 Tap on in the [Main] screen, and then on .

3 Tap on .



4 Tap on [Category], press to select the desired option, and then tap on .

5 Tap on [Picture No.], and then press to select the desired option.

6 Tap on to complete the operation.

Converting MIDI Data to a Standard Form (Strip XP)

Disklavier PRO pianos record highly precise control information (XP events) that becomes part of the MIDI song files. This data is used to achieve accurate playback on the Disklavier PRO, but is not used when the file is played back on general MIDI devices.

When you edit the song with external MIDI products (for example a software sequencer), the relationship between the note data and the XP event as well as the actual performance may not be maintained. There may be cases in which songs edited in this manner cannot be played back normally, depending on the instrument's settings. In such cases, use the Strip XP function to remove the XP event to convert the song to standard MIDI format before using it for playback. Strip XP also makes it possible to reduce the size of MIDI files when desired.

Note: Once the XP event is stripped, the original data cannot be restored. Before converting valuable music data, be sure to backup the original data.

1 Select the song to be converted (→ pg. 12 "Selecting a Song" in "Quick Guide"), and then tap on or .

2 Tap on .



3 Tap on .


4 Tap on after the completion message appears.

Making Backups and Restoring the Song Library

You can make a backup copy of the song libraries and play lists, and restore the songs in the Disklavier. In order to protect your valuable music data, Yamaha strongly recommends that you backup your Mark IV hard drive on a regular basis.

Note: Be sure to use a USB HDD formatted in a FAT32 file system in the following procedure. The NTFS file system is not supported for this function.

Making Backups

- 1 Connect an external USB HDD to the USB port on the Media Center.
- 2 Tap on **Setup** in the [Main] screen, and then **System**.
- 3 Tap on **Next** in the [System] screen, **Next**, and then **Backup Song Data**.
- 4 Tap on **OK**.

- 5 Tap on **Continue**.
 The Disklavier will start making backups.
- 6 Tap on **OK** after the completion message appears, and then **Exit**.

Restoring the Song Library

- 1 Perform steps 1 and 2 in "Making Backups" above.
- 2 Tap on **Next** in the [System] screen, **Next**, and then **Restore Song Data**.
- 3 Tap on **OK**.






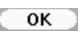
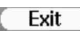
- 4 Tap on **OK**.



- 5 Tap on **Continue**.
 The Disklavier will start restoring the song library.
- 6 Tap on **OK** after the completion message appears, and then **Exit**.

Restoring the Contents in the Demo Album




If the demo songs are erased by chance, they can be restored by following the procedure below.

- 1 Tap on  in the [Main] screen, and then on .
- 2 Tap on .
- 3 Tap on  to start restoring.
- 4 Tap on  to complete the operation.

Note: The contents saved in the demo album will be erased.


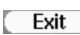
Making an Install Floppy Disk

In the case of updating the Disklavier, be sure to make a install floppy disk.

- 1 Tap on  in the [Main] screen, and then on .
- 2 Load a formatted floppy disk (2HD) to the drive. (→ pg. 20 “Loading and Ejecting a Floppy Disk”)
- 3 Tap on .


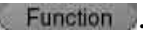

The Disklavier will start making a backup floppy disk.






- 4 Tap on , and then on  to complete the operation.

Formatting a Floppy Disk

You can format a floppy disk.

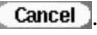- 1 Tap  on in the [Main] screen (→ pg. 12 “Selecting a Song” in “Quick Guide”), and then tap on .
- 2 Tap on .

To cancel erasure, tap on .
- 3 Tap on .
- 4 Tap on  after the completion message appears.

Resetting the Disklavier

If you want to return your Disklavier to its initial factory settings, follow the procedure below.

1 Tap on  in the [Main] screen, and then on .

2 Tap on .



Tap to cancel resetting.

3 Tap on  to start resetting.

4 Tap on  to complete the operation.

Assigning a Specific Function to the ONE TOUCH Button


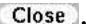
You can assign the ONE TOUCH button on the cradle a series of procedures for an often used function. The followings are the available functions.


[REC]: Sets the Disklavier in recording mode. (→ pg. 41)

[Performance]: Turns on the Performance function. (→ pg. 37)

[Standby]: Turns off the Disklavier. (→ pg. 6 in “Quick Guide”)

1 Tap on  in the [Main] screen, and then on .


2 Tap on [Function], press  to select the desired option, and then on .


3 Tap on  to complete the operation.

To inactivate the **ONE TOUCH** button, select [No Function] in step **2**.


Diagnosing the Disklavier

The piano diagnostics may be required as the occasion demands. In such a case, follow the instructions of your Yamaha dealer and perform the following procedure.

1 Tap on  [Service Center] in the [PRC-100 Menu] screen.

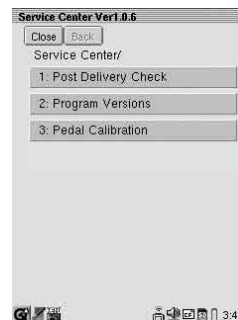

2 Tap on the desired option, and then follow the instructions that appears on the screen.

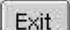3 Tap on  to return to the [PRC-100 Menu] screen.

Piano Voice List

The following table lists the voices in the internal tone generator only for the piano playing in Quiet or Headphone mode. For details on the voice selection, see “Selecting the Voice in Quiet/Headphone Mode” on page 19 in “Quick Guide”.

Instrument Group	Voice Name
Grand Piano	Grand Piano Bright Piano Mellow Piano
E.Piano	Electric Piano Modern Electric Piano DX Electric Piano Galaxy Electric Piano Vintage Electric Piano
Harpsichord	Harpsichord 4’ Harpsichord 4’+8’ Clavinet
Vibraphone	Vibraphone Marimba Celesta
Church Organ	Church Organ Principal Church Organ Flute Church Organ Full
Jazz Organ	Drawbar Organ Jazz Organ Rotor Organ
Guitar	Nylon Guitar Steel Guitar
Bass	Acoustic Bass Finger Bass Fretless Bass A.Bass and Cymbal
Strings	Strings 1 Strings 2 Synth Strings
Choir	Choir Slow Choir Scat
Pad	New Age Pad Warm Pad

Instrument Group	Voice Name
AEM Brass	AEM-Trumpet 1 AEM-Trumpet 2 AEM-Trombone
AEM Sax	AEM-Alt Sax 1 AEM-Alt Sax 2 (for Solo) AEM-Tenor Sax AEM-Baritone Sax
AEM Section	AEM-Brass Section AEM-Sax Section

Ensemble Part Playback Voice List

The following table lists the voices in the internal tone generators for the ensemble part contained in the PianoSoft-Plus, or for MIDI file playback on the Disklavier or external MIDI device (synthesizer, sequencer, etc.). (→ pg. 78 “Enhancing the Disklavier Features by Hooking Up a MIDI Device”)

Group Name	Voice Number	Voice Name
Piano	1	Grand Piano
	2	XG-GrandPno
	3	XG-GrndPnoK
	4	Mellow Piano
	5	XG-MelloGrP
	6	XG-PianoStr
	7	XG-Dream
	8	Bright Piano
	9	XG-BritePno
	10	XG-BritPnoK
	11	XG-E.Grand
	12	XG-ElGrPnoK
	13	XG-Det.CP80
	14	XG-ElGrPno1
	15	XG-ElGrPno2
	16	XG-HnkyTonk
	17	XG-HnkyTnkK
	18	Electric Piano
	19	Modern Elec. Piano
	20	Vintage Elec. Piano
	21	XG-E.Piano1
	22	XG-El.Pno1K
	23	XG-MelloEP1
	24	XG-Chor.EP1
	25	XG-HardEl.P
	26	XG-VX El.P1
	27	XG-60sEl.P

Group Name	Voice Number	Voice Name
Piano	28	DX Electric Piano
	29	Galaxy Elec. Piano
	30	XG-E.Piano2
	31	XG-El.Pno2K
	32	XG-Chor.EP2
	33	XG-DX Hard
	34	XG-DXLegend
	35	XG-DX Phase
	36	XG-DX+Analg
	37	XG-DXKotoEP
	38	XG-VX El.P2
	39	Harpsichord 4'
	40	Harpsichord 4'+8'
	41	XG-Harpsi.
	42	XG-Harpsi.K
	43	XG-Harpsi.2
	44	XG-Harpsi.3
	45	Clavinet
	46	XG-Clavi.
	47	XG-Clavi. K
	48	XG-ClaviWah
Percussion	49	XG-PulseClv
	50	XG-PierceCl
	51	Celesta
	52	XG-Celesta
	53	XG-Glocken
	54	XG-MusicBox
	55	XG-Orgel
	56	Vibraphone
	57	XG-Vibes
	58	XG-VibesK
	59	XG-HardVibe
	60	Marimba

Continue to next page...

Group Name	Voice Number	Voice Name
Percussion	61	XG-Marimba
	62	XG-MarimbaK
	63	XG-SineMrmb
	64	XG-Balafon2
	65	XG-Log Drum
	66	XG-Xylophon
	67	XG-TubulBel
	68	XG-ChrchBel
	69	XG-Carillon
	70	XG-Dulcimer
	71	XG-Dulcimr2
	72	XG-Cimbalom
	73	XG-Santur
Organ	74	Drawbar Organ
	75	Jazz Organ
	76	XG-DrawOrgn
	77	XG-DetDrwOr
	78	XG-60sDrOr1
	79	XG-60sDrOr2
	80	XG-70sDrOr1
	81	XG-DrawOrg2
	82	XG-60sDrOr3
	83	XG-EvenBar
	84	XG-16+2"2/3
	85	XG-Organ Ba
	86	XG-70sDrOr2
	87	XG-CheezOrg
	88	XG-DrawOrg3
	89	XG-PercOrgn
	90	XG-70sPcOr1
	91	XG-DetPrcOr
	92	XG-LiteOrg
	93	XG-PercOrg2
	94	Rotor Organ

Group Name	Voice Number	Voice Name
Organ	95	XG-RockOrgn
	96	XG-RotaryOr
	97	XG-SloRotar
	98	XG-FstRotar
	99	Ch. Organ Principal
	100	Ch. Organ Flute
	101	Ch. Organ Full
	102	XG-ChrchOrg
	103	XG-ChurOrg3
	104	XG-ChurOrg2
	105	XG-NotreDam
	106	XG-OrgFlute
	107	XG-TrmOrgFl
	108	XG-ReedOrgn
	109	XG-Puff Org
Guitar	110	XG-Acordion
	111	XG-Accordlt
	112	XG-Harmnica
	113	XG-Harmo 2
	114	XG-TangoAcd
	115	XG-TngoAcd2
	116	Nylon Guitar
	117	XG-NylonGtr
	118	XG-NylonGt2
	119	XG-NylonGt3
	120	XG-VelGtHrm
	121	XG-Ukulele
	122	Steel Guitar
	123	XG-SteelGtr
	124	XG-SteelGt2
	125	XG-12StrGtr
	126	XG-Nyln&Stl
	127	XG-Stl&Body
	128	XG-Mandolin

Group Name	Voice Number	Voice Name
Guitar	129	XG-Jazz Gtr
	130	XG-MelloGtr
	131	XG-JazzAmp
	132	XG-CleanGtr
	133	XG-ChorusGt
	134	XG-Mute.Gtr
	135	XG-FunkGtr1
	136	XG-MuteStlG
	137	XG-FunkGtr2
	138	XG-Jazz Man
	139	XG-Ovrdrive
	140	XG-Gt.Pinch
	141	XG-Dist.Gtr
	142	XG-FeedbkGt
	143	XG-FeedbGt2
	144	XG-GtrHarmo
	145	XG-GtFeedbk
	146	XG-GtrHrmo2
	147	Acoustic Bass
	148	A.Bass and Cymbal
	149	XG-Aco.Bass
	150	XG-JazzRthm
	151	XG-VXUprght
	152	Finger Bass
	153	XG-FngrBass
	154	XG-FingrDrk
	155	XG-FlangeBa
	156	XG-Ba&DstEG
	157	XG-FngrSlap
	158	XG-FngBass2
	159	XG-ModAlem
	160	XG-PickBass
	161	XG-MutePkBa
	162	Fretless Bass

Group Name	Voice Number	Voice Name
Guitar	163	XG-Fretless
	164	XG-Fretles2
	165	XG-Fretles3
	166	XG-Fretles4
	167	XG-SynFretl
	168	XG-Smooth
	169	XG-SlapBas1
	170	XG-ResoSlap
	171	XG-PunchThm
	172	XG-SlapBas2
	173	XG-VeloSlap
	174	XG-SynBass1
	175	XG-SynBa1Dk
	176	XG-FastResB
	177	XG-AcidBass
	178	XG-Clv Bass
	179	XG-TeknoBa
	180	XG-Oscar
	181	XG-SqrBass
	182	XG-RubberBa
	183	XG-Hammer
Strings	184	XG-SynBass2
	185	XG-MelloSB1
	186	XG-Seq Bass
	187	XG-ClkSynBa
	188	XG-SynBa2Dk
	189	XG-SmthBa 2
	190	XG-ModulrBa
	191	XG-DX Bass
	192	XG-X WireBa
	193	XG-Violin
	194	XG-SlowVln
	195	XG-Viola

Continue to next page...

Group Name	Voice Number	Voice Name
Strings	196	XG-Cello
	197	XG-Contrabs
	198	XG-Trem.Str
	199	XG-SlowTrStr
	200	XG-Susp Str
	201	XG-Pizz.Str
	202	XG-Harp
	203	XG-YangChin
	204	XG-Timpani
Ensemble	205	Strings 1
	206	XG-Strings1
	207	XG-S.Strngs
	208	XG-SlowStr
	209	XG-ArcoStr
	210	XG-60sStrng
	211	XG-Orchestr
	212	XG-Orchstr2
	213	XG-TremOrch
	214	XG-VeloStr
	215	Strings 2
	216	XG-Strings2
	217	XG-S.SlwStr
	218	XG-LegatoSt
	219	XG-Warm Str
	220	XG-Kingdom
	221	XG-70s Str
	222	XG-Str Ens3
	223	Synth Strings
	224	XG-Syn.Str1
	225	XG-ResoStr
	226	XG-Syn Str4
	227	XG-SS Str
	228	XG-Syn.Str2
	229	Choir

Group Name	Voice Number	Voice Name
Ensemble	230	Slow Choir
	231	Scat
	232	XG-ChoirAah
	233	XG-S.Choir
	234	XG-Ch.Aahs2
	235	XG-MelChoir
	236	XG-ChoirStr
	237	XG-VoiceOoh
	238	XG-SynVoice
	239	XG-SynVox2
	240	XG-Choral
	241	XG-AnaVoice
	242	XG-Orch.Hit
	243	XG-OrchHit2
	244	XG-Impact
Brass	245	AEM-Trumpet 1
	246	AEM-Trumpet 2
	247	XG-Trumpet
	248	XG-Trumpet2
	249	XG-BriteTrp
	250	XG-WarmTrp
	251	AEM-Trombone
	252	XG-Trombone
	253	XG-Trmbone2
	254	XG-Tuba
	255	XG-Tuba 2
	256	XG-Mute.Trp
	257	XG-Fr.Horn
	258	XG-FrHrSolo
	259	XG-FrHorn2
	260	XG-HornOrch
	261	XG-BrasSect
	262	XG-Tp&TbSec
	263	XG-BrssSec2

Group Name	Voice Number	Voice Name
Brass	264	XG-HiBrass
	265	XG-MelloBras
	266	XG-SynBras1
	267	XG-QuackBr
	268	XG-RezSynBr
	269	XG-PolyBrss
	270	XG-SynBras3
	271	XG-JumpBrss
	272	XG-AnaVelBr
	273	XG-AnaBrss1
	274	XG-SynBras2
	275	XG-Soft Brs
	276	XG-SynBras4
	277	XG-ChorBrss
	278	XG-VelBras2
	279	XG-AnaBras2
Reed	280	XG-SprnoSax
	281	AEM-Alto Sax 1
	282	AEM-Alto Sax 2
	283	XG-Alto Sax
	284	XG-Sax Sect
	285	XG-HyprAlto
	286	AEM-Tenor Sax
	287	XG-TenorSax
	288	XG-BrthTnSx
	289	XG-SoftTenr
	290	XG-TnrSax 2
	291	AEM-Baritone Sax
	292	XG-Bari.Sax
	293	XG-Oboe
	294	XG-Eng.Horn
	295	XG-Bassoon
	296	XG-Clarinet
Pipe	297	XG-Piccolo

Group Name	Voice Number	Voice Name
Pipe	298	XG-Flute
	299	XG-Recorder
	300	XG-PanFlute
	301	XG-Bottle
	302	XG-Shakhchi
	303	XG-Whistle
	304	XG-Ocarina
Synth Lead	305	XG-SquareLd
	306	XG-Square 2
	307	XG-LMSquare
	308	XG-Hollow
	309	XG-Shmoog
	310	XG-Mellow
	311	XG-SoloSine
	312	XG-SineLead
	313	XG-Saw.Lead
	314	XG-Saw 2
	315	XG-ThickSaw
	316	XG-DynaSaw
	317	XG-DigiSaw
	318	XG-Big Lead
	319	XG-HeavySyn
	320	XG-WaspySyn
	321	XG-PulseSaw
	322	XG-Dr. Lead
	323	XG-VeloLead
	324	XG-Seq Ana
	325	XG-CaliopLd
	326	XG-Pure Pad
	327	XG-Chiff Ld
	328	XG-Rubby
	329	XG-CharanLd
	330	XG-DistLead

Continue to next page...

Group Name	Voice Number	Voice Name
Synth Lead	331	XG-WireLead
	332	XG-Voice Ld
	333	XG-SynthAah
	334	XG-VoxLead
	335	XG-Fifth Ld
	336	XG-Big Five
	337	XG-Bass &Ld
	338	XG-Big&Low
	339	XG-Fat&Prky
	340	XG-SoftWurl
	341	New Age Pad
	342	XG-NewAgePd
	343	XG-Fantasy2
	344	Warm Pad
	345	XG-Warm Pad
	346	XG-ThickPad
	347	XG-Soft Pad
	348	XG-SinePad
	349	XG-Horn Pad
	350	XG-RotarStr
	351	XG-PolySyPd
	352	XG-PolyPd80
	353	XG-ClickPad
	354	XG-Ana Pad
	355	XG-SquarPad
	356	XG-ChoirPad
	357	XG-Heaven2
	358	XG-Itopia
	359	XG-CC Pad
	360	XG-BowedPad
	361	XG-Glacier
	362	XG-GlassPad
	363	XG-MetalPad
	364	XG-Tine Pad

Group Name	Voice Number	Voice Name
Synth Lead	365	XG-Pan Pad
	366	XG-Halo Pad
	367	XG-SweepPad
	368	XG-Shwimmer
	369	XG-Converge
	370	XG-PolarPad
	371	XG-Celstial
Synth Effects	372	XG-Rain
	373	XG-ClaviPad
	374	XG-HrmoRain
	375	XG-AfrcnWnd
	376	XG-Caribbean
	377	XG-SoundTrk
	378	XG-Prologue
	379	XG-Ancestrl
	380	XG-Crystal
	381	XG-SynDrCmp
	382	XG-Popcorn
	383	XG-TinyBell
	384	XG-RndGlock
	385	XG-GlockChi
	386	XG-ClearBel
	387	XG-ChorBell
	388	XG-SynMalet
	389	XG-SftCryst
	390	XG-LoudGlok
	391	XG-XmasBell
	392	XG-VibeBell
	393	XG-DigiBell
	394	XG-AirBells
	395	XG-BellHarp
	396	XG-Gamelmba
	397	XG-Atmosphr
	398	XG-WarmAtms

Group Name	Voice Number	Voice Name
Synth Effects	399	XG-HollwRls
	400	XG-NylonEP
	401	XG-NylnHarp
	402	XG-Harp Vox
	403	XG-AtmosPad
	404	XG-Planet
	405	XG-Bright
	406	XG-FantaBel
	407	XG-Smokey
	408	XG-Goblins
	409	XG-GobSyn
	410	XG-50sSciFi
	411	XG-Ring Pad
	412	XG-Ritual
	413	XG-ToHeaven
	414	XG-Night
	415	XG-Glisten
	416	XG-BelChoir
	417	XG-Echoes
	418	XG-EchoPad2
	419	XG-Echo Pan
	420	XG-EchoBell
	421	XG-Big Pan
	422	XG-SynPiano
	423	XG-Creation
	424	XG-Stardust
	425	XG-Reso Pan
	426	XG-Sci-Fi
	427	XG-Starz
	428	XG-Sitar
	429	XG-DetSitar
	430	XG-Sitar 2
	431	XG-Tambra
	432	XG-Tamboura

Group Name	Voice Number	Voice Name
Synth Effects	433	XG-Banjo
	434	XG-MuteBnjo
	435	XG-Rabab
	436	XG-Gopichnt
	437	XG-Oud
	438	XG-Shamisen
	439	XG-Koto
	440	XG-T.Koto
	441	XG-Kanoon
	442	XG-Kalimba
	443	XG-Bagpipe
	444	XG-Fiddle
	445	XG-Shanai
	446	XG-Shanai2
	447	XG-Pungi
	448	XG-Hichriki
Percussive	449	XG-TnklBell
	450	XG-Bonang
	451	XG-Gender
	452	XG-Gamelan
	453	XG-S.Gamlan
	454	XG-Rama Cym
	455	XG-AsianBel
	456	XG-Agogo
	457	XG-SteelDrm
	458	XG-GlasPerc
	459	XG-ThaiBell
	460	XG-WoodBlok
	461	XG-Castanet
	462	XG-TaikoDrm
	463	XG-Gr.Cassa
	464	XG-MelodTom
	465	XG-Mel Tom2

Continue to next page...

Group Name	Voice Number	Voice Name
Percussive	466	XG-Real Tom
	467	XG-Rock Tom
	468	XG-Syn.Drum
	469	XG-Ana Tom
	470	XG-ElecPerc
	471	XG-RevCymb1
	472	XG-FretNoiz
	473	XG-BrthNoiz
	474	XG-Seashore
	475	XG-Tweet
	476	XG-Telphone
	477	XG-Helicptr
	478	XG-Applause
	479	XG-Gunshot
SFX Voice	491	XG-CuttngNz
	492	XG-CttngNz2
	493	XG-Str Slap
	494	XG-Fl.KClk
	495	XG-Rain
	496	XG-Thunder
	497	XG-Wind
	498	XG-Stream
	499	XG-Bubble
	500	XG-Feed
	501	XG-Dog
	502	XG-Horse
	503	XG-Bird
	504	XG-Ghost
	505	XG-Maou
	506	XG-Tel.Dial
	507	XG-DoorSqek
	508	XG-Door Slam
	509	XG-Scratch
	510	XG-Scratch 2

Group Name	Voice Number	Voice Name
SFX Voice	511	XG-WindChm
	512	XG-Telphon2
	513	XG-CarEngin
	514	XG-Car Stop
	515	XG-Car Pass
	516	XG-CarCrash
	517	XG-Siren
	518	XG-Train
	519	XG-Jetplane
	520	XG-Starship
	521	XG-Burst
	522	XG-Coaster
	523	XG-SbMarine
	524	XG-Laughing
	525	XG-Scream
	526	XG-Punch
	527	XG-Heart
	528	XG-FootStep
	529	XG-MchinGun
	530	XG-LaserGun
	531	XG-Xplosion
	532	XG-FireWork

Drum Voice List

The following table lists the drum voice in the internal tone generators for MIDI file playback on the Disklavier or external MIDI device (synthesizer, sequencer, etc.). (→ pg. 78 “Enhancing the Disklavier Features by Hooking Up a MIDI Device”)

Group Name	Voice Number	Drum Voice Name
Drum	480	XG-StandKit
	481	XG-Stnd2Kit
	482	XG-Room Kit
	483	XG-Rock Kit
	484	XG-ElectKit
	485	XG-AnalgKit
	486	XG-Jazz Kit
	487	XG-BrushKit
	488	XG-ClascKit
	489	XG-SFX Kit1
	490	XG-SFX Kit2

Vocal Harmony Type List

The following table lists the available vocal harmony types.

For details on the type selection, see “Applying an Effect to Your Voice (Vocal Harmony)” on page 57.

Vocal Harmony Type	Vocal Harmony Mode
Instrument Scat	Vocoder
Octave Up Scat	Vocoder
Auto Key Harmony	Vocoder
Auto Harmony-M	Vocoder
Auto Harmony-F	Vocoder
Octave Up	Chromatic
Octave Down	Chromatic
Country Quartet	Vocoder
Closed Men Quartet	Vocoder
Mix Acap Quartet	Vocoder
Womem Choir	Vocoder
Jazz Sisters	Vocoder
Standard Duet	Vocoder
Men Choir	Vocoder
Closed Choir	Vocoder
Girl in Duet	Vocoder
Speedy Mouse	Chromatic
High Male Quartet	Vocoder
Jazz Quartet	Vocoder
Mixed Choir	Vocoder
Country Girls	Vocoder
Sister Trio	Vocoder
Country Men	Vocoder
A Capella Boy	Vocoder
A Capella Mix	Vocoder
Gospel Diva	Vocoder
Lisa and Tina	Vocoder
Acap Mem Quartet	Vocoder
Jazz Mem Choir	Vocoder

Continue to next page...

Vocal Harmony Type	Vocal Harmony Mode
Jazz Closed Cho	Vocoder
Jazz Women Cho	Vocoder
Ladies Quartet	Vocoder
Sing B+G	Vocoder
Barber shop	Vocoder
Jazz Mixed Cho	Vocoder
Dream Girls	Vocoder
Sing the Bass	Chromatic
Falsetto Duet	Vocoder
Falsetto Trio	Vocoder
Falsetto Dia	Vocoder
Fal A Capella	Vocoder
Falsetto Jazz	Vocoder
2 Unison Low	Vocoder
3 Unison Low	Vocoder
Diatonic Jazz	Vocoder
Diatonic Girl	Vocoder
A Capella Dia	Vocoder
Chordal XG	Vocoder
Karaoke Auto	Vocoder
Karaoke Mode	Vocoder
Karaoke Girl	Vocoder
Karaoke Pitch	Vocoder
2 Unison High	Vocoder
3 Unison High	Vocoder
Vocoder Auto Upper	Vocoder
Vocoder Auto Lower	Vocoder
DetuneXG	Detune
VocoderXG	Vocoder
Vocoder Mode Upper	Vocoder
Vocoder Mode Lower	Vocoder
Vocoder Girl Upper	Vocoder
Vocoder Girl Lower	Vocoder
Vocoder PitchUpper	Vocoder
Vocoder PitchLower	Vocoder

Vocal Harmony Type	Vocal Harmony Mode
ChromaticXG	Chromatic
Voice & Inst	Vocoder


Enhancing the Disklavier Features by Hooking Up a MIDI Device

MIDI (an acronym for Musical Instrument Digital Interface) allows electronic device (synthesizers, etc.) to interact and work in synchronization with other MIDI compatible device. Disklavier enables you to enjoy a variety of MIDI features by connecting a MIDI device or computer to the Disklavier's I/O Center.

Note: When you use the USB connection, it is required to install the USB driver to the connected device. In such a case, visit the following website and download the driver.

http://www.global.yamaha.com/download/usb_midi/

Hooking Up a MIDI Device

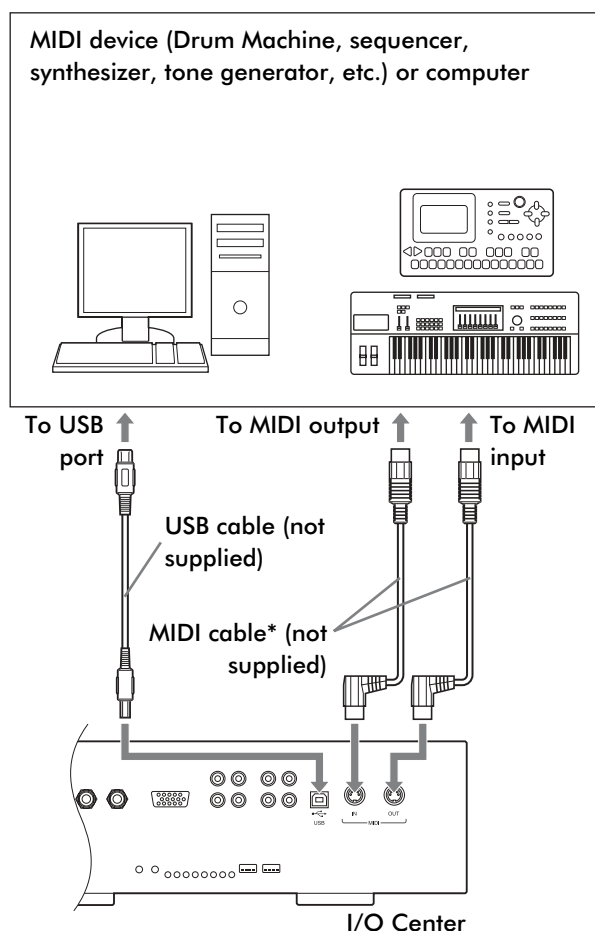

* Be sure to use the commercially available MIDI cable with the L-shaped connector on the I/O Center end.

Setting Up the Disklavier for MIDI Data Reception (MIDI IN)

The Disklavier can play back the MIDI data being received from the connected MIDI device as well as the software loaded or stored in the Disklavier itself. The following options should be set up in advance.

[Port]

Selects the terminal/port used for the data reception.

[MIDI]: Select this when the MIDI device is connected to MIDI IN terminal.

[USB]: Select this when the MIDI device is connected to USB port on the front of the I/O Center.

[Piano Rcv Ch]

The MIDI data consists of multi channels that are respectively assigned to a certain instrument's part. This option assigns the desired channel(s) to the piano part(s) that is (are) played back on the Disklavier's keyboard.

[##]: Select this when you assign no channel to the piano part.

[01] thru [16]: Select the desired channel to which you assign the piano part.

[HP]: Select this when you assign the "01" and "02" channels to the piano parts, and the "03" channel to the pedal part.

[1+2]: Select this when the "01" and "02" channels are assigned to the piano parts.

[Prg]: Selects the smallest number channel assigned to the piano group voice (→ pg. 68) to be played on the Disklavier.

[Prg(All)]: Selects all channels assigned to the piano group voice (→ pg. 68) to be played on the Disklavier.

[Delay]



When the Disklavier receives two kinds of data (strong and weak note) at the same time, the weak note sounds a little bit later than the strong one due to the characteristics of the Disklavier's mechanism. To eliminate this delay in the sound reproduction and the notes are sounded in accurate timing at 500 millisecond after the data reception, usually a delay is applied to the incoming MIDI data.



[ON]: Select this when you apply this delay to the incoming MIDI data.

[OFF]: Select this when you do not apply this delay.

1 Tap on  in the [Main] screen, and then on .

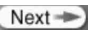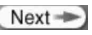

The MIDI screen consists of three screens. Tap on  or  to switch the screen.

2 Tap on [Port]/[Piano Rcv Ch]/[Delay], and then press   to select the desired option.

3 Tap on  to complete the setup.

Setting Up the Disklavier for MIDI Data Transmission (MIDI OUT)

The Disklavier can transmit the information of piano playing/ensemble part playback on the Disklavier as the MIDI data to the connected MIDI device to reproduce the sound with its sound generator, etc. or to record the MIDI data. The following options should be set up in advance.

[Port]

Selects the terminal/port used for the data transmission.

[MIDI]: Select this when the MIDI device is connected to MIDI OUT terminal.

[USB]: Select this when the MIDI device is connected to USB port on the front of the I/O Center.

[Transmit]

Selects one of the following parts to be transmitted to the connected MIDI device.

[ESBL Out]: Select this when you transmit the ensemble part played back on the Disklavier.

[KBD Out]: Select this when you transmit the piano part played on the Disklavier.

[P-Part ESBL Out]

Selects the channel(s) to which the piano part is assigned.


[ON]: Select this when you assign the piano parts to both the piano and the ensemble channels at data transmission.

[OFF]: Select this when you assign the piano parts to only the piano channels at data transmission.

1 Tap on  in the [Main] screen, and then on .

2 Tap on  /  so that the following screen appears.



3 Tap on [Port]/[Transmit]/[P-Part ESBL Out], and then press  to select the desired option.

4 Tap on  to complete the setup.

Setting Up the Disklavier for Keyboard Playing Data Transmission (KBD OUT)

Besides the [MIDI OUT] options, more detailed setups for the keyboard playing data transmission is available. The following options should be set up in advance.

[Out Ch]

Assigns the piano part to the desired channels.

[##]: Select this when you assign no channel to the piano part.

[01] thru [16]:

Select the desired channel to which you assign the piano part.

[HP]: Select this when you transmit the ON/OFF pedal data to the “01” and the half-pedal data to the “03”. (This option is prepared for the data format used on the former version of the Disklavier.)

[Local]

Selects whether you reproduce or not the piano part playing with the Disklavier’s internal tone generator.

[ON]: Select this when you reproduce the piano part with the Disklavier’s internal tone generator.

[OFF]: Select this when you reproduce the song (played on the Disklavier) on the external MIDI device. This option inactivates the internal tone generator to prevent both the internal and external tone generator sound at the same time.

[Split]

Sets the split point on the desired note that divides the keyboard into left-hand and right-hand part. The selected note and the notes lower than that note are assigned to the channel set in [Out Ch] option, and the notes higher than that note are assigned to the channel next to the channel set in [Out Ch] option.

[A-1] thru [C7]:

Select the desired note as the split point.

[OFF]:

Select this when you assign all the notes to one channel.



[Trans L]


Transposes the left-hand part to the desired key at transmission.



[Trans R]


Transposes the right-hand part to the desired key at transmission.

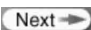1 Tap on  in the [Main] screen, and then on .

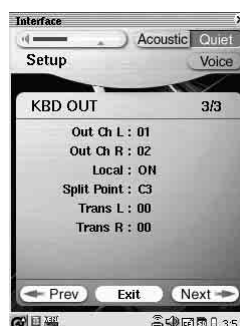2 Tap on  /  so that the following screen appears.




3 Tap on [Out Ch]/[Local]/[Split]/[Trans L]/[Trans R], and then press   to select/adjust the selected option.

4 Tap on  to complete the operation.

If you are having difficulty operating your Disklavier, see if any of the symptoms listed below apply to your problem and follow the recommended remedy.

The Disklavier does not turn on.

- Make sure that the Power Supply unit is securely connected to an AC wall outlet with the supplied power cord. (→ pg. 14)
- Make sure that the Mains switches on both the Power Supply unit and the I/O Center are turned on.
- When the  does not light green and stays flashing green several minutes after the I/O Center is turned on, turn the Power Supply unit off, wait approximately 10 seconds or more, and then turn the unit back on. (→ pg. 4 “Turning the Disklavier On” in “Quick Guide”)

No sound is heard from the supplied Monitor speakers.

- Make sure the Monitor speakers’ AC power cables are connected to the SWITCHED AC outlets on the Power Supply unit.
- Make sure that the POWER switches on both Monitor speakers are turned on.
- Make sure the Monitor speakers are connected to the OUTPUT jacks on the I/O Center with the supplied speaker cords. (→ pg. 13)
- Make sure that the overall volume is adequately turned up on the Pocket Controller. (→ pg. 12 “Adjusting the Overall Volume” in “Quick Guide”)
- Make sure that the volume adjusted in [Balance] screen is adequately turned up on the Pocket Controller. (→ pg. 25 “Adjusting the Volume Balance among the Keyboard Playing, Ensemble Sound, Software Playback, and Microphone’s Input”)

- In Quiet mode, no sound is heard other than the solo piano sound during playback of a PianoSoft Solo song.
- The Monitor speakers are not supplied with the Disklavier PRO Series. In such a case, prepare active speakers equivalent to the Monitor speakers supplied with the Mark IV Series. (→ pg. 93 “Specifications”)

The Disklavier cannot be controlled on the Pocket Controller.

- The Pocket Controller is beyond the maximum operating range (approx. 20 m (65.6 ft.)). In such a case, move closer to the Disklavier.
- Make sure that the CF wireless LAN card is securely inserted into the Pocket Controller’s CF card slot. When you reinsert the card, be sure to reboot the Pocket Controller. (→ pg. 17)


The Disklavier does not read a song file.

- The maximum number of the readable files in an album (folder) is 999.
- Make sure that the name of the SMF song has an extension as “.MID”/“.mid” and the E-SEQ song has “.FIL”/“.fil”.

The playback order differs from the order on another device.

- The playback order depends on the recording software or other factors. Naming the file starting from numbers such as 01, 02, etc. may solve the problem.

The Disklavier does not recognize an USB flash memory.

- The Disklavier restricts the usage of the USB flash memories to seven identical ones by recognizing the ID information of the memories that have been inserted to the USB  port. (→ pg. 2) If you use USB flash memories other than the ones already recognized, shut down the Disklavier once before using them.
- Certain USB storage devices may not function properly with the Disklavier PRO/Mark IV Series. For a list of compatible products, please visit www.yamaha.com/disklavier.

The Disklavier does not read a CD-R/-RW.

- The song files should be formatted in ISO 9660 LEVEL1. The Disklavier may not read song files other than this format.

Some notes drop out during playback.

- In Acoustic mode, when a piano song is played back at a low volume, some notes in trill or tranquil part may drop out. This is a characteristic of the Disklavier and not a malfunction.

PianoSmart playback cannot be performed.

- Makes sure that the numbers indicated on both the SmartPianoSoft floppy disk and the paired CD are the same.

The I/O Center becomes hot.

- Although the chassis of the I/O Center may become hot while the Disklavier is turned on (also in Standby mode), this is not a malfunction.

Noise is heard from the I/O Center.

- The I/O Center contains HDD (Hard Disk Drive) and the HDD makes a disk spinning noise. This is not a malfunction.

Error Messages

While operating your Disklavier, an error message may appear in the display. If an error message appears, refer to the table below for an explanation of the message.



Situation	Error Messages	Description
You tried to copy copy-protected song files into a removable medium.	CANNOT EXECUTE - PROTECTED FILE	The commercially available copy-protected song files cannot be copied into any removable media.
You tried to copy song files into an album that already contains 3,000 song files.	CANNOT EXECUTE - Exceeds limit of 3,000 songs	The maximum number of the files in an album (folder) is 3,000.
You tried to copy song files into a library that already contains 10,000 songs.	CANNOT EXECUTE - Exceeds limit of 10,000 songs	The maximum number of songs in a library or playlist is limited to 10,000.
You tried to copy song files into a certain medium.	NOT ENOUGH DISK SPACE	The storage space in the destination medium is not enough.
You tried to erase entire contents in a floppy disk. ([Delete All])	CANNOT EXECUTE - DISK FORMAT	The floppy disk is not formatted in MS-DOS. In such a case, reformat on a Windows PC.
	CANNOT EXECUTE - PROTECTED FILE EXIST	When the floppy disk contains copy-protected song files, this function cannot be executed.
You tried to copy an album to a floppy disk in E-SEQ (Piano1) format.	CANNOT EXECUTE - NOT 2DD DISK	The destination floppy disk must be 2DD.
	CANNOT EXECUTE - Exceeds limit of 60 songs	The maximum number of songs on an E-SEQ type disk is limited to 60.

Screen Transition Diagrams


[Main] screens




(→ pg. 9 in "Quick Guide",
and 37, 41)

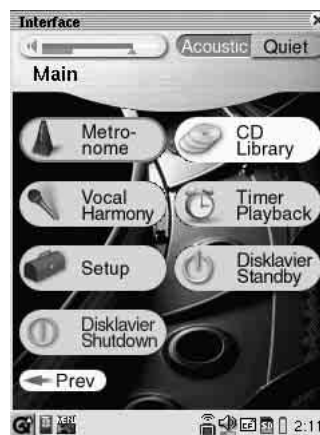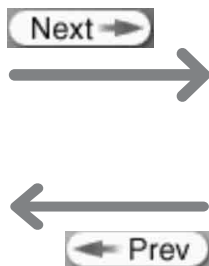


(→ pg. 6, 7, 9 in "Quick Guide", and
37, 55, 57, 59, 62 – 66, 79 – 81)

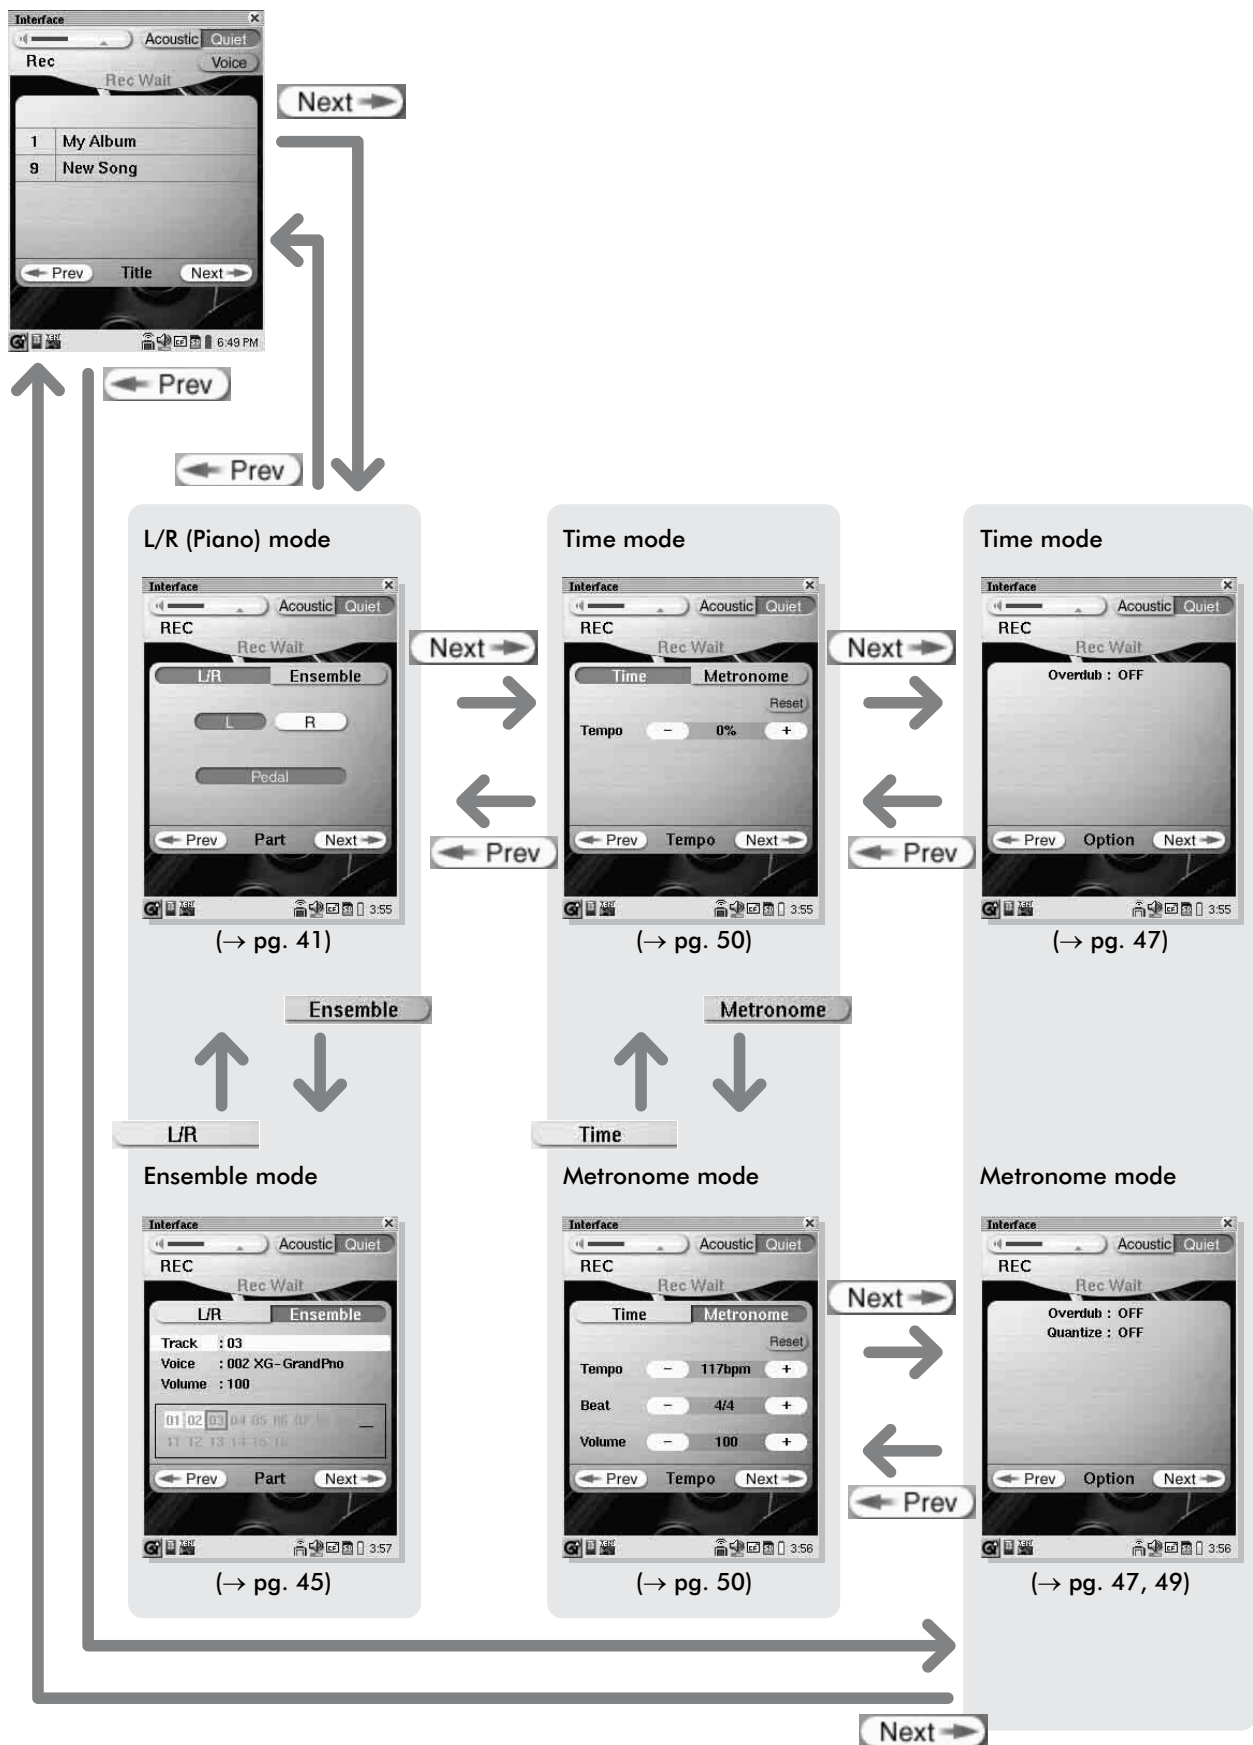
[Rec] screens

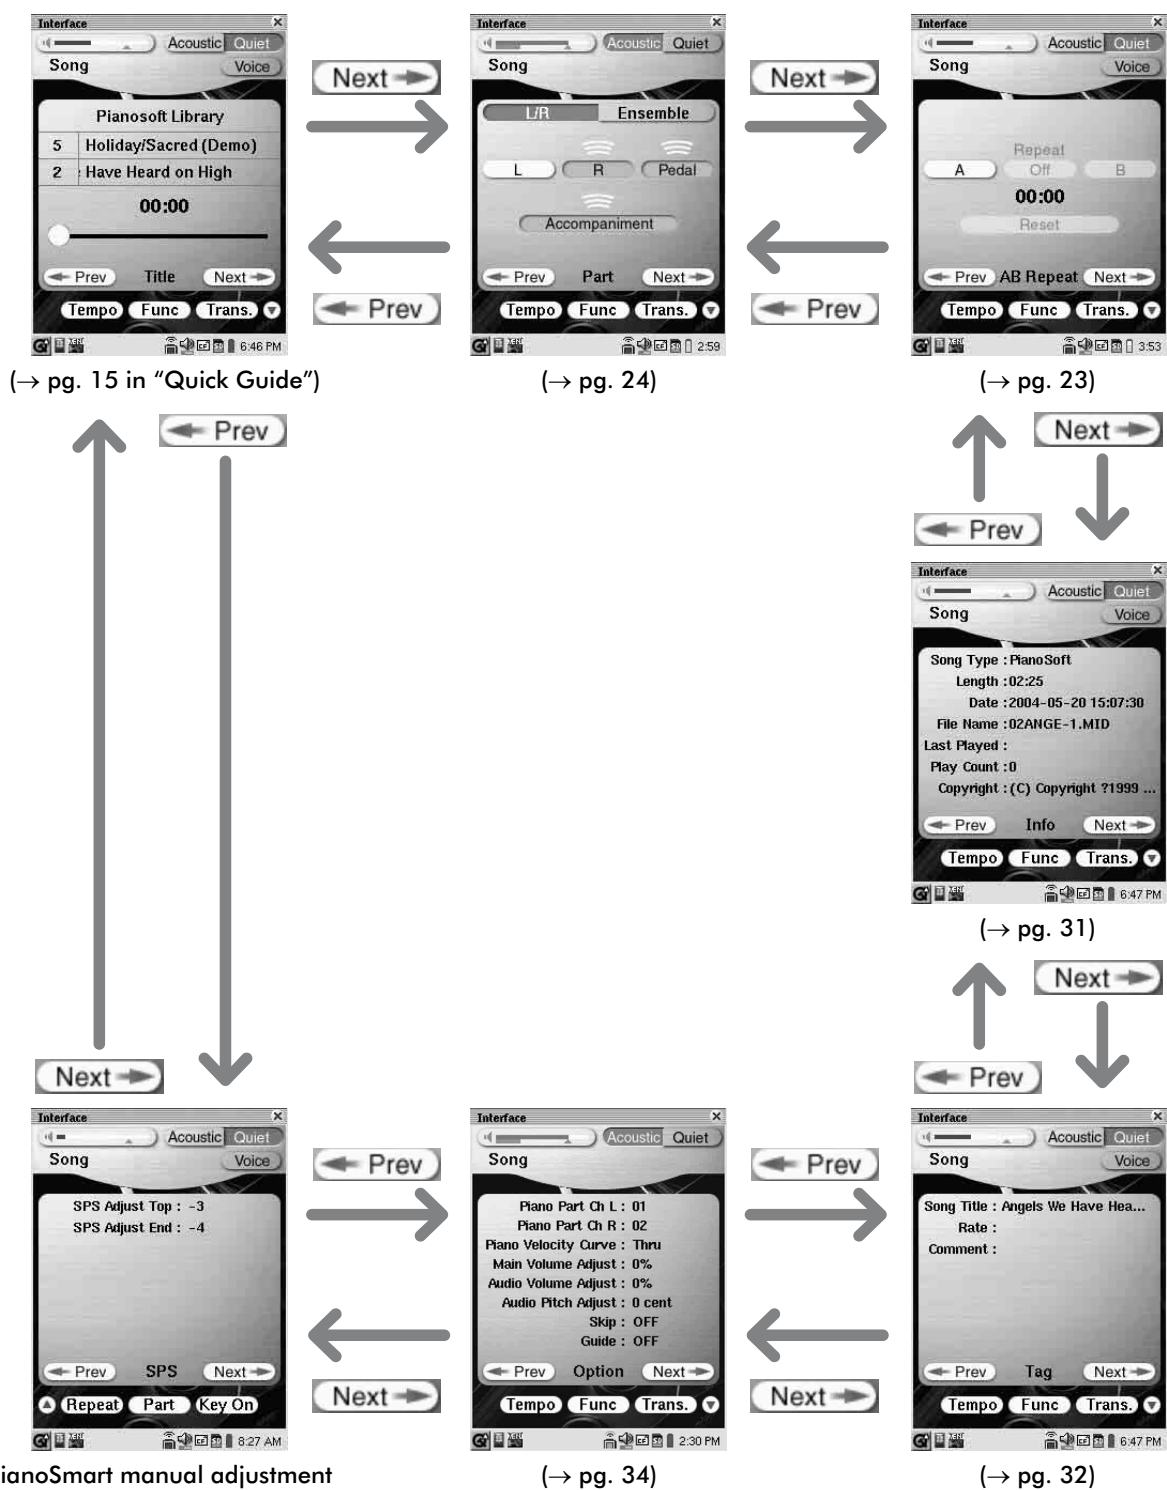[Song] screens


* For normal use, modification of these setups are not required.

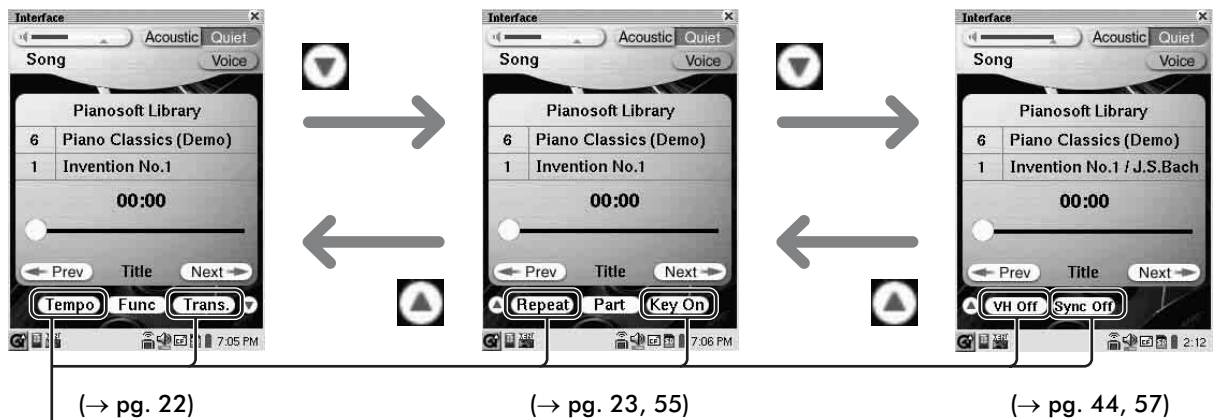
[Song] playback option buttons

Playback option buttons

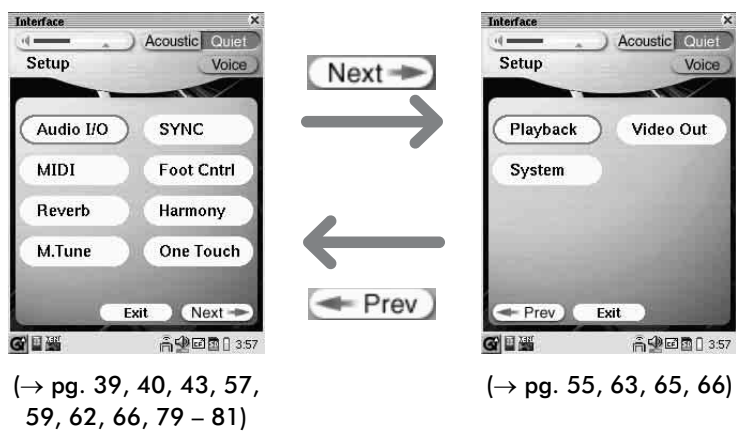[Setup] menu screens

[Setup] option screens

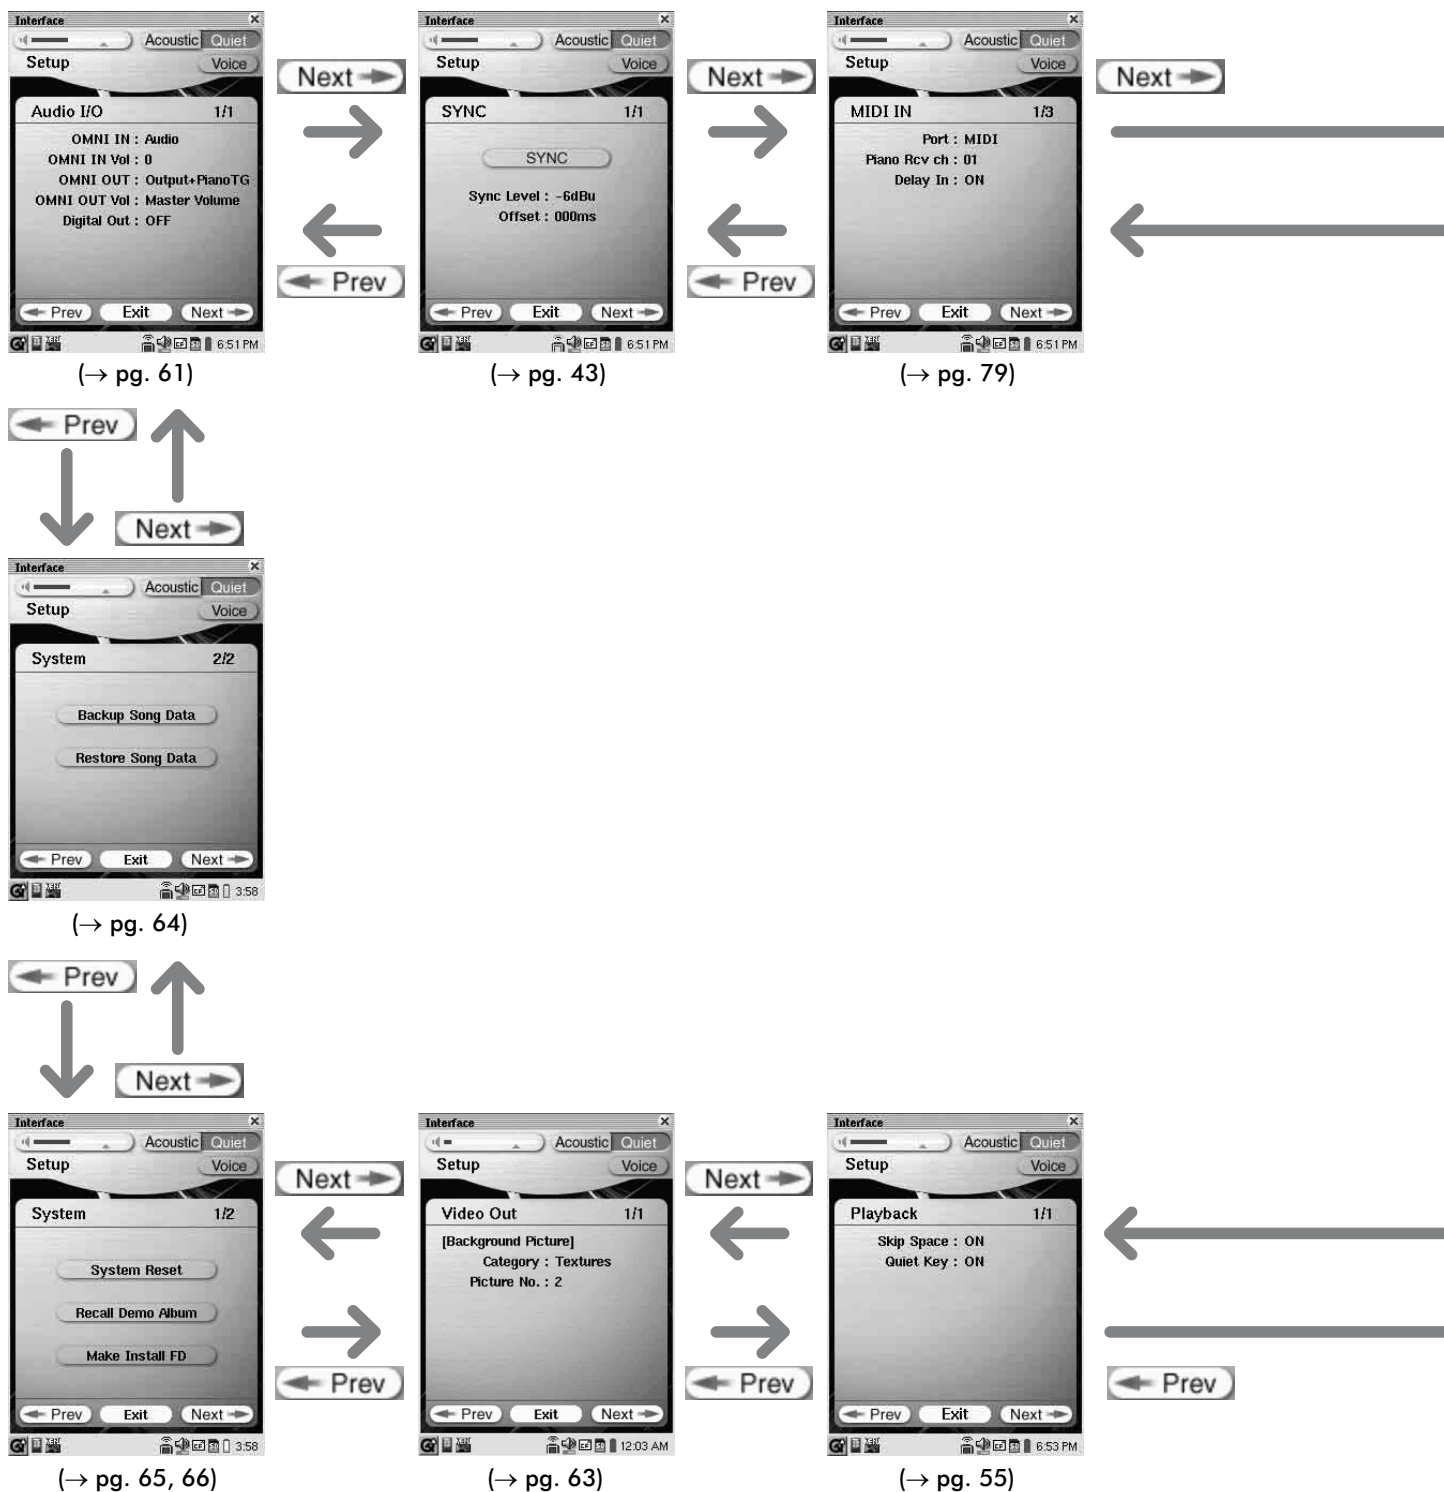

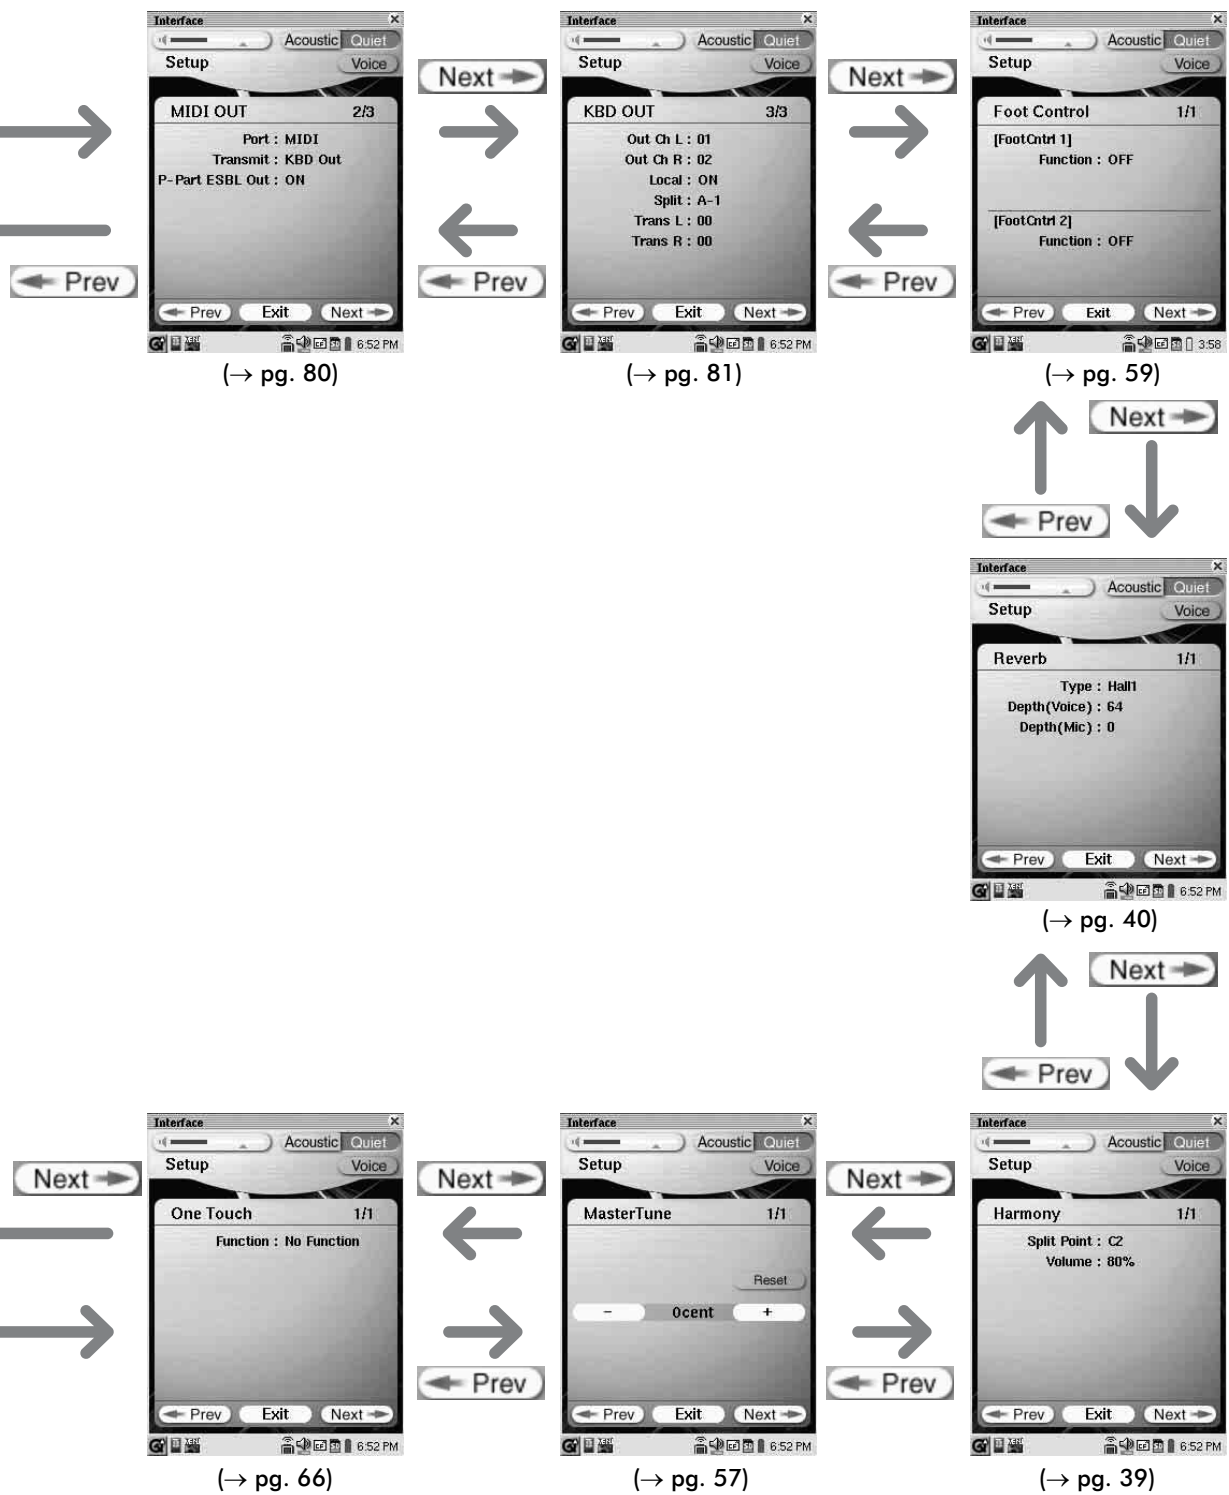

Glossary

This glossary provides basic definitions of terms used frequently in Disklavier manuals.

Clavinova™

A series of Yamaha digital pianos.

Continuous Pedal

See “Incremental Pedal”.

Ensemble Song

A song which contains piano parts and accompanying instrumental voices. An Ensemble song contains the same left and right-hand parts as an L/R song, and in addition, up to 13 accompanying instrument tracks. These extra tracks are played by the internal XG tone generator. The accompanying tracks may be used for acoustic bass, drums, strings, vibes, etc.

E-SEQ Song Format

A song file format developed by Yamaha for saving songs.

Floppy Disk

The magnetic storage medium that the Disklavier uses to save songs. The Disklavier uses the 3.5 inch 2DD and 2HD floppy disks commonly used for computers.

General MIDI (GM)

An addition to the MIDI standard that simplifies the transfer of MIDI song files between instruments of different manufacturers. A MIDI song recorded using a GM compatible tone generator should play back correctly when used with any GM compatible tone generator. The standard specifies that a GM compatible tone generator must support 24-note polyphony, 16 parts, and 128 standard voices.

Half Pedal

See “Incremental Pedal”.

Incremental Pedal

Piano pedals are not always completely up or down and may be held somewhere in-between. Using incremental pedal data (also called continuous or half pedal data) the Disklavier precisely records the up and down movement of the piano pedals.

L/R Song

In a L/R song, the left-hand piano part is stored on track 1 (L) and the right-hand piano part is stored on track 2 (R). During playback you can cancel either part, and then play that part yourself. When recording an L/R song, you can record the two parts simultaneously or separately.

MIDI

An acronym for Musical Instrument Digital Interface. MIDI allows electronic musical instruments to communicate with each other.

Piano Parts

Refers to the left- and right-hand piano parts of a song. The left-hand piano part is recorded onto track 1 and the right-hand piano part is recorded onto track 2. These track assignments are the default settings and can be changed.

PianoSoft™

The PianoSoft Disk Collection is a library of prerecorded song disks made by Yamaha specifically for use with the Disklavier.

PianoSoft-Plus™

PianoSoft-Plus disks contain Ensemble songs that can be played on the Disklavier.

Polyphony

The maximum number of voices (or sounds) that can be produced at a time from MIDI instruments.

Quiet Mode

A Silent system mode in which sound is output through the speakers, enabling you to freely adjust the volume of the piano.

Reverb

Short for “reverberation.” The effect that adds a more realistic feel to a sound by simulating the reflection of the sound in rooms and halls of various sizes.

Rhythm Track

Tracks of an ensemble song designated for the accompanying rhythm. The rhythm track is unaffected by the playback transposition function.

Sequencer

A sequencer can be used with the Disklavier to play back and record MIDI data.

Smart PianoSoft™

Software made by Yamaha containing MIDI signals for playing back along with standard audio CDs.

SMF

Abbreviation for Standard MIDI File.


SMF Song Format

A song file format supported by MIDI sequencers and music software.

Song

Normally, a short piece of music with lyrics. However, for clarity in Disklavier manuals, the term is used to refer to any piece of music of any genre.

Sound Muting Mode

Yamaha’s innovative system in which a tap of  keeps the hammers from striking the strings, effectively silencing the acoustic piano. Sound is sent to the digital piano tone generator and output through the speakers (Quiet mode) or headphones (Headphone mode).

Standard MIDI File (SMF)

A file of MIDI data that can be read and used by a number of different MIDI devices and computers.

TG Master Tune

The function that allows you to tune the internal XG tone generator, and if connected, an external tone generator simultaneously so that their tunings match that of the Disklavier.

Tone Generator

An electronic device that can generate tones or instrument voices.

Transpose

Changing the key of a song. For example, a song in the key of C is transposed to the key of D when it is moved up two semitones.

Velocity

Because the loudness of a piano note is determined by the speed (velocity) with which a string is struck by a hammer, note loudness is referred to as velocity.

Voice

The sounds produced by a tone generator expressing various instruments.

XG

Yamaha XG is an extension of the GM (General MIDI) format. Its greater polyphony, more voices, and use of effects enhances the compatibility between MIDI devices. When a song in the Yamaha XG format is played on another XG-compatible tone generator or synthesizer, it plays and sounds as the original composer/creator intended.

Specifications

General

Sensor System	Key Sensors	Noncontact optical fiber/grayscale shutter sensing system for 88 keys (senses the key position, keying velocity, and key releasing velocity)
	Hammer Sensors* <i>* Equipped with the C3 grand piano or higher specification models only.</i>	Noncontact optical fiber/grayscale shutter sensing system
	Pedal Sensors	Noncontact digital optical sensing system (senses the pedal position*) <i>* Continuous sensing for the damper and soft pedals, and on/off sensing for the sostenuto pedal.</i>
Drive System	Keys	DSP servo drive system (high-power servocontrolled solenoids with supersensitive magnetic sensor*) <i>* The supersensitive magnetic sensor is only for the PRO Series.</i>
	Pedals	DSP servo drive system (servocontrolled solenoids)
Data Storage	Internal HDD	80 GB
	File Format	Standard MIDI File (SMF) FORMAT 0/1, E-SEQ
Removable Media	Compact Disc	Yamaha PianoSoft-PlusAudio, audio CD (ISO 9600-compliant), Data CD (ISO 9660 Level1-compliant)
	Floppy Disk	3.5" 2DD (720 KB) or 2HD (1.44 MB) floppy disk
	USB Flash Memory	Yamaha does not assure the operation of all the commercially available USB flash memories. For a list of compatible products, please visit www.yamaha.com/disklavier .
	USB Hard Disk Drive	FAT32 format
Media Center	Drive	CD and floppy disk drive
	Dimensions (W × H × D)	405 × 257 × 73 mm (16 × 10 1/8 × 2 7/8 in.)
	Weight	3.3 kg (7.3 lb.)
Pocket Controller	Dimensions (W × H × D)	74 × 138 × 23 mm (2 15/16 × 5 7/16 × 15/16 in.)
	Weight	210 g (7.4 oz.) (not incl. screen protector, wireless LAN card, incl. rechargeable battery)
Monitor Speakers* <i>* Supplied only with the Mark IV Series.</i>	Rated Power Output	20W × 2 with tone and volume controls
	Drivers	16 cm (6 5/16 in.) woofer × 2, 2.5 cm (1 in.) tweeter × 2
	Dimensions (W × H × D)	144 × 236 × 167 mm (5 11/16 × 9 5/16 × 6 5/8 in.)
	Weight	4.4 kg (9.7 lb.)
Record/Playback Mode		Standard mode (Mark IV Series), XP mode (PRO Series)
Pitch Control		Set at A=440 Hz, tunable ±50 cents in 1 cent increment
Silencing Mechanism		Motor-driven hammer shank stopper
Piano Voice and Performance Tone	Type	AWM2/Articulation Element Modeling (AEM)
	Polyphony	64 notes digital stereo sampling (90 MB wave memory, 16 bit linear) (AWM2)/ 6 notes Articulation Element Modeling (AEM)
	Normal Voices	Piano (digital stereo sampling) and other 42 voices

Ensemble Tone	Type	Advanced Wave Memory 2 (AWM2)
	Polyphony	32 notes (max.)
	Ensemble Parts	16 parts
	Voice Module Modes	XG, GM
	Normal Voices	676
	Drum Voices	21 kits
Power Source		Local AC current, 100 – 240 V, 50/60 Hz
Power Consumption		180 W
Supplied Accessories		Media Center (1), Installation kit for the Media Center (1 set), Monitor speaker (2)*, Installation kit for the Monitor speaker (1 set)*, Speaker cord (2)*, Pocket Controller PRC-100 (1), CF wireless LAN card (2), Rechargeable battery EA-BL08 (1), Cradle (1), AC adaptor EA-70 (1), AC power cord (1), Advanced Operating Manual (this book), (1), Quick Guide (1), Stereo headphones (1 set) * Supplied only with the Mark IV Series.
Optional Accessories		HPE-170 headphones

Features

Playback Features	Media Select	Floppy disk, CD, USB media, internal HDD
	Arrangement of Songs	Song Libraries (PianoSoft Library, User Library, CD Library) → pg. 9 in “Quick Guide”
	Polyphony	32 keys (PRO Series), 16 keys (Mark IV Series)
	Volume	128 levels
	Repeat	ALL (all songs in current album), RPT (current song), RND (all songs in current album in random order), A-B repeat
	Programming	Play Lists feature
	Part cancel	L (left), R (right), Pedal, Accompaniment
	Tempo	-50 to +20% in 1% increment
	Transposition	±24 semitones (2 octaves) in 1 semitone increment
	Balance	Volume balances among Voice (digital piano sound), TG (ensemble sound), Audio (accompaniment or standard audio sound on a CD), and MIC (microphone input)
	Track Voice changing	→ pg. 26
	Track Editing	Mix, Move, Copy, Delete, Transpose → pg. 28
	SmartKey	→ pg. 35
	SmartPiano	→ pg. 36
	Video Synchronization	→ pg. 36
Piano Playing Features	Metronome	→ pg. 37
	AEM Articulation	Head (blow-up), Joint, Tail (fall-down)
	Harmony	→ pg. 39
	Reverb	Hall1, 2, Room1, 2, 3, Stage1, 2, Plate (with 0 to 128 depth control)

Continue to next page...

Recording Features	Overwrite Recording	→ pg. 42
	Video Synchronization	→ pg. 43
	Ensemble Part Recording	→ pg. 45
	Overdubbing	→ pg. 47
	Metronome Mode Recording	→ pg. 48
	Quantize	→ pg. 49
	Tempo Changing	→ pg. 50
Other Features	Timer Play	→ pg. 55
	Vocal Harmony	→ pg. 57
	Foot control/switch	→ pg. 59
	XP Strip	→ pg. 63
	Backup	→ pg. 64
	One Touch Button	→ pg. 66

Specifications are subject to change without prior notice.

disklavier™

PRO / Mark IV Series

Appendix

Appendix

GNU GENERAL PUBLIC LICENSE

Version 2, June 1991

Copyright © 1989, 1991 Free Software Foundation, Inc.

59 Temple Place, Suite 330, Boston, MA 02111-1307 USA

Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

Preamble

The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public License is intended to guarantee your freedom to share and change free software--to make sure the software is free for all its users. This General Public License applies to most of the Free Software Foundation's software and to any other program whose authors commit to using it. (Some other Free Software Foundation software is covered by the GNU Library General Public License instead.) You can apply it to your programs, too.

When we speak of free software, we are referring to freedom, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish), that you receive source code or can get it if you want it, that you can change the software or use pieces of it in new free programs; and that you know you can do these things.

To protect your rights, we need to make restrictions that forbid anyone to deny you these rights or to ask you to surrender the rights. These restrictions translate to certain responsibilities for you if you distribute copies of the software, or if you modify it.

For example, if you distribute copies of such a program, whether gratis or for a fee, you must give the recipients all the rights that you have. You must make sure that they, too, receive or can get the source code. And you must show them these terms so they know their rights.

We protect your rights with two steps: (1) copyright the software, and (2) offer you this license which gives you legal permission to copy, distribute and/or modify the software.

Also, for each author's protection and ours, we want to make certain that everyone understands that there is no warranty for this free software. If the software is modified by someone else and passed on, we want its recipients to know that what they have is not the original, so that any problems introduced by others will not reflect on the original authors' reputations.

Finally, any free program is threatened constantly by software patents. We wish to avoid the danger that redistributors of a free program will individually obtain patent licenses, in effect making the program proprietary. To prevent this, we have made it clear that any patent must be licensed for everyone's free use or not licensed at all.

The precise terms and conditions for copying, distribution and modification follow.

GNU GENERAL PUBLIC LICENSE

TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION

0. This License applies to any program or other work which contains a notice placed by the copyright holder saying it may be distributed under the terms of this General Public License. The "Program", below, refers to any such program or work, and a "work based on the Program" means either the Program or any derivative work under copyright law: that is to say, a work containing the Program or a portion of it, either verbatim or with modifications and/or translated into another language. (Hereinafter,

translation is included without limitation in the term "modification".) Each licensee is addressed as "you".

Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running the Program is not restricted, and the output from the Program is covered only if its contents constitute a work based on the Program (independent of having been made by

Continue to next page...

running the Program). Whether that is true depends on what the Program does.

1. You may copy and distribute verbatim copies of the Program's source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and give any other recipients of the Program a copy of this License along with the Program.

You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

2. You may modify your copy or copies of the Program or any portion of it, thus forming a work based on the Program, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:
 - a) You must cause the modified files to carry prominent notices stating that you changed the files and the date of any change.
 - b) You must cause any work that you distribute or publish, that in whole or in part contains or is derived from the Program or any part thereof, to be licensed as a whole at no charge to all third parties under the terms of this License.
 - c) If the modified program normally reads commands interactively when run, you must cause it, when started running for such interactive use in the most ordinary way, to print or display an announcement including an appropriate copyright notice and a notice that there is no warranty (or else, saying that you provide a warranty) and that users may redistribute the program under these conditions, and telling the user how to view a copy of this License. (Exception: if the Program itself is interactive but does not normally print such an announcement, your work based on the Program is not required to print an announcement.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Program, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Program, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to

the entire whole, and thus to each and every part regardless of who wrote it.

Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Program.

In addition, mere aggregation of another work not based on the Program with the Program (or with a work based on the Program) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

3. You may copy and distribute the Program (or a work based on it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you also do one of the following:
 - a) Accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
 - b) Accompany it with a written offer, valid for at least three years, to give any third party, for a charge no more than your cost of physically performing source distribution, a complete machine-readable copy of the corresponding source code, to be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
 - c) Accompany it with the information you received as to the offer to distribute corresponding source code. (This alternative is allowed only for noncommercial distribution and only if you received the program in object code or executable form with such an offer, in accord with Subsection b above.)

The source code for a work means the preferred form of the work for making modifications to it. For an executable work, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the executable. However, as a special exception, the source code distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable.

If distribution of executable or object code is made by offering access to copy from a designated place, then

offering equivalent access to copy the source code from the same place counts as distribution of the source code, even though third parties are not compelled to copy the source along with the object code.

4. You may not copy, modify, sublicense, or distribute the Program except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense or distribute the Program is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.
5. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Program or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Program (or any work based on the Program), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Program or works based on it.
6. Each time you redistribute the Program (or any work based on the Program), the recipient automatically receives a license from the original licensor to copy, distribute or modify the Program subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties to this License.
7. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Program at all. For example, if a patent license would not permit royalty-free redistribution of the Program by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Program.

If any portion of this section is held invalid or unenforceable under any particular circumstance, the

balance of the section is intended to apply and the section as a whole is intended to apply in other circumstances.

It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system, which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice.

This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

8. If the distribution and/or use of the Program is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Program under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.
9. The Free Software Foundation may publish revised and/or new versions of the General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Program specifies a version number of this License which applies to it and "any later version", you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Program does not specify a version number of this License, you may choose any version ever published by the Free Software Foundation.

10. If you wish to incorporate parts of the Program into other free programs whose distribution conditions are different, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.

Continue to next page...

NO WARRANTY

11. BECAUSE THE PROGRAM IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

12. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

GNU LESSER GENERAL PUBLIC LICENSE

Version 2.1, February 1999

Copyright © 1991, 1999 Free Software Foundation, Inc.

59 Temple Place, Suite 330, Boston, MA 02111-1307 USA

Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed. [This is the first released version of the Lesser GPL. It also counts as the successor of the GNU Library Public License, version 2, hence the version number 2.1.]

Preamble

The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public Licenses are intended to guarantee your freedom to share and change free software--to make sure the software is free for all its users.

This license, the Lesser General Public License, applies to some specially designated software packages--typically libraries--of the Free Software Foundation and other authors who decide to use it. You can use it too, but we suggest you first think carefully about whether this license or the ordinary General Public License is the better strategy to use in any particular case, based on the explanations below.

When we speak of free software, we are referring to freedom of use, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish); that you receive source code or can get it if you want it; that you can change the software and use pieces of it in new free programs; and that you are informed that you can do these things.

To protect your rights, we need to make restrictions that forbid distributors to deny you these rights or to ask you to surrender these rights. These restrictions translate to certain responsibilities for you if you distribute copies of the library or if you modify it.

For example, if you distribute copies of the library, whether gratis or for a fee, you must give the recipients all the rights that we gave you. You must make sure that they, too, receive or can get the source code. If you link other code with the library, you must provide complete object files to the recipients, so that they can relink them with the library after making changes to the library and recompiling it. And you must show them these terms so they know their rights.

We protect your rights with a two-step method: (1) we copyright the library, and (2) we offer you this license, which gives you legal permission to copy, distribute and/or modify the library.

To protect each distributor, we want to make it very clear that there is no warranty for the free library. Also, if the library is modified by someone else and passed on, the

recipients should know that what they have is not the original version, so that the original author's reputation will not be affected by problems that might be introduced by others.

Finally, software patents pose a constant threat to the existence of any free program. We wish to make sure that a company cannot effectively restrict the users of a free program by obtaining a restrictive license from a patent holder. Therefore, we insist that any patent license obtained for a version of the library must be consistent with the full freedom of use specified in this license.

Most GNU software, including some libraries, is covered by the ordinary GNU General Public License. This license, the GNU Lesser General Public License, applies to certain designated libraries, and is quite different from the ordinary General Public License. We use this license for certain libraries in order to permit linking those libraries into non-free programs.

When a program is linked with a library, whether statically or using a shared library, the combination of the two is legally speaking a combined work, a derivative of the original library. The ordinary General Public License therefore permits such linking only if the entire combination fits its criteria of freedom. The Lesser General Public License permits more lax criteria for linking other code with the library.

We call this license the “Lesser” General Public License because it does Less to protect the user's freedom than the ordinary General Public License. It also provides other free software developers Less of an advantage over competing non-free programs. These disadvantages are

the reason we use the ordinary General Public License for many libraries. However, the Lesser license provides advantages in certain special circumstances.

For example, on rare occasions, there may be a special need to encourage the widest possible use of a certain library, so that it becomes a de-facto standard. To achieve this, non-free programs must be allowed to use the library. A more frequent case is that a free library does the same job as widely used non-free libraries. In this case, there is little to gain by limiting the free library to free software only, so we use the Lesser General Public License.

In other cases, permission to use a particular library in non-free programs enables a greater number of people to use a large body of free software. For example, permission to use the GNU C Library in non-free programs enables many more people to use the whole GNU operating system, as well as its variant, the GNU/Linux operating system.

Although the Lesser General Public License is Less protective of the users' freedom, it does ensure that the user of a program that is linked with the Library has the freedom and the wherewithal to run that program using a modified version of the Library.

The precise terms and conditions for copying, distribution and modification follow. Pay close attention to the difference between a “work based on the library” and a “work that uses the library”. The former contains code derived from the library, whereas the latter must be combined with the library in order to run.

GNU LESSER GENERAL PUBLIC LICENSE

TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION

0. This License Agreement applies to any software library or other program which contains a notice placed by the copyright holder or other authorized party saying it may be distributed under the terms of this Lesser General Public License (also called “this License”). Each licensee is addressed as “you”.

A “library” means a collection of software functions and/or data prepared so as to be conveniently linked with application programs (which use some of those functions and data) to form executables.

The “Library”, below, refers to any such software library or work which has been distributed under these terms. A “work based on the Library” means either the Library or any derivative work under copyright law: that is to say, a

work containing the Library or a portion of it, either verbatim or with modifications and/or translated straightforwardly into another language. (Hereinafter, translation is included without limitation in the term “modification”.)

“Source code” for a work means the preferred form of the work for making modifications to it. For a library, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the library.

Activities other than copying, distribution and modification are not covered by this License; they are

Continue to next page...

outside its scope. The act of running a program using the Library is not restricted, and output from such a program is covered only if its contents constitute a work based on the Library (independent of the use of the Library in a tool for writing it). Whether that is true depends on what the Library does and what the program that uses the Library does.

1. You may copy and distribute verbatim copies of the Library's complete source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and distribute a copy of this License along with the Library.

You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

2. You may modify your copy or copies of the Library or any portion of it, thus forming a work based on the Library, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:
 - a) The modified work must itself be a software library.
 - b) You must cause the files modified to carry prominent notices stating that you changed the files and the date of any change.
 - c) You must cause the whole of the work to be licensed at no charge to all third parties under the terms of this License.
 - d) If a facility in the modified Library refers to a function or a table of data to be supplied by an application program that uses the facility, other than as an argument passed when the facility is invoked, then you must make a good faith effort to ensure that, in the event an application does not supply such function or table, the facility still operates, and performs whatever part of its purpose remains meaningful.

(For example, a function in a library to compute square roots has a purpose that is entirely well-defined independent of the application. Therefore, Subsection 2d requires that any application-supplied function or table used by this function must be optional: if the application does not supply it, the square root function must still compute square roots.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Library, and can be reasonably considered independent and separate works in

themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Library, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it.

Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Library.

In addition, mere aggregation of another work not based on the Library with the Library (or with a work based on the Library) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

3. You may opt to apply the terms of the ordinary GNU General Public License instead of this License to a given copy of the Library. To do this, you must alter all the notices that refer to this License, so that they refer to the ordinary GNU General Public License, version 2, instead of to this License. (If a newer version than version 2 of the ordinary GNU General Public License has appeared, then you can specify that version instead if you wish.) Do not make any other change in these notices.

Once this change is made in a given copy, it is irreversible for that copy, so the ordinary GNU General Public License applies to all subsequent copies and derivative works made from that copy.

This option is useful when you wish to copy part of the code of the Library into a program that is not a library.

4. You may copy and distribute the Library (or a portion or derivative of it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange.

If distribution of object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place satisfies the requirement to distribute the source code, even though third parties are not compelled to copy the source along with the object code.

5. A program that contains no derivative of any portion of the Library, but is designed to work with the Library by being compiled or linked with it, is called a “work that uses the Library”. Such a work, in isolation, is not a derivative work of the Library, and therefore falls outside the scope of this License.

However, linking a “work that uses the Library” with the Library creates an executable that is a derivative of the Library (because it contains portions of the Library), rather than a “work that uses the library”. The executable is therefore covered by this License. Section 6 states terms for distribution of such executables.

When a “work that uses the Library” uses material from a header file that is part of the Library, the object code for the work may be a derivative work of the Library even though the source code is not. Whether this is true is especially significant if the work can be linked without the Library, or if the work is itself a library. The threshold for this to be true is not precisely defined by law.

If such an object file uses only numerical parameters, data structure layouts and accessors, and small macros and small inline functions (ten lines or less in length), then the use of the object file is unrestricted, regardless of whether it is legally a derivative work. (Executables containing this object code plus portions of the Library will still fall under Section 6.)

Otherwise, if the work is a derivative of the Library, you may distribute the object code for the work under the terms of Section 6. Any executables containing that work also fall under Section 6, whether or not they are linked directly with the Library itself.

6. As an exception to the Sections above, you may also combine or link a “work that uses the Library” with the Library to produce a work containing portions of the Library, and distribute that work under terms of your choice, provided that the terms permit modification of the work for the customer’s own use and reverse engineering for debugging such modifications.

You must give prominent notice with each copy of the work that the Library is used in it and that the Library and its use are covered by this License. You must supply a copy of this License. If the work during execution displays copyright notices, you must include the copyright notice for the Library among them, as well as a reference directing the user to the copy of this License. Also, you must do one of these things:

- a) Accompany the work with the complete corresponding machine-readable source code for the Library including whatever changes were used in the work (which must be distributed under Sections 1 and 2 above); and, if the work is an executable linked with the Library, with the complete machine-readable “work that uses the Library”, as object code and/or source code, so that the user can modify the Library and then relink to produce a modified executable containing the modified Library. (It is understood that the user who changes the contents of definitions files in the Library will not necessarily be able to recompile the application to use the modified definitions.)
- b) Use a suitable shared library mechanism for linking with the Library. A suitable mechanism is one that (1) uses at run time a copy of the library already present on the user’s computer system, rather than copying library functions into the executable, and (2) will operate properly with a modified version of the library, if the user installs one, as long as the modified version is interface-compatible with the version that the work was made with.
- c) Accompany the work with a written offer, valid for at least three years, to give the same user the materials specified in Subsection 6a, above, for a charge no more than the cost of performing this distribution.
- d) If distribution of the work is made by offering access to copy from a designated place, offer equivalent access to copy the above specified materials from the same place.
- e) Verify that the user has already received a copy of these materials or that you have already sent this user a copy.

For an executable, the required form of the “work that uses the Library” must include any data and utility programs needed for reproducing the executable from it. However, as a special exception, the materials to be distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable.

It may happen that this requirement contradicts the license restrictions of other proprietary libraries that do not normally accompany the operating system. Such a contradiction means you cannot use both them and the Library together in an executable that you distribute.

Continue to next page...

7. You may place library facilities that are a work based on the Library side-by-side in a single library together with other library facilities not covered by this License, and distribute such a combined library, provided that the separate distribution of the work based on the Library and of the other library facilities is otherwise permitted, and provided that you do these two things:

a) Accompany the combined library with a copy of the same work based on the Library, uncombined with any other library facilities. This must be distributed under the terms of the Sections above.

b) Give prominent notice with the combined library of the fact that part of it is a work based on the Library, and explaining where to find the accompanying uncombined form of the same work.

8. You may not copy, modify, sublicense, link with, or distribute the Library except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense, link with, or distribute the Library is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.

9. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Library or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Library (or any work based on the Library), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Library or works based on it.

10. Each time you redistribute the Library (or any work based on the Library), the recipient automatically receives a license from the original licensor to copy, distribute, link with or modify the Library subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties with this License.

11. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If

you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Library at all. For example, if a patent license would not permit royalty-free redistribution of the Library by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Library.

If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply, and the section as a whole is intended to apply in other circumstances.

It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice.

This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

12. If the distribution and/or use of the Library is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Library under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.

13. The Free Software Foundation may publish revised and/or new versions of the Lesser General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Library specifies a version number of this License which applies to it and "any later version", you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Library does not specify a license version number, you may choose any version ever published by the Free Software Foundation.

14. If you wish to incorporate parts of the Library into other free programs whose distribution conditions are incompatible with these, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software

Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.

NO WARRANTY

15. BECAUSE THE LIBRARY IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE LIBRARY, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE LIBRARY "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE LIBRARY IS WITH YOU. SHOULD THE LIBRARY PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

16. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE LIBRARY AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE LIBRARY (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE LIBRARY TO OPERATE WITH ANY OTHER SOFTWARE), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Continue to next page...

NOTIFICATION

On December 23, 2002 Metrowerks Corporation, a wholly owned subsidiary of Motorola Inc., acquired certain assets of Embedix Inc., formerly Lineo Inc. As a result of the acquisition, the Embedix® and Embedix® Plus PDA™ brand products have now become Metrowerks Linux® and Metrowerks OpenPDA™ brand products. The Metrowerks Linux and Metrowerks

OpenPDA products are governed by the Metrowerks Software License Agreement below. If you have questions or would like more information on OpenPDA products and other Metrowerks solutions, please visit the following websites www.openpda.com and www.metrowerks.com

METROWERKS SOFTWARE LICENSE AGREEMENT

THIS METROWERKS SOFTWARE LICENSE AGREEMENT ("LICENSE") IS AN AGREEMENT BETWEEN YOU AND METROWERKS CORPORATION ("METROWERKS"). METROWERKS IS WILLING TO LICENSE THE ENCLOSED SOFTWARE TO YOU ONLY UPON THE CONDITION THAT YOU ACCEPT ALL OF THE TERMS CONTAINED IN THIS LICENSE. PLEASE READ THIS LICENSE CAREFULLY BEFORE USING THE SOFTWARE, AS BY USING THE SOFTWARE YOU INDICATE THAT YOU AGREE TO BE BOUND BY THE TERMS OF THIS LICENSE. IF YOU DO NOT AGREE TO THE TERMS OF THIS LICENSE, METROWERKS IS UNWILLING TO LICENSE THE SOFTWARE TO YOU.

1. Grant of License. This software including application, demonstration, system and all other software accompanying this License, whether electronically distributed or distributed on CD-ROM or any other media (the "Software") and the related documentation are licensed to you by Metrowerks according to the terms of this License. This License allows you to use the Software on the product the Software is distributed with ("Product"). If you have purchased a concurrent uses license (i.e., Locating of Server License), you may install the Software on a common storage device that is accessible by multiple devices provided that you have a software mechanism that locks out any concurrent uses in excess of the number of licensed copies of the Software. One backup copy of the software may be made solely as a part of the routine backup activities of your company or business, you are not licensed to make additional copies. You may transfer to another party all your license rights in the Software and related documentation by transferring to that party both the original media on which the Software and related documentation were provided, the Product and a copy of this License, provided that the other party reads and

agrees to accept the terms and conditions of this License. Immediately upon transfer, you have no further rights to use or own copies of the Product, Software or related documentation and must destroy all copies in your possession or control. If this Software is an update, patch, error correction or upgrade to a prior version, then you must be licensed to use the prior version of the Software in order to exercise the license rights granted hereunder and you agree all previous licenses are hereby replaced by this license. If you are a corporation or other organization, you must designate one individual to have the rights provided herein. Certain components of the Software is licensed pursuant to the GNU General Public License Version 2. You may obtain a copy of the GPL General Public License at <http://www.fsf.org/copyleft/gpl.html>. Metrowerks will provide source code for the components of the Software licensed pursuant to the GNU General Public License. To obtain such source code, send email to support@openpda.com

2. Restrictions. The Software contains copyrighted material, trade secrets, and other proprietary material of Metrowerks and its licensors. You agree that in order to protect those proprietary materials, except as expressly permitted by applicable legislation, you will not decompile, reverse engineer, disassemble or otherwise reduce all or any part of the Software to human-readable form unless Metrowerks provided it to you in human-readable form. You may not modify, rent, lease, loan, distribute or create derivative works based upon the Software in whole or in part, except as expressly permitted in Section 3. If the Software is labeled as an academic version or is otherwise licensed to you for academic use, you may not use the Software for commercial product development, but you may use the Software to develop freeware or shareware within your academic community only. If the Software licensed to you is part of the Discover

Programming series or is labeled as a Learning Edition, Demo Version, Evaluation Edition or Lite version, you may not use the Software to develop any product for distribution, whether commercial, freeware, or shareware. No press releases or any other public announcements regarding this Software shall be made without the written consent of Metrowerks.

3. **Ownership.** The Software and documentation are licensed, not sold, to you for use only under the terms of this License, and Metrowerks and its Licensors reserve all rights not expressly granted to you in this License. You own the media on which the Software and documentation are recorded but Metrowerks and/or Metrowerks' licensors retain title to the Software and related documentation, and all intellectual property rights therein. Third Party Products which may accompany the Software may also be subject to their own licensing terms.
4. **Termination.** This License is effective until terminated. You may terminate this License at any time by destroying all copies of the Software and related documentation in your possession or control. This License will terminate immediately without notice from Metrowerks if you fail to comply with any provision of this License. Upon termination you must destroy all copies of the Software and related documentation in your possession or control.
5. **Export Law Assurances.** You agree and certify that neither the Software nor any other technical data received from Metrowerks, nor the direct product thereof, will be exported outside the United States except as authorized and as permitted by the laws and regulations of the United States. If the Software has been rightfully obtained by you outside of the United States, you agree that you will not re-export the Software nor any other technical data received from Metrowerks, nor the direct product thereof, except as permitted by the laws and regulations of the United States and the laws and regulations of the jurisdiction in which you obtained the Software.
6. **Government End Users.** If you are acquiring the Software and fonts on behalf of any unit or agency of the United States Government, the following provisions apply. The Licensed Software constitutes a "commercial item", as that term is defined at Federal Acquisition Regulation (FAR) 2.101 (MAY 2001), consisting of "commercial computer software" and "commercial computer software documentation", as such terms are used in FAR 12.212 (SEP 1995), and is provided to the U.S. Government only as commercial software (with "Restricted Rights", if applicable). Use, duplication, or disclosure by the U.S. Government is subject to restrictions set forth in this license agreement and as provided in DFARS 227.7202-1(a) and (c) (JUN 1995), DFARS 227.7202-3(a) (JUN 1995), FAR 12.212 (a) (SEP 1995), FAR 52.227-19 (JUN 1987), or FAR 52.227-14 (ALT III) (JUN 1987), as applicable.
7. **Limited Warranty on Media.** Metrowerks warrants the media on which the Software is recorded to be free from defects in materials and workmanship under normal use for a period of ninety (90) days from the date of purchase as evidenced by a copy of the receipt. Metrowerks' entire liability and your exclusive remedy will be replacement of the media not meeting Metrowerks limited warranty returned to Metrowerks with a copy of the receipt. Metrowerks will have no responsibility to replace any media damaged by accident, abuse or misapplication. ANY IMPLIED WARRANTIES ON THE MEDIA, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO NINETY (90) DAYS FROM THE DATE OF DELIVERY. THIS WARRANTY GIVES YOU SPECIFIC LEAGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY BY JURISDICTION.
8. **Disclaimer of Warranty.** THE SOFTWARE, RELATED DOCUMENTATION, THIRD PARTY PRODUCTS IF ANY, AND ANY APPLICATIONS CREATED WITH THE SOFTWARE ARE PROVIDED "AS IS" AND WITHOUT WARRANTY OF ANY KIND. YOU EXPRESSLY ACKNOWLEDGE AND AGREE THAT USE OF THE SOFTWARE AND RELATED DOCUMENTATION IS AT YOUR SOLE RISK. SHOULD THE SOFTWARE OR RELATED DOCUMENTATION PROVE DEFECTIVE, YOU (AND NOT METROWERKS OR ANY METROWERKS REPRESENTATIVE) ASSUME THE ENTIRE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION. METROWERKS AND METROWERKS' LICENSORS (FOR THE PURPOSES OF THIS SECTION 9. METROWERKS AND METROWERKS' LICENSORS SHALL BE COLLECTIVELY REFERRED TO AS "METROWERKS") EXPRESSLY DISCLAIM ALL OTHER WARRANTIES WITH RESPECT TO THE SOFTWARE AND RELATED

Continue to next page...

DOCUMENTATION, WHETHER SUCH WARRANTIES ARE EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT. WITHOUT LIMITING THE GENERALITY OF THE FOREGOING, METROWERKS MAKES NO WARRANTY OR REPRESENTATION THAT THE FUNCTIONS CONTAINED IN THE SOFTWARE WILL MEET YOUR REQUIREMENTS, THAT THE OPERATION OF THE SOFTWARE WILL BE UNINTERRUPTED OR ERROR-FREE, THAT DEFECTS IN THE SOFTWARE WILL BE CORRECTED, NOR WITH RESPECT TO THE CORRECTNESS, ACCURACY, OR RELIABILITY OF THE SOFTWARE AND RELATED DOCUMENTATION. METROWERKS DISCLAIMS ANY AND ALL EXPRESS OR IMPLIED WARRANTIES OF ANY KIND, AND YOU EXPRESSLY ASSUME ALL LIABILITIES AND RISKS, FOR ANYONE'S USE OR OPERATION OF ANY APPLICATION PROGRAMS YOU MAY CREATE WITH THE SOFTWARE. YOU ACKNOWLEDGE AND AGREE THAT THE SOFTWARE HAS NOT BEEN DESIGNED, TESTED, MANUFACTURED, OR INTENDED FOR USE IN DEVELOPING APPLICATIONS WHERE THE FAILURE, MALFUNCTION, OR ANY INACCURACY OF THE APPLICATION CARRIES A RISK OF DEATH, SERIOUS BODILY INJURY, OR DAMAGE TO TANGIBLE PROPERTY, INCLUDING, BUT NOT LIMITED TO, USE IN FACTORY CONTROLS SYSTEMS, MEDICAL DEVICES OR FACILITIES, UNCLEAR FACILITIES, AIRCRAFT OR AUTOMOBILE NAVIGATION OR COMMUNICATION, EMERGENCY SYSTEMS, OR OTHER APPLICATIONS WITH A SIMILAR DEGREE OF POTENTIAL HAZARD. NO ORAL OR WRITTEN INFORMATION OR ADVICE GIVEN BY METROWERKS OR ANY OF ITS EMPLOYEES, REPRESENTATIVES, OR RESELLERS SHALL CREATE ANY WARRANTY IN ADDITION TO THOSE GIVEN HEREIN. SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES, SO THE ABOVE EXCLUSION MAY NOT APPLY TO YOU.

9. Limitation of Liability. UNDER NO CIRCUMSTANCES SHALL METROWERKS BE

LIABLE FOR ANY INCIDENTAL, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES THAT RESULT FROM THE USE OR INABILITY TO USE THE SOFTWARE OR RELATED DOCUMENTATION UNDER ANY THEORY, INCLUDING CONTRACT, TORT, OR NEGLIGENCE, EVEN IF METROWERKS HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. SOME JURISDICTIONS DO NOT ALLOW THE LIMITATION OR EXCLUSION OF LIABILITY FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

IN NO EVENT SHALL METROWERKS' TOTAL LIABILITY TO YOU FOR ALL DAMAGES, LOSSES, AND CAUSES OF ACTION (WHETHER IN CONTRACT, TORT (INCLUDING NEGLIGENCE) OR OTHERWISE) EXCEED THE AMOUNT PAID BY YOU FOR THE SPECIFIC LICENSE OF THE SOFTWARE AND RELATED DOCUMENTATION TO WHICH THE LIABILITY IS RELATED.

10. Controlling Law and Severability. THIS LICENSE SHALL BE GOVERNED BY AND CONSTRUED IN ACCORDANCE WITH THE LAWS OF THE UNITED STATES AND THE STATE OF TEXAS, EXCEPT FOR ITS CONFLICT OF LAWS PRINCIPLES. The United Nations Convention on Contracts for the International Sale of Goods is hereby excluded in its entirety and does not apply to this agreement. If for any reason a court of competent jurisdiction finds any provision of this License, or portion thereof, to be unenforceable, that provision of the License shall be enforced to the maximum extent permissible so as to effect the intent of the parties, and the remainder of this License shall continue in full force and effect.
11. Complete Agreement. This License constitutes the entire agreement between the parties with respect to the use of the Software and related documentation and supersedes all prior or contemporaneous understandings or agreements, written or oral, regarding such subject matter. No amendment to or modification of this License will be binding unless in writing and signed by an authorized officer of Metrowerks.

Should you have any questions or comments concerning this License, please do not hesitate to contact Metrowerks Corporation at 9801 Metric Boulevard, Austin, TX,

78758, USA. attn: Warranty Information or by email:
info@metrowerks.com

Embedix is a trademark of Metrowerks Corporation.

Metrowerks United States
9801 Metric Blvd.
Austin, Texas 78758 USA
Phone: +1.512.997.4700
Fax: +1.512.997.4901
E-mail: info@metrowerks.com

Metrowerks Europe
Riehenring 175, CH-4058
Basel, Switzerland
Phone: +41.61.690.7500
Fax: +41.61.690.7501
E-mail: info_europe@metrowerks.com

Metrowerks Japan
Shibuya Mitsuba Bldg. 5F
Udagawa-cho 20-11
Shibuya-ku Tokyo 150-0042 Japan
Phone: +81-3-3780-6091
Fax: +81-3-3780-6092
E-mail: asia-sales@metrowerks.com

© Copyright. 2003. Metrowerks Corp. All rights reserved. Metrowerks, the Metorwerks logo, CodeWarrior and OpenPDA are trademarks or registered trademarks of Metrowerks Corp. in the U.S. and/or other countries. Metrowerks is a Motorola company. All other tradenames and trademarks are the property of their respective owners and are hereby recognized. Printed in U.S.A.



YAMAHA CORPORATION

P.O.Box 3, Hamamatsu, 430-8651 Japan

Copyright © 2004 by Yamaha Corporation
This document is printed on chlorine free (ECF) paper.